

Smoby 7600810802

Smoby Life Beach House Playhouse with Platform and Slide (Model 7600810802) Instruction Manual

1. PRODUCT OVERVIEW

The Smoby Life Beach House is an outdoor playhouse designed for children aged 24 months and older. It features a raised platform of 70 cm, accessible via a ladder, and includes a slide for descent. The playhouse is equipped with a porch, two windows with shutters, a porthole, and a low door. Constructed from durable plastic, it incorporates at least 64% recycled material and is treated with anti-UV protection to ensure color longevity and structural integrity in outdoor conditions.



Image 1.1: The Smoby Life Beach House Playhouse, showcasing its elevated design with a platform, ladder, and slide, along with windows and a door.

2. SAFETY GUIDELINES

This product is intended for outdoor use under adult supervision. Ensure the playhouse is assembled on a flat, stable surface, away from hazards such as fences, trees, or other structures. Regular inspection for wear and tear is recommended to maintain safety. According to product information, no specific safety warnings beyond general play equipment guidelines apply.

- Always supervise children during play.
- Ensure the playhouse is securely anchored if placed on soft ground (e.g., grass).
- Check all connections and components periodically for tightness and damage.
- Keep the play area clear of obstacles.

3. PACKAGE CONTENTS

Verify that all components listed below are present in the package before beginning assembly.

- 1 x Playhouse structure (panels for walls, roof)
- 1 x Platform
- 1 x Ladder
- 1 x Slide
- 1 x Door
- 2 x Windows with shutters
- 1 x Porthole
- Assembly hardware (screws, fasteners)



Image 3.1: The product packaging box, illustrating the playhouse and its key features, including dimensions and recycled material information.

4. ASSEMBLY INSTRUCTIONS

4.1. Preparation

- **Required Tools:** A screwdriver (manual or electric with appropriate bits), possibly a rubber mallet.
- **Assembly Area:** Choose a flat, clear, and spacious area for assembly. It is recommended to assemble the playhouse near its final location.
- **Assistance:** Assembly is easier with two adults.

4.2. Step-by-Step Assembly

1. **Unpack Components:** Carefully remove all parts from the packaging and verify against the package

contents list.

2. **Assemble Base Structure:** Connect the main floor panels and the support legs for the elevated platform. Ensure all connections are secure.
3. **Attach Playhouse Walls:** Mount the wall panels to the base structure, ensuring they align correctly. Secure them using the provided fasteners.
4. **Install Door and Windows:** Insert the door into its frame and attach the windows and shutters. Note that some windows may require lubrication for smoother sliding, as per user feedback.
5. **Assemble Roof:** Attach the roof panels to the top of the playhouse walls.
6. **Install Ladder and Platform Railing:** Secure the ladder to the platform and attach any safety railings.
7. **Attach Slide:** Connect the slide to the platform, ensuring it is firmly attached and stable.
8. **Final Check:** Inspect all connections to ensure they are tight and secure. Confirm the playhouse is stable and level.

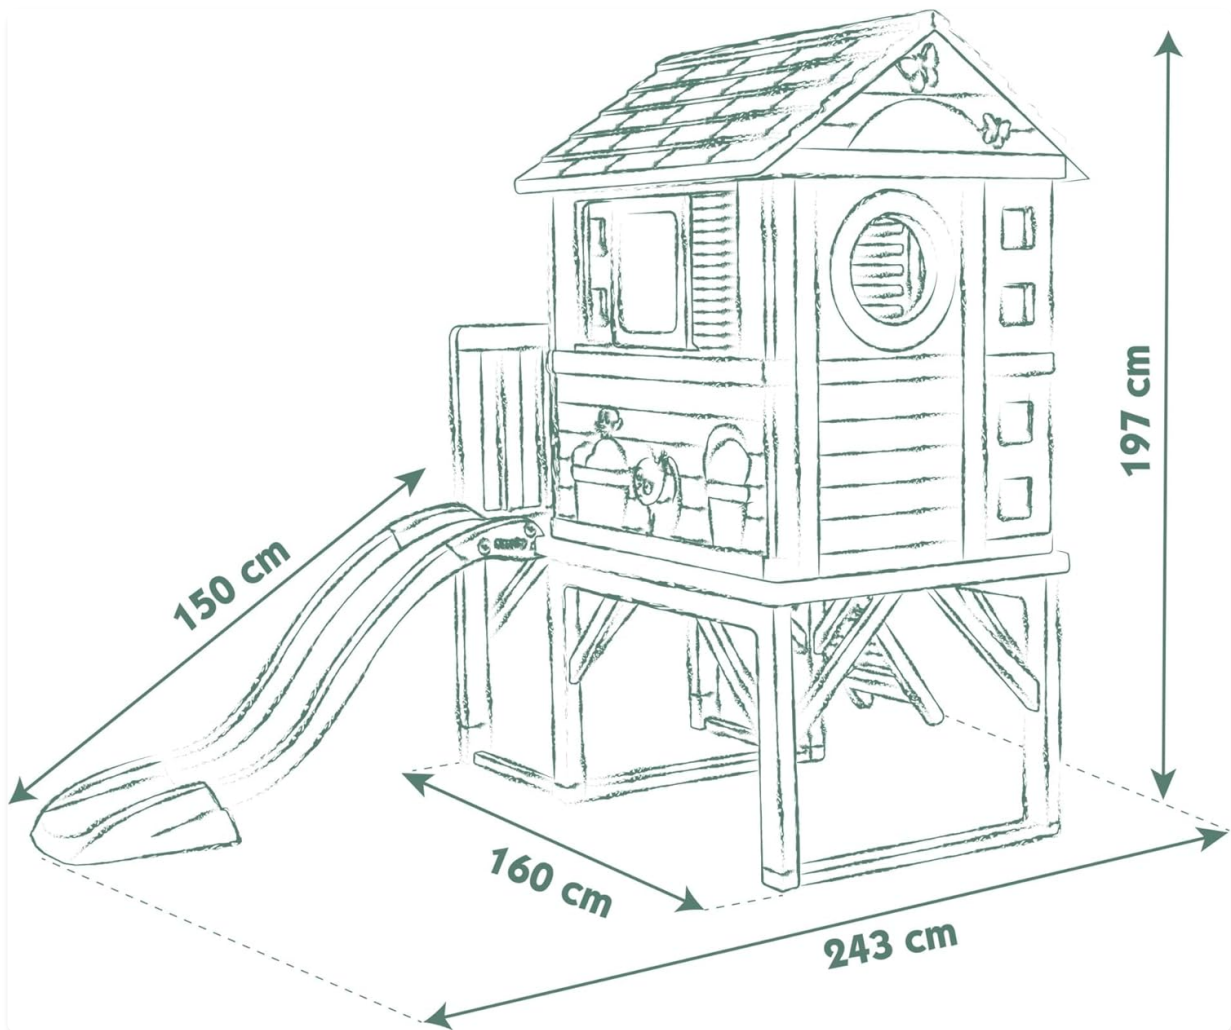 


Image 4.1: A child ascending the ladder to the playhouse platform, demonstrating the ladder's integration into the structure.



Image 4.2: A technical diagram illustrating the overall dimensions of the Smoby Life Beach House Playhouse, including height, width, and slide length.

5. USING YOUR PLAYHOUSE

The Smoby Life Beach House offers multiple play opportunities for children. They can climb the ladder to reach the elevated platform, enjoy sliding down, or engage in imaginative play inside the house. The windows and door allow for interaction and observation of the surroundings.



Image 5.1: A child peeking out from the playhouse door, highlighting the interactive elements of the structure.



Image 5.2: A child enjoying the slide, demonstrating a primary play feature of the beach house.



Image 5.3: Two children engaged in play, one on the platform with binoculars and another inside the house, illustrating collaborative play.



Image 5.4: A child reading comfortably under the elevated platform, showcasing the shaded space available for quiet activities.

6. CARE AND MAINTENANCE

- **Cleaning:** Clean the playhouse regularly with mild soap and water. Avoid abrasive cleaners or harsh chemicals that could damage the plastic or fade colors.
- **UV Protection:** The material is treated with anti-UV protection to resist fading. However, prolonged exposure to extreme sunlight may still cause some color degradation over many years.
- **Seasonal Storage:** If possible, store the playhouse indoors during extreme weather conditions (heavy snow, strong winds) to extend its lifespan.
- **Inspection:** Periodically check all parts for cracks, loose fasteners, or other damage. Replace any damaged parts immediately to ensure safety.

7. COMMON ISSUES

- **Water Accumulation on Floor Panels:** Some users have reported water collecting in the grooves of the floor panels after rain. To mitigate this, consider drilling small drainage holes in the lowest points of the grooves if water accumulation becomes an issue.
- **Stiff Sliding Windows:** If the sliding windows are difficult to operate, apply a small amount of silicone-based lubricant to the tracks. Ensure the lubricant is child-safe. Gently sand any rough edges on the plastic tracks if necessary.
- **Loose Connections:** If any parts feel wobbly after assembly or prolonged use, re-tighten all screws and fasteners. Avoid over-tightening, which can strip plastic threads.

8. PRODUCT SPECIFICATIONS

Feature	Detail
Model Number	7600810802
Brand	Smoby
Dimensions (L x W x H)	243 cm x 160 cm x 197 cm (assembled)
Platform Height	70 cm
Weight	35 kg
Recommended Age	24 months and up
Material	Plastic (at least 64% recycled material)
UV Protection	Yes
Assembly Required	Yes
Number of Windows	3 (2 with shutters, 1 porthole)
Educational Value	Fosters imagination, social skills, and motor skills through role-play and creative play.


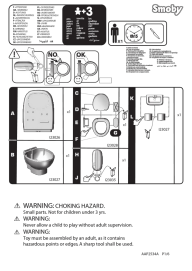 
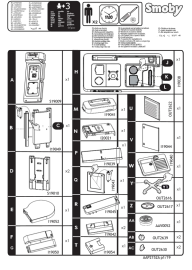 
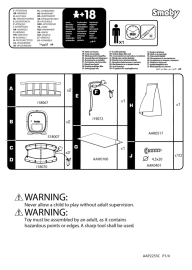 

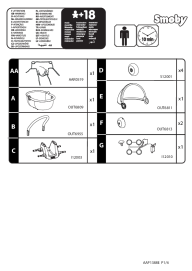 


Image 8.1: The Smoby Life branding, highlighting the use of at least 64% recycled material and its 'Made in France' origin.

9. CUSTOMER SUPPORT

For further assistance, spare parts, or warranty inquiries, please contact Smoby customer service through their official website or the retailer where the product was purchased. Please have your model number (7600810802) and proof of purchase available.

Online Resources: Visit the official Smoby website for additional product information and support.

 <p>Ref 7600810907</p> <p>1 SET 8</p> <p>8 pieces 1,20m²</p>	<p>Smoby Playhouse Slabs: Configurations and Requirements</p> <p>A guide to Smoby's modular slab system for playhouses, detailing configurations and the number of slab sets required for various models like Jura Lodge, Chef House, Friends House, and Tipi. Includes product references and coverage information.</p>
 <p>Smoby</p> <p>4-3</p> <p>WARNING: CHOKING HAZARD. Small parts. Not for children under 3 yrs.</p> <p>WARNING: Never allow a child to play without adult supervision.</p> <p>WARNING: This toy is intended for use by an adult, as it contains hazardous points or edges. It should not be used as a seat.</p>	<p>Smoby Baby Nurse Toilet Assembly Instructions and Safety Guide</p> <p>Comprehensive assembly instructions and safety warnings for the Smoby Baby Nurse Toilet toy. Learn how to assemble the play toilet with clear steps and component identification.</p>
 <p>Smoby</p> <p>4-3</p>	<p>Smoby 7600312303 Chef's Kitchen 2-in-1 with Dining Area User Manual</p> <p>Comprehensive user manual for the Smoby 7600312303 Chef's Kitchen 2-in-1 with Dining Area. This guide provides detailed assembly instructions, safety warnings, and usage information for this children's play kitchen.</p>
 <p>Smoby</p> <p>4-18</p> <p>WARNING: Never allow a child to play without adult supervision.</p> <p>WARNING: This toy is intended for use by an adult, as it contains hazardous points or edges. It should not be used as a seat.</p>	<p>Smoby Bercelonnette Assembly Instructions and Safety Guide</p> <p>Detailed assembly instructions and safety information for the Smoby Bercelonnette toy. Includes part identification, step-by-step assembly guides, and important warnings for safe use.</p>
 <p>Smoby</p> <p>03291X0/15</p>	<p>Smoby Pushchair + Pram Assembly Instructions</p> <p>Step-by-step guide for assembling the Smoby Pushchair + Pram (Model 03291X0/15). Includes important safety information, part identification, and assembly procedures.</p>
 <p>Smoby</p> <p>4-18</p>	<p>Smoby Landau Calin Baby Doll Stroller Assembly Instructions</p> <p>This document provides comprehensive assembly instructions for the Smoby Landau Calin baby doll stroller. It details the parts included, offers step-by-step guidance for assembly, and highlights crucial safety warnings for safe usage.</p>