

Escape SPBT8366

Escape Wireless Speaker User Manual

MODEL: SPBT8366

Introduction

This manual provides detailed instructions for the safe and efficient operation of your Escape Wireless Speaker. Please read this manual thoroughly before using the product and retain it for future reference.

The Escape Wireless Speaker is a portable audio device featuring Bluetooth connectivity, FM radio, MicroSD card playback, AUX input, and an integrated mood light with multiple colors and brightness levels. It is designed for versatile use in various environments.

Safety Information

- Do not expose the speaker to water or excessive moisture. This product is not waterproof.
- Avoid extreme temperatures, direct sunlight, or high humidity.
- Do not disassemble, repair, or modify the device. This may void the warranty and pose safety risks.
- Keep the speaker away from heat sources such as radiators, stoves, or other heat-producing appliances.
- Use only the provided USB cable for charging.
- Do not operate the speaker at excessively high volumes for prolonged periods to prevent hearing damage.
- Clean the speaker with a soft, dry cloth. Do not use abrasive cleaners or solvents.

Package Contents

Please check the package for the following items:

- Escape Wireless Speaker (Model: SPBT8366)
- USB Charging Cable
- User Manual

Product Overview



Image Description: A white cylindrical Escape Wireless Speaker with a light blue glow emanating from its body. The top features a grey speaker grille. At the base, there are control buttons: 'MODE', 'Previous/Volume Down', 'Play/Pause', 'Next/Volume Up', and a power indicator light. The speaker's base is light grey.

Controls and Ports:

- **MODE Button:** Press to switch between Bluetooth, FM Radio, AUX, and MicroSD modes. Long press to turn the speaker ON/OFF.
- **Previous / Volume Down Button (◀◀):** Short press for previous track (in Bluetooth/MicroSD mode) or previous station (in FM mode). Long press to decrease volume.
- **Play / Pause Button (▶ ▶):** Short press to play or pause audio. In FM mode, long press to auto-scan and save stations.
- **Next / Volume Up Button (▶▶):** Short press for next track (in Bluetooth/MicroSD mode) or next station (in FM mode). Long press to increase volume.
- **Light Control (Top Surface):** Tap the top surface to change mood light color or brightness.
- **MicroSD Card Slot:** Insert a MicroSD card for audio playback.
- **AUX Port:** Connect external audio devices via a 3.5mm audio cable.
- **Micro USB Charging Port:** Connect the USB charging cable to power the device.

Setup

1. **Initial Charging:** Before first use, fully charge the speaker. Connect the supplied USB cable to the Micro USB charging port on the speaker and the other end to a USB power adapter (not included) or a computer USB port. The charging indicator light will illuminate. Once fully charged, the light may change color or turn off.
2. **Powering On/Off:** Long press the **MODE** button to turn the speaker ON or OFF. A sound prompt will indicate the power status.

Operating Instructions

1. Bluetooth Pairing

1. Ensure the speaker is powered ON and in Bluetooth mode. If not, short press the **MODE** button until you hear the Bluetooth mode prompt.
2. On your mobile device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
3. Select "Escape Speaker" from the list of found devices.
4. Once paired, the speaker will emit a confirmation sound. You can now play audio from your device through the speaker.
5. **True Wireless Stereo (TWS) Pairing (Optional):** If you have two Escape Wireless Speakers, you can pair them for stereo sound. Power on both speakers. On one speaker, long press the **Play/Pause** button until you hear a pairing sound. The two speakers will automatically connect. Then, pair your device to one of the speakers as described above.

2. FM Radio Mode

1. Short press the **MODE** button to switch to FM Radio mode.
2. Long press the **Play/Pause** button to initiate an automatic station scan. The speaker will scan and save available FM stations.
3. Short press the **Previous/Volume Down** or **Next/Volume Up** buttons to navigate between saved stations.

4. Long press the **Previous/Volume Down** or **Next/Volume Up** buttons to adjust the volume.

3. Mood Light Control



Image Description: The Escape Wireless Speaker with a light blue glow, accompanied by graphical icons illustrating its features: TWS Wireless 5.2, FM Radio, Touch Light, and 7 Colors. The speaker's control buttons are visible at the base.

- Tap the top surface of the speaker to cycle through the 7 available RGB colors.
- Continue tapping to adjust the brightness levels (3 levels) for each color.
- Tap until the light turns off to disable the mood light.

4. AUX Mode

1. Connect one end of a 3.5mm audio cable (not included) to the AUX port on the speaker and the other end to the audio output of your external device (e.g., MP3 player, computer).
2. Short press the **MODE** button to switch to AUX mode.
3. Control playback and volume directly from your connected external device.

5. MicroSD Card Playback

1. Insert a MicroSD card (up to 32GB, not included) with MP3 audio files into the MicroSD card slot on

the speaker.

2. The speaker will automatically switch to MicroSD mode and begin playing audio. If not, short press the **MODE** button to select MicroSD mode.
3. Use the **Previous/Volume Down** and **Next/Volume Up** buttons for track navigation.
4. Long press these buttons to adjust volume.

Maintenance

- **Cleaning:** Wipe the speaker's surface with a soft, dry, lint-free cloth. Do not use liquid cleaners, aerosols, or solvents.
- **Storage:** When not in use for extended periods, store the speaker in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Recharge the speaker regularly, even if not in active use.

Troubleshooting

Problem	Solution
Speaker does not turn on.	Ensure the battery is charged. Connect the USB charging cable and try again.
No sound from the speaker.	Check the volume level on both the speaker and the connected device. Ensure the correct mode (Bluetooth, AUX, MicroSD) is selected.
Cannot pair with Bluetooth device.	Ensure the speaker is in Bluetooth pairing mode. Turn off and on Bluetooth on your device. Move the speaker closer to your device (within 10 meters). Clear previous Bluetooth connections on your device.
FM radio reception is poor.	Move the speaker to a location with better signal. The USB charging cable can sometimes act as an antenna; try connecting it (without power) to improve reception.
Mood light is not working.	Ensure the speaker is powered on. Tap the top surface to activate and cycle through light modes.

Specifications

Feature	Detail
Model Name	SPBT8366
Speaker Type	Portable Speaker
Connectivity Technology	Bluetooth, AUX, MicroSD

Feature	Detail
Bluetooth Version	5.2
Wireless Range	Up to 10 meters (33 feet)
Audio Output Power	3W
Battery Capacity	400 mAh
Charging Port	Micro USB
Mood Light	7 RGB Colors, 3 Brightness Levels
Dimensions	10D x 10W x 12H Centimetres
Waterproof	No

Warranty Information

This product is covered by a standard manufacturer's warranty against defects in materials and workmanship. The warranty period typically begins from the date of purchase. Please retain your proof of purchase for warranty claims. For specific warranty terms and conditions, refer to the documentation provided with your purchase or contact customer support.

Customer Support

For technical assistance, troubleshooting, or general inquiries regarding your Escape Wireless Speaker, please contact the retailer or the manufacturer's customer support. Contact information may be available on the product packaging or the brand's official website.