

[Manuals.plus](#) /

› [BELLA](#) /

› BELLA 12-Cup Programmable Coffee Maker Instruction Manual

BELLA 35194

BELLA 12-Cup Programmable Coffee Maker

Model: 35194

INTRODUCTION

Thank you for choosing the BELLA 12-Cup Programmable Coffee Maker. This appliance is designed to provide a convenient and efficient way to brew your favorite coffee. Please read this manual thoroughly before initial use to ensure proper operation, maintenance, and safety.



Image: Front view of the BELLA 12-Cup Programmable Coffee Maker in Oatmilk color.

IMPORTANT SAFETY INFORMATION

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions before using the coffee maker.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or coffee maker in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- To disconnect, turn any control to 'off', then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- The carafe is designed for use with this appliance. It must never be used on a range top.
- Do not place a hot carafe on a cold or wet surface.
- Do not use a cracked carafe or a carafe having a loose or weakened handle.
- Do not clean carafe with cleansers, steel wool pads, or other abrasive material.

COMPONENTS

Familiarize yourself with the various parts of your BELLA 12-Cup Programmable Coffee Maker:

- Easy-to-read LCD display
- Anti-drip spout
- Water level window with measurement marks
- Carafe lid with mixing tube for even coffee distribution
- Durable 12-cup glass carafe
- Reusable filter basket
- Measuring scoop
- Non-stick warming plate



Hot coffee, anytime

Nonstick, stain-resistant warming plate maintains temperature

Image: Detailed view highlighting the LCD display, anti-drip spout, water level window, carafe lid with mixing tube, and durable glass carafe.

SETUP

Before first use, it is recommended to clean all removable parts and run a full brewing cycle with only water to prime the system.

1. Wash the carafe, carafe lid, and reusable filter basket in warm, soapy water. Rinse thoroughly and dry.
2. Place the coffee maker on a flat, stable surface.
3. Fill the water reservoir with fresh, cold water up to the 12-cup mark.
4. Place the empty reusable filter basket into its holder.
5. Close the top lid securely.
6. Place the empty carafe on the warming plate.
7. Plug the coffee maker into a standard electrical outlet.
8. Press the 'Brew/Off' button to start a brewing cycle with water only. This will clean the internal components.
9. Once the cycle is complete, discard the water and unplug the appliance. Allow it to cool before proceeding with

normal use.

OPERATING INSTRUCTIONS

Follow these steps to brew a fresh pot of coffee:

1. Open the top lid and fill the water reservoir with fresh, cold water to your desired level, using the water level window as a guide.
2. Place the reusable filter basket into its holder. Add ground coffee to the filter basket using the included measuring scoop. For best results, use one level scoop per cup of water.
3. Close the top lid securely.
4. Place the empty carafe with its lid on the warming plate.
5. **To Brew Immediately:** Press the 'Brew/Off' button. The indicator light will illuminate, and brewing will begin.
6. **To Program a Delayed Brew (up to 24 hours in advance):**
 - Press the 'Prog' button. The LCD display will show 'PROG'.
 - Use the 'Hour' and 'Minute' buttons to set your desired brew time.
 - Press the 'Prog' button again to confirm the setting. The 'PROG' indicator light will remain on.
 - At the set time, the coffee maker will automatically begin brewing.
7. **Adjustable Brew Strength:** This coffee maker offers a 'Bold Brew' option for stronger coffee. Refer to the specific instructions in your full manual for activating this feature.
8. **Pause and Serve Feature:** You can temporarily remove the carafe during the brewing cycle to pour a cup of coffee. The flow of coffee will automatically stop. Return the carafe to the warming plate within 20 seconds to prevent overflow.
9. **Auto Shut-Off:** For safety and energy conservation, the coffee maker will automatically shut off 2 hours after the brewing cycle is complete.



Enjoy peace of mind
Auto Shut-Off turns off after 2 hours

Image: A hand interacting with the control panel to select the preferred coffee strength.



Our coffee maker

- ✓ One-touch operation
- ✓ Cord tie feature
- ✓ Compact & modern design
- ✓ Dishwasher-safe parts

Other coffee makers

- ✗ Complicated settings
- ✗ Tangled mess
- ✗ Bulky & outdated
- ✗ Difficult to clean

Image: A hand pointing to the auto shut-off feature on the coffee maker's control panel.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your coffee maker.

- **Daily Cleaning:** After each use, discard used coffee grounds and rinse the reusable filter basket and carafe. All removable parts are dishwasher-safe for easy cleaning.
- **Warming Plate:** The non-stick warming plate is designed to resist stains. Wipe it clean with a damp cloth after each use once it has cooled.
- **Descaling:** The coffee maker features a 'Cleaning Cycle' alert that will notify you when it's time to descale. This is crucial for removing mineral deposits that can affect performance and coffee taste. Follow the descaling instructions provided in your full product manual, typically involving a vinegar and water solution.



Image: A split image illustrating the coffee maker's powerful 900-watt brewing system for fast brewing and its cleaning cycle alert for faster cleaning.

TROUBLESHOOTING

If you encounter any issues with your coffee maker, refer to the common problems and solutions below:

Problem	Possible Cause	Solution
Coffee does not brew.	Coffee maker not plugged in; power outage; 'Brew/Off' button not pressed; programmed brew time not set correctly.	Ensure unit is plugged in; check power supply; press 'Brew/Off' button; verify programmed time.
Coffee is too weak.	Not enough coffee grounds; 'Bold Brew' not selected.	Add more coffee grounds; activate 'Bold Brew' option.
Coffee overflows from filter basket.	Too many coffee grounds; filter basket not seated correctly; carafe not on warming plate.	Reduce coffee grounds; ensure filter basket is properly seated; place carafe on warming plate.

Problem	Possible Cause	Solution
Coffee maker leaks.	Water reservoir overfilled; carafe not positioned correctly.	Do not exceed max fill line; ensure carafe is centered on warming plate.

SPECIFICATIONS

Feature	Detail
Brand	BELLA
Model Name	Coffee Maker (Model 35194)
Color	Oatmilk
Product Dimensions (D x W x H)	6.65"D x 10.35"W x 12.24"H
Item Weight	2.69 pounds
Special Features	Adjustable Brew Strength, Auto Shut-Off, Cup Warmer, Permanent Filter
Coffee Maker Type	Drip Coffee Machine
Filter Type	Reusable
Coffee Input Type	Ground
Included Components	Carafe, Filter, Measuring Scoop
Operation Mode	Fully Automatic
Voltage	129 Volts (DC)
Manufacture Year	2024
UPC	829486351945



Image: The BELLA 12-Cup Programmable Coffee Maker with its key dimensions (height, width, depth) clearly indicated.

WARRANTY AND SUPPORT

Your BELLA 12-Cup Programmable Coffee Maker comes with a **2-year warranty** from the date of purchase, covering defects in material and workmanship under normal household use.

For warranty claims, technical support, or any questions regarding your product, please refer to the contact information provided on the BELLA official website or your purchase receipt. Keep your proof of purchase for warranty validation.

© 2024 BELLA. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DPNJVG1Z>

More documents and user manuals: <https://manuals.plus/>