

[Manuals.plus](#) /

› [BELLA](#) /

› BELLA 12-Cup Programmable Coffee Maker Instruction Manual

BELLA 35206

BELLA 12-Cup Programmable Coffee Maker

Model: 35206 | Color: Seaglass

INTRODUCTION

Thank you for choosing the BELLA 12-Cup Programmable Coffee Maker. This appliance is designed to simplify your morning routine, providing fresh, hot coffee with ease. Its sleek design and intuitive features make it a perfect addition to any kitchen.

Key Features:

- Programmable up to 24 hours in advance
- Carefree auto shutoff after 2 hours
- Easy to read display
- Pause and serve feature allows quick pours while brewing
- Includes reusable filter basket and measuring scoop
- 900-watt brewing system for fast brewing
- Non-stick warming plate to maintain coffee temperature

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and injury to persons, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.

- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to “off”, then remove plug from wall outlet.
- Do not use appliance for other than intended use.

PRODUCT COMPONENTS

Familiarize yourself with the parts of your BELLA 12-Cup Programmable Coffee Maker:

- Easy-to-read LCD display
- Anti-drip spout
- Water level window with measurement marks
- Carafe lid with mixing tube
- Durable 12-cup glass carafe
- Reusable filter basket
- Non-stick warming plate



Hot coffee, anytime

Nonstick, stain-resistant warming plate maintains temperature

Figure 1: Key components of the BELLA Coffee Maker.

SETUP

1. **Unpacking:** Carefully remove all packaging materials and inspect the coffee maker for any damage.
2. **Initial Cleaning:** Before first use, wash the carafe, carafe lid, and reusable filter basket in warm, soapy water. Rinse thoroughly and dry. Wipe the exterior of the coffee maker with a damp cloth.
3. **First Brew Cycle (Cleaning):** Fill the water reservoir to the 12-cup mark with clean water. Place the empty reusable filter basket into the filter holder. Close the top lid. Place the empty carafe on the warming plate. Plug in the coffee maker and run a full brew cycle without coffee grounds to clean the internal components. Discard the water.
4. **Placement:** Place the coffee maker on a flat, stable surface near an electrical outlet. Ensure there is enough clearance above for the lid to open fully.



Figure 2: Proper placement of the coffee maker on a counter.

OPERATING INSTRUCTIONS

1. **Fill Water Reservoir:** Open the top lid and fill the water reservoir with fresh, cold water using the carafe. Use the water level window on the side to ensure you add the desired amount of water, up to the 12-cup maximum.
2. **Add Coffee Grounds:** Place the reusable filter basket into the filter holder. Add the desired amount of ground coffee to the filter. For best results, use 1 tablespoon of ground coffee per cup. Close the top lid securely.
3. **Place Carafe:** Ensure the glass carafe is empty and properly seated on the warming plate.
4. **Set Time (Optional):** To set the current time, press the 'HOUR' and 'MINUTE' buttons.
5. **Program Brew Time (Optional):** To program a delayed brew, press the 'PROG' button. The display will flash. Use the 'HOUR' and 'MINUTE' buttons to set your desired brew time. Press 'PROG' again to confirm. The 'PROG'

indicator light will illuminate.

6. **Start Brewing:** Press the 'BREW/OFF' button to start the brewing cycle immediately. The 'BREW/OFF' indicator light will illuminate.
7. **Pause and Serve:** During the brewing cycle, you can temporarily remove the carafe to pour a cup of coffee. The flow of coffee will automatically pause. Return the carafe to the warming plate within 20 seconds to prevent overflow.
8. **Adjust Brew Strength:** Use the 'BOLD' button to select between regular or bold coffee strength, if available on your model.
9. **Auto Shut-Off:** The coffee maker will automatically shut off after 2 hours of inactivity for safety and energy saving.



**Select your preferred strength
Bold Brew activation for strong,
regular or bold coffee**

Figure 3: Coffee brewing process.



Enjoy peace of mind
Auto Shut-Off turns off after 2 hours

Figure 4: Auto shut-off feature for peace of mind.



Our coffee maker

- ✓ One-touch operation
- ✓ Cord tie feature
- ✓ Compact & modern design
- ✓ Dishwasher-safe parts

Other coffee makers

- ✗ Complicated settings
- ✗ Tangled mess
- ✗ Bulky & outdated
- ✗ Difficult to clean

Figure 5: Select your preferred coffee strength.

Your browser does not support the video tag.

Video 1: Official BELLA 12-Cup Coffee Maker overview, demonstrating setup and basic operation.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your coffee maker.

- **Daily Cleaning:** After each use, discard used coffee grounds. Wash the carafe, carafe lid, and reusable filter basket in warm, soapy water or place them on the top rack of your dishwasher. The non-stick warming plate can be wiped clean with a damp cloth once cooled.
- **Descaling:** Over time, mineral deposits can build up in your coffee maker, affecting performance. Your coffee maker features a cleaning cycle alert to indicate when descaling is needed. To descale, fill the water reservoir with a

mixture of white vinegar and water (1:2 ratio). Place the empty carafe on the warming plate. Run a full brew cycle. After the cycle, let the coffee maker cool for 15 minutes, then run two full cycles with clean water to rinse.

- **Exterior Cleaning:** Wipe the exterior of the coffee maker with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.



Figure 6: The BELLA coffee maker is designed for easy cleaning.

TROUBLESHOOTING

If you encounter any issues with your BELLA 12-Cup Programmable Coffee Maker, please refer to the common problems and solutions below:

- **Coffee not brewing:** Ensure the coffee maker is plugged in, the water reservoir is filled, and the carafe is correctly placed on the warming plate. Check if the brew cycle has been initiated.

- **Coffee tastes weak or too strong:** Adjust the amount of coffee grounds used. Ensure the 'BOLD' setting (if applicable) is selected according to your preference.
- **Brewing is slow or incomplete:** This may indicate mineral buildup. Perform a descaling cycle as described in the Maintenance section.
- **Water leaking:** Ensure the carafe is properly seated and the lid is closed securely. Check for any cracks in the carafe.
- **Display not working:** Unplug the coffee maker for a few minutes, then plug it back in to reset the system.

If the problem persists after trying these solutions, please contact customer support.

SPECIFICATIONS

Feature	Detail
Brand	BELLA
Model Name	Coffee Maker
Item Model Number	35206
Color	Seaglass
Product Dimensions	6.65"D x 10.35"W x 12.24"H
Item Weight	2.69 pounds
Coffee Maker Type	Drip Coffee Machine
Capacity	12 Cups
Special Features	Auto Shut-Off, Cup Warmer, Adjustable Brew Strength, Permanent Filter
Filter Type	Reusable
UPC	829486352065
Manufacturer	bella
Country of Origin	China

WARRANTY AND SUPPORT

Your BELLA 12-Cup Programmable Coffee Maker comes with a **2-year warranty**, ensuring peace of mind and commitment to your satisfaction. For any questions, troubleshooting assistance, or warranty claims, please contact BELLA customer support.

For further assistance, please visit the official BELLA website or refer to the contact information provided in your product packaging.

Engineered to perform. Built to last.

We stand by our products and are committed to your satisfaction.
That's why all our products come with a 2-year warranty.

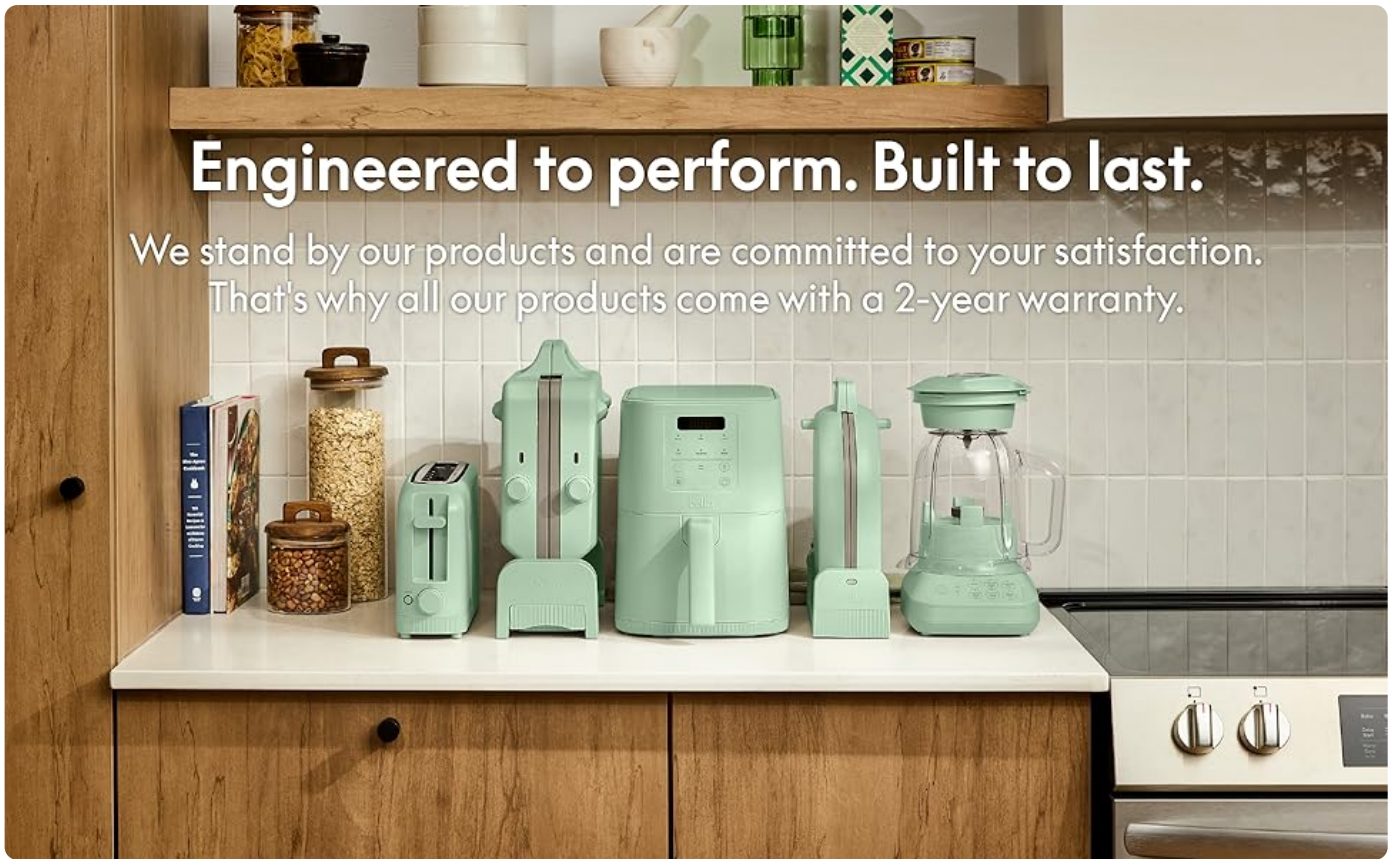


Figure 7: BELLA's commitment to quality and durability.

© 2025 BELLA. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DPNKHTRK>

More documents and user manuals: <https://manuals.plus/>