

[manuals.plus](#) /› [Teko](#) /› **TEKO Hover Scrubber Omni Electric Mop Instruction Manual****Teko HI2105UD**

# TEKO Hover Scrubber Omni Electric Mop Instruction Manual

Model: HI2105UD

## INTRODUCTION

The TEKO Hover Scrubber Omni Electric Mop is designed to simplify floor cleaning across various surfaces. Featuring dual counter-rotating heads and a cordless design, it efficiently scrubs, mops, and polishes. This manual provides essential information for the safe and effective use of your electric mop.

## PRODUCT OVERVIEW

TEKO

# Cordless Hover Scrubber

EFFORLESS CLEANING



360° Rotatable Head



Under Bed



Under Sofa



Corners



Under Furniture

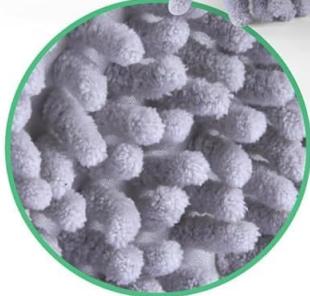
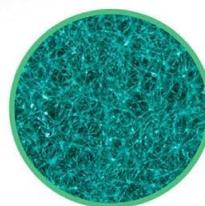
**Figure 1:** The TEKO Hover Scrubber Omni features a 360-degree rotatable head for enhanced maneuverability, allowing easy access to tight spaces and under furniture.

**TEKO**

# Dual Counter-Rotating Heads

**BEST FOR HARDWOOD FLOORS****Polish 10x Faster**

With dual counter-rotating heads and microfiber pads to scrub, mop, and polish your floors

**Large Plush Cloth****Fine Plush Cloth****Abrasive Sponge****Polishing Cloth**

**Figure 2:** Equipped with dual counter-rotating heads, the mop effectively scrubs, mops, and polishes. It includes various pad types: large plush cloth, fine plush cloth, abrasive sponge, and polishing cloth for different cleaning needs.

## SETUP

### 1. Assembly

1. Connect the handle sections by aligning the pins and pushing them together until they click securely into place.
2. Attach the assembled handle to the main mop head unit. Ensure the connection is firm.
3. Select the appropriate cleaning pads for your task. The pads attach to the bottom of the mop head via Velcro. Press firmly to secure.

### 2. Charging the Battery

- The TEKO Hover Scrubber Omni features a rechargeable battery. Before first use, fully charge the device.
- Connect the provided AC adapter to the charging port on the mop unit.
- Plug the adapter into a standard electrical outlet. The charging indicator light will illuminate.
- A full charge typically takes approximately 3 hours and provides up to 40 minutes of continuous runtime.

### 3. Filling the Water Tank

- Locate the water tank cap on the mop head.
- Open the cap and carefully fill the tank with water or a suitable floor cleaning solution. Do not overfill.
- Securely close the water tank cap before operation.

## OPERATING INSTRUCTIONS

---

### 1. Powering On/Off

- To power on the mop, press the power button located on the handle. The indicator light on the mop head will turn green.
- To power off, press the power button again.

### 2. Using the Spray Function

- Press the spray button on the handle to dispense water or cleaning solution onto the floor.
- For stubborn stains, spray the area and allow the solution to penetrate for a few moments before mopping.

### 3. Maneuvering and Cleaning

- The dual counter-rotating heads provide a self-propelled motion, making the mop easy to glide across surfaces with minimal effort.
- Utilize the 360-degree rotatable head to easily maneuver around furniture, into corners, and along baseboards.
- The adjustable handle allows you to customize the mop's length for comfortable use and to reach high areas like windows or shower walls.

### 4. Floor Compatibility

- The Hover Scrubber Omni is suitable for various hard floor types, including hardwood, tile, laminate, linoleum, marble, and polished concrete.
- Always test a small, inconspicuous area first when using new cleaning solutions or on delicate surfaces.

## MAINTENANCE

---

### 1. Cleaning Pads

- After each use, remove the cleaning pads from the mop head.
- The microfiber pads are reusable and machine washable. Wash them with similar colors and air dry for best results.
- For wet messes, use the included Chenille pads for increased absorbency.
- For tough grime on tile or other hard surfaces, utilize the Scouring Power Wedge.

### 2. Battery Care

- To prolong battery life, fully charge the mop after each use.
- Store the mop in a cool, dry place when not in use.

## TROUBLESHOOTING

---

- **Mop not turning on:** Ensure the battery is fully charged. Check that all handle sections are securely connected.
- **No spray:** Verify the water tank is filled and the cap is properly sealed. Check for any blockages in the spray

nozzle.

- **Reduced cleaning performance:** Replace or clean the microfiber pads. Ensure the mop heads are free from debris.

## SPECIFICATIONS

---

Feature	Detail
Brand	Teko
Model Number	HI2105UD
Power Source	Rechargeable Battery
Runtime	Up to 40 minutes (continuous)
Recharge Time	Approximately 3 hours
Mop Head Rotation Speed	140 RPM
Handle Adjustment	Adjustable length, up to 47 inches total height
Included Pads	Microfiber pads (2 sets), Chenille pads, Scouring Power Wedge
Special Features	Dual counter-rotating heads, 360° rotatable head, Baseboard Cleaner Attachment

## WARRANTY & SUPPORT

---

TEKO products are manufactured to high-quality standards. For warranty information or technical support, please refer to the documentation included with your purchase or visit the official TEKO website. Keep your proof of purchase for warranty claims.