

- Manuals.plus /
- › BELLA /
 - › BELLA 6 Qt Slim Air Fryer Instruction Manual

BELLA 35237

BELLA 6 Qt Slim Air Fryer Instruction Manual

Model: 35237 | Brand: BELLA

INTRODUCTION

Thank you for choosing the BELLA 6 Qt Slim Air Fryer. This appliance is designed to provide a convenient and efficient way to prepare a variety of meals with less oil. Its unique tall, slim profile is optimized for space-saving in your kitchen, while offering a generous 6-quart capacity. This manual provides essential information for safe operation, maintenance, and optimal performance of your new air fryer.

SETUP AND FIRST USE

Unpacking and Initial Cleaning

Carefully remove all packaging materials and labels from the air fryer. Ensure all components are accounted for. Before first use, thoroughly clean the frying basket and crisping tray with warm, soapy water. Wipe the exterior of the air fryer body with a damp cloth. Do not immerse the air fryer body in water.



Figure 1: Front view of the BELLA 6 Qt Slim Air Fryer.

Placement

Place the air fryer on a stable, heat-resistant surface. Ensure there is adequate ventilation around the appliance. The slim design allows for efficient use of counter space.

Our 6qt



Their 6qt



Extra-long basket design For big-batch cooking

Figure 2: The slim design of the BELLA Air Fryer saves up to 50% more counter space compared to prior models.

Power Connection

Plug the appliance into a standard 120V AC electrical outlet. The cord wrap feature at the back allows for neat storage when not in use.

OPERATING INSTRUCTIONS

Control Panel Overview

The air fryer features a digital touch control panel for easy operation. The display shows temperature and time settings. Buttons include:

- **Air Fry:** For crispy results with minimal oil.

- **Bake:** Ideal for baking cakes, muffins, or casseroles.
- **Roast:** Perfect for roasting vegetables or meats.
- **Broil:** For browning and crisping the top layer of food.
- **Dehydrate:** For drying fruits, vegetables, or making jerky.
- **Reheat:** To warm up leftovers while maintaining texture.
- **Time/Temp:** To manually adjust cooking time and temperature.
- **Start/Stop:** To begin or pause the cooking cycle.
- **Power:** To turn the appliance on or off.



Our kitchenware

- ✓ Slim & stylish
- ✓ Cooks evenly
- ✓ Easy to clean
- ✓ Long-lasting



Their kitchenware

- ✗ Bulky & boring
- ✗ Uneven cooking
- ✗ Hard to clean
- ✗ Poor quality

Figure 3: Digital controls with 6 preset cooking options.

Cooking Process

1. Place food evenly in the frying basket. The XL basket can hold up to 5 lbs of food.
2. Slide the basket firmly into the air fryer body until it clicks into place.
3. Press the Power button to turn on the appliance.

4. Select a preset function or manually set the desired time and temperature using the Time/Temp buttons.
5. Press Start/Stop to begin cooking. The air fryer will automatically shut off after the set time with an audible tone.



Figure 4: The extra-long basket design accommodates larger quantities of food.

MAINTENANCE AND CLEANING

Cleaning the Frying Basket and Crisping Tray

The frying basket and crisping tray feature EverGood™ Ceramic Nonstick Coating for easy food release and cleaning. After each use, allow the parts to cool completely. Hand wash with warm, soapy water and a non-abrasive sponge. Rinse thoroughly and dry completely before storing. **Note:** The basket and crisping tray are NOT dishwasher safe.



Figure 5: The EverGood Ceramic Nonstick Coating allows for quick and easy cleaning.

Cleaning the Exterior

Wipe the exterior of the air fryer with a damp cloth. Do not use abrasive cleaners or scouring pads, as they may damage the finish. Ensure the appliance is unplugged and completely cool before cleaning.

TROUBLESHOOTING

If you encounter any issues with your BELLA 6 Qt Slim Air Fryer, please refer to the following common problems and solutions:

- **Appliance not turning on:** Ensure the power cord is securely plugged into a working electrical outlet. Check if the frying basket is fully inserted into the unit.
- **Food not cooking evenly:** Ensure food is arranged in a single layer and not overcrowded in the basket. Shake or

flip food halfway through the cooking cycle for best results.

- **White smoke coming from the appliance:** This may be caused by grease from previous cooking or excessive oil on food. Clean the basket and tray thoroughly. Reduce the amount of oil used.
- **Appliance emits unusual odor:** During initial uses, a slight odor may occur due to manufacturing residues. This is normal and should dissipate quickly. Ensure proper ventilation.

SPECIFICATIONS

Feature	Detail
Model Name	Air Fryer
Model Number	35237
Brand	BELLA
Capacity	6 Quarts
Wattage	1750 watts
Control Method	Touch
Material	Aluminum, Ceramic
Nonstick Coating	Yes (EverGood™ Ceramic)
Dishwasher Safe Parts	No
Product Dimensions	15.31"D x 9.09"W x 10.9"H
Item Weight	8.36 Pounds
Special Feature	Automatic Shut-Off

WARRANTY AND SUPPORT

BELLA stands by its products and is committed to customer satisfaction. This product comes with **2-year warranty**. For warranty claims, technical support, or any inquiries, please visit the official BELLA website or contact their customer service department. Keep your purchase receipt for warranty validation.

Engineered to perform. Built to last.

We stand by our products and are committed to your satisfaction.
That's why all our products come with a 2-year warranty.

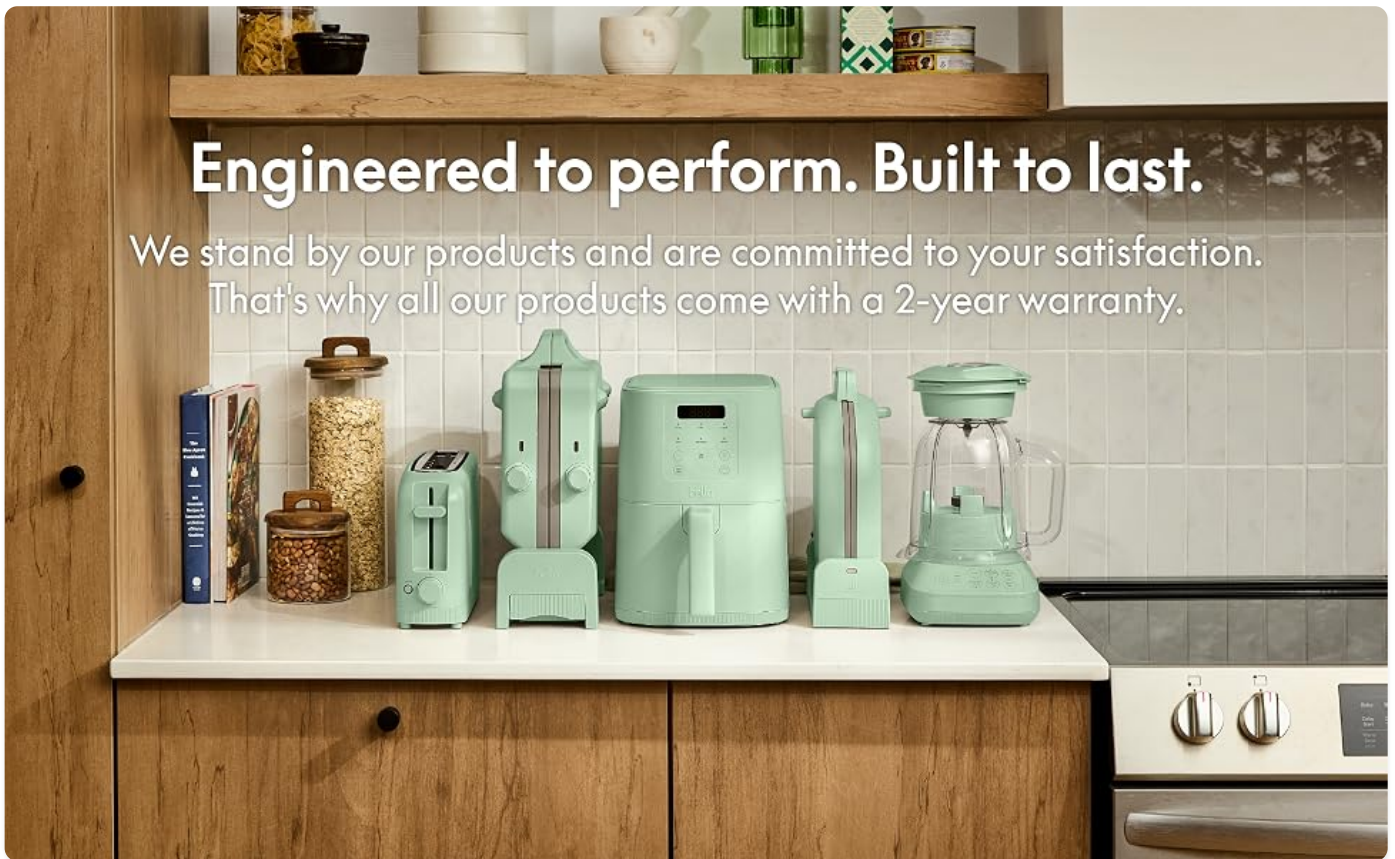


Figure 6: BELLÄ products are engineered for performance and durability.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

Open the live page

<https://manuals.plus/asin/B0DPNTYCVT>

More documents and user manuals: <https://manuals.plus/>