

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [MANSCAPED](#) /

› [MANSCAPED The Chairman Plus Electric Foil Face Shaver Instruction Manual](#)

MANSCAPED The Chairman Plus

MANSCAPED The Chairman Plus Electric Foil Face Shaver Instruction Manual

Model: The Chairman Plus

Brand: MANSCAPED

INTRODUCTION

The MANSCAPED The Chairman Plus is an advanced electric foil face shaver designed for men, offering a precise and comfortable shaving experience. It features two interchangeable blade heads: a SkinSafe three-blade foil for close shaves and a precision trimmer for detailing. This device is equipped with USB-C charging, a long-lasting battery, and is fully waterproof for convenient use and cleaning.



The MANSCAPED The Chairman Plus Electric Foil Face Shaver with its packaging, highlighting its dual-head system, SkinSafe technology, LED spotlight, and waterproof design.

IMPORTANT SAFETY INFORMATION


- Avoid using the shaver near water sources while charging.
- Be cautious when handling and changing the blade heads to prevent cuts.
- Always follow the cleaning and care instructions to prevent bacterial growth.

WHAT'S IN THE BOX

Your MANSCAPED The Chairman Plus package includes the following items:

- The Chairman Plus Electric Foil Face Shaver body
- SkinSafe Three-Blade Foil Head
- Precision Trimmer Head

- USB-C Charging Cable

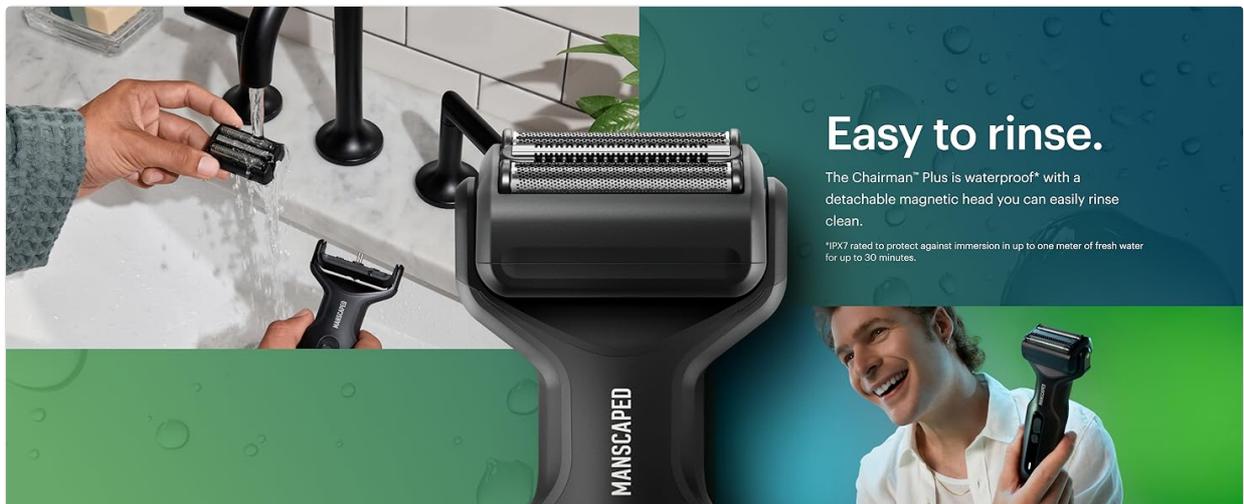

The package contents for the MANSCAPED The Chairman Plus, including the shaver, two interchangeable heads, and a USB-C cable.

SETUP

Charging the Device

Before first use, fully charge your Chairman Plus shaver. Connect the provided USB-C cable to the charging port on the device and plug the other end into a compatible USB power adapter. The LED indicator will show the charging status. A full charge provides up to 60 minutes of runtime. A quick 5-minute charge option is available for immediate use.

Attaching/Changing Blade Heads

The Chairman Plus features a detachable magnetic head system for easy interchangeability. To attach a blade head, align it with the top of the shaver body and gently press until the magnets secure it in place. To remove, simply pull the head away from the body.



MOVEMBER®

SUPPORTER

This November, a portion of every purchase of The Chairman™ PLUS on Amazon will be donated to Movember®.



The MANSCAPED The Chairman Plus electric shaver with the SkinSafe three-blade foil head attached.

OPERATING INSTRUCTIONS

Foil Shaving

For a close and comfortable shave, attach the SkinSafe three-blade foil head. Ensure your face is clean and dry, or apply a shaving gel if preferred. Gently glide the shaver across your face in an upward and downward motion, allowing the FlexAdjust technology to adapt to your facial contours. Maintain even pressure for optimal results.

Precision Trimming

For detailing and shaping, attach the precision trimmer head. Use this attachment to create crisp lines along your neckline, jawline, and sideburns. Hold the trimmer at an angle that allows for precise control and gently move it to achieve your desired style.

Interchangeable blade heads.



Two interchangeable blade heads give you a gentle shave whether you're going skin-close or just cleaning up the edges.*



The MANSCAPED The Chairman Plus electric shaver with the precision trimmer head attached for detailing facial hair.

Travel Lock Feature

To prevent accidental activation during travel, the device includes a travel lock. Press and hold the power button for 3 seconds to engage or disengage the lock.

Product Demonstration Video

Your browser does not support the video tag.

Video demonstrating the features and usage of the MANSCAPED The Chairman Plus electric shaver, including its foil and trimmer heads, and waterproof capabilities.

MAINTENANCE AND CLEANING

The Chairman Plus is IPX7 rated, meaning it is waterproof and can be rinsed under running water for easy cleaning. Its detachable magnetic head simplifies the cleaning process.

1. Ensure the shaver is turned off before cleaning.
2. Detach the blade head from the shaver body.
3. Rinse the blade head and the shaver body under running water to remove hair and debris.

4. Allow all parts to air dry completely before reattaching the blade head or storing the device.



Precision detailing.

The precision trimmer attachment helps create crisp, clean lines along the neckline, jawline, and sideburns.



The waterproof MANSCAPED The Chairman Plus electric shaver being rinsed under running water for easy cleaning.

TROUBLESHOOTING

- **Device not turning on:** Ensure the device is fully charged. Check the travel lock feature and disengage if activated.
- **Reduced performance:** Clean the blade heads thoroughly. If performance does not improve, consider replacing the blade heads.
- **Skin irritation:** Ensure proper shaving technique, gliding gently against the skin. Use a shaving gel or foam for added lubrication.

SPECIFICATIONS

Feature	Detail
Model Name	The Chairman™ Plus
Item Model Number	30-00159-NA

Power Source	Battery Powered (1 Lithium Ion battery included)
Special Feature	SkinSafe® & FlexAdjust Technology
Recommended Uses	Face
Waterproof Rating	IPX7 (protects against immersion in up to one meter of fresh water for up to 30 minutes)
Battery Runtime	Up to 60 minutes
Quick Charge	5-minute option available
Package Dimensions	8.11 x 5.51 x 3.15 inches
Item Weight	1.23 Pounds

WARRANTY AND SUPPORT

For warranty information, product support, or to purchase replacement parts, please visit the official MANSCAPED website or contact their customer service. Keep your proof of purchase for any warranty claims.