

[Manuals.plus](#) /

› [SNUGWAY](#) /

› SNUGWAY Model 91779 Ergonomic High-Back Gaming Chair Instruction Manual

SNUGWAY 91779

SNUGWAY Model 91779 Ergonomic High-Back Gaming Chair Instruction Manual

Comprehensive guide for assembly, operation, and maintenance.

1. INTRODUCTION

Thank you for purchasing the SNUGWAY Model 91779 Ergonomic High-Back Gaming Chair. This manual provides essential information for the safe and efficient assembly, operation, and maintenance of your new chair. Please read this manual thoroughly before assembly and retain it for future reference.





Figure 1: SNUGWAY Model 91779 Ergonomic High-Back Gaming Chair.

This image displays the SNUGWAY Model 91779 gaming chair in its upright position, showcasing its black and red design, high backrest, lumbar pillow, headrest pillow, and five-star base with casters.

2. SAFETY INFORMATION

- Ensure all components are present and undamaged before assembly. Do not use if any parts are missing or damaged.
- Assemble the chair on a soft, clean surface to prevent scratches.
- Do not stand on the chair.
- Do not use the chair as a step stool.
- Keep children away from small parts during assembly.
- Maximum weight capacity: 275 pounds (approximately 125 kg). Do not exceed this limit.
- Periodically check all bolts and screws to ensure they are tight.

3. PACKAGE CONTENTS

Verify that all parts are included in the package before beginning assembly. Refer to the assembly diagram for a complete list of components.

4. SETUP AND ASSEMBLY

The SNUGWAY Model 91779 gaming chair is designed for straightforward assembly. All necessary tools and hardware are included in the package. Follow the pictorial instructions provided with your chair for the most accurate assembly process.

General Assembly Steps:

1. Attach the casters to the five-star base.
2. Insert the gas lift cylinder into the center of the five-star base.
3. Attach the seat plate mechanism to the bottom of the seat cushion.
4. Connect the backrest to the seat cushion using the provided brackets and screws.
5. Attach the armrests to the seat cushion and backrest.
6. Place the assembled seat and backrest onto the gas lift cylinder.
7. Attach the headrest and lumbar support pillows.
8. Ensure all screws are securely tightened before use.



Figure 2: Key features including comfortable backrest, extendable footrest, tilt recline, and stabilized silent wheels.

This image highlights four main features: a comfortable backrest, an extendable footrest for relaxation, a tilt recline mechanism, and a stable five-star base with silent wheels designed to protect flooring.

5. OPERATING INSTRUCTIONS

5.1. Height Adjustment

To adjust the seat height, locate the lever on the right side beneath the seat.

- **To raise the seat:** Lift the lever while taking your weight off the seat. The seat will rise automatically. Release the lever at the desired height.
- **To lower the seat:** Lift the lever while seated. The seat will lower. Release the lever at the desired height.

5.2. Recline Function

The chair features an adjustable recline from 90° to 135°.

- **To recline:** Pull the recline lever (typically on the left side) upwards and lean back to your desired angle. Release the lever to lock the backrest in place.
- **To return to upright:** Pull the recline lever upwards and lean forward slightly. The backrest will return to its upright position. Release the lever to lock.

5.3. Swivel and Mobility

The chair offers 360-degree swivel capability and smooth-rolling casters for easy movement.

- **Swivel:** Simply rotate the seat to face any direction.
- **Mobility:** The noiseless wheels are designed to protect wooden floors and allow for smooth movement across various surfaces.

5.4. Extendable Footrest

For added comfort and relaxation, the chair includes an extendable footrest.

- **To extend:** Pull the footrest out from beneath the seat.
- **To retract:** Push the footrest back under the seat until it is fully stored.

ADJUSTABLE RECLINE

Relax Yourself Without Stress



Figure 3: Illustration of the chair's adjustable recline, 360-degree swivel, and seat height adjustment.

This image demonstrates the chair's versatility, showing the backrest tilting from 90° to 135°, the 360-degree swivel capability, and the mechanism for seat height adjustment.

6. MAINTENANCE

6.1. Cleaning

- **Faux Leather Surfaces:** Wipe with a soft, damp cloth. For stubborn stains, use a mild soap solution and wipe dry immediately. Avoid harsh chemicals or abrasive cleaners.
- **Plastic and Metal Parts:** Wipe with a soft, damp cloth.
- **Wheels:** Periodically clean the wheels to remove dust and debris that may hinder smooth movement.

6.2. General Care

- Avoid prolonged exposure to direct sunlight to prevent fading and material degradation.

- Keep sharp objects away from the chair's upholstery to prevent tears or punctures.
- Regularly check all screws and bolts and tighten them as needed to ensure stability and safety.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Chair wobbles or feels unstable.	Loose screws or bolts. Uneven floor.	Tighten all assembly screws. Move chair to a level surface.
Seat height adjustment not working.	Gas lift cylinder malfunction. Lever mechanism jammed.	Ensure the lever is fully engaged. If issue persists, contact customer support for gas lift replacement.
Backrest recline not locking.	Recline mechanism jammed or damaged.	Check for obstructions. Ensure the lever is fully released to lock. If damaged, contact customer support.
Wheels not rolling smoothly.	Debris in casters. Damaged casters.	Clean debris from wheels. Replace damaged casters if necessary.

8. SPECIFICATIONS

Feature	Detail
Brand	SNUGWAY
Model Number	91779
Color	Aurora Red
Material	Wood, Faux Leather, Nylon, Metal, Foam
Product Dimensions (L x W x H)	71.12 x 71.12 x 121.92 cm (28 x 28 x 48 inches)
Item Weight	18.14 kg (40 pounds)
Maximum Weight Capacity	125 kg (275 pounds)
Recline Angle	90° to 135°
Swivel	360°
Wheels	Noiseless, floor-protective casters

PRODUCT DIMENSIONS



Figure 4: Detailed product dimensions and maximum weight capacity.

This image provides a visual representation of the chair's dimensions, including seat width, backrest height, and overall height range, along with its maximum weight capacity of 275 pounds.

9. WARRANTY AND SUPPORT

For warranty information, technical support, or to order replacement parts, please refer to the contact information provided with your purchase documentation or visit the official SNUGWAY website.

Please have your model number (91779) and purchase date available when contacting support.



