

[manuals.plus](#) /

› [VEVOR](#) /

› [VEVOR JW-731 Kitchen Sink Garbage Disposal User Manual](#)

VEVOR JW-731

VEVOR JW-731 Kitchen Sink Garbage Disposal User Manual

Model: JW-731

1. INTRODUCTION

Thank you for choosing the VEVOR JW-731 Kitchen Sink Garbage Disposal. This manual provides essential information for the safe installation, operation, and maintenance of your new appliance. Please read it thoroughly before use and retain it for future reference.



Image: The VEVOR JW-731 Kitchen Sink Garbage Disposal unit.

2. IMPORTANT SAFETY INSTRUCTIONS

WARNING: When using electrical appliances, basic precautions should always be followed, including:

- Read all instructions before using the appliance.
- To reduce the risk of injury, close supervision is necessary when an appliance is used near children.
- Do not put fingers or hands into a garbage disposal.
- Turn the power switch to the OFF position before attempting to clear a jam or remove an object from the disposer.
- When attempting to loosen a jam in a garbage disposal, use a wooden spoon or a similar non-metallic object.
- When attempting to remove objects from a garbage disposal, use long-handled tongs or pliers.
- Do not dispose of large whole bones, corn husks, fibrous materials, glass, metal, or plastic in the disposer.
- Do not pour grease or fat down the disposer as it can solidify and cause clogs.
- Ensure the splash guard is properly installed before operating the unit.

- This appliance must be grounded. Connect only to a properly grounded outlet.

3. INSTALLATION GUIDE

3.1 Unpacking and Components

Carefully unpack all components and ensure all parts are present. Refer to the "What's in the Box" section for a complete list.

VEVOR

Item Model Number: **JW-731**

Horsepower: **1 HP**

Motor Type: **DC Motor**

Noise Level: **≤72 dB**

Main Materials: **ABS + Stainless Steel**

Product Weight: **11.24 lbs / 5.1 kg**

Product Dimensions:

8.27" x 8.27" x 16.34" / 210 x 210 x 415 mm



We continue to be committed to provide you with cost-effective tools.
 "Save Half" or any other similar expressions used by us only represents an estimate of savings you might benefit from buying certain tools with us compared to the major top brands and does not necessarily mean to cover all categories of tools offered by us.
 You are kindly reminded to verify carefully when you are placing an order with us if you are actually saving half in comparison with the top major brands.

Image: Diagram showing the VEVOR JW-731 garbage disposal unit and its included components, such as the user manual, drain elbow, gasket, drain stopper, sealing rings, and screws.

3.2 EZ Mount Twist-Lock Installation

The VEVOR JW-731 features an EZ Mount twist-lock system for quick and secure installation. Follow these steps:

1. **Remove Old Sink Drainer:** Disconnect and remove any existing sink drainer or disposal unit.
2. **Disassemble Mounting Ring and Flange:** Separate the mounting assembly components.
3. **Install Splash Guard and Support Ring:** Place the splash guard and support ring into the sink opening.
4. **Assemble Mount Ring and Cushion Mount:** Securely assemble the mount ring and cushion mount from underneath the sink.
5. **Connect Drainage Pipe:** Attach the drainage pipe to the disposal unit's outlet.
6. **Attach the Disposer to the Flange:** Align the disposer with the sink flange and twist to lock it into place using the 3-point locking mechanism.

INSTALLATION PROCEDURE

Easy and quick to install



1. Remove the old sink drainer



2. Disassemble mounting ring and flange



3. Install splash guard and support ring



4. Assemble mount ring and cushion mount



5. Connect the drainage pipe



6. Attach the disposer to the flange

Image: Visual guide illustrating the six steps for installing the VEVOR JW-731 garbage disposal using the EZ Mount twist-lock system.

Note: Ensure all connections are watertight to prevent leaks. If you are unsure about any step, consult a qualified plumber.

4. OPERATING INSTRUCTIONS

4.1 Continuous Feed Operation

The VEVOR JW-731 is a continuous feed garbage disposal, designed to process food waste efficiently.

1. Turn on the cold water tap to a moderate flow.
2. Flip the power switch to activate the disposal unit.
3. Scrape food waste into the sink opening. The multi-stage grinding system will process various food scraps.
4. Allow the disposal to run for a few seconds after the grinding sound subsides to ensure all waste is flushed away.
5. Turn off the disposal unit, then turn off the water.

CONTINUOUS FEED, EFFICIENT GRINDING

Fast, powerful grinding of tough food scraps



The edges have eliminated the bulge, enhancing grinding efficiency and cutting

The bulge and tip are integrated for simultaneous limiting and cutting



Powerful Grinding System

Continues to grind as long as the power is on

Image: Diagram showing the continuous feed operation of the VEVOR JW-731, illustrating how various food scraps like vegetables, chicken bones, fish bones, fruit pits, and nuts are shredded by the multi-stage grinding system.

Acceptable Waste: Vegetables, fruit peels, small bones (chicken, fish), fruit pits, nuts, and other soft food scraps.

Unacceptable Waste: Large bones, fibrous materials (celery stalks, artichokes), glass, metal, plastic, harsh chemicals, or large amounts of grease.

5. MAINTENANCE AND CARE

5.1 Cleaning Your Disposal

- Regular Cleaning:** Grind small citrus peels (lemon, orange) to freshen the disposal and clean the grinding chamber.
- Deep Cleaning:** For stubborn odors, pour a cup of baking soda into the disposal, followed by a cup of white vinegar. Let it sit for 10-15 minutes, then flush with hot water while running the disposal.
- Splash Guard:** Periodically remove and clean the rubber splash guard to remove food debris buildup.

5.2 Noise Reduction Features

The VEVOR JW-731 is designed with multi-layer noise reduction for quieter operation. This includes:

- Splash Guard:** Helps contain noise within the grinding chamber.
- Soundproof Cotton:** An internal layer of sound-absorbing material.
- Thickened ABS Shell:** The robust outer casing further dampens operational noise.

MULTI-LAYER NOISE REDUCTION

Quiet operation, no disturbance to family



Image: Diagram showing the three layers of noise reduction in the VEVOR JW-731: the splash guard, soundproof cotton, and the thickened ABS shell, all contributing to quiet operation.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Disposal does not start.	No power, tripped circuit breaker, motor jam.	Check power supply. Reset circuit breaker. Press the red reset button on the bottom of the disposal. If jammed, turn off power, use a wooden spoon to clear the jam.
Disposal hums but does not grind.	Grinding plate is jammed.	Turn off power. Use a wooden spoon to dislodge the object. Alternatively, use the hex wrench (if provided) in the center bottom hole to manually turn the motor shaft.
Leaking from the disposal.	Loose connections, faulty seals, crack in housing.	Check and tighten all plumbing connections. Inspect seals and gaskets for damage and replace if necessary. If housing is cracked, the unit may need replacement.
Unpleasant odors.	Food buildup, bacterial growth.	Clean the disposal with citrus peels or baking soda and vinegar as described in the Maintenance section.

7. SPECIFICATIONS

Product Specifications	
Model Number	JW-731
Horsepower	1 HP (0.74 kW)
Motor Type	DC Motor
Rotation Speed	3960 RPM (EU Plug)

Product Specifications

Noise Level	≤72 dB
Main Materials	ABS + Stainless Steel
Product Weight	5.1 kg (11.24 lbs)
Product Dimensions (L x W x H)	210 x 210 x 415 mm (8.27" x 8.27" x 16.34")
Color	Black

PREMIUM ABS & STAINLESS STEEL MATERIAL

Waterproof, corrosion-resistant, longer lifespan



ABS Shell

Resistant to oil and corrosion

Stainless Steel Grinding Disc

High durability and corrosion resistance

Image: A cutaway diagram of the VEVOR JW-731 garbage disposal, highlighting its premium ABS shell for corrosion resistance and the high-strength stainless steel grinding disc for durability.

8. WARRANTY AND SUPPORT

VEVOR products are designed for durability and performance. For warranty information and customer support, please refer to the official VEVOR website or contact your retailer. Keep your purchase receipt as proof of purchase for any

warranty claims.

For technical assistance or inquiries, please visit www.vevor.com or contact VEVOR customer service.

© 2026 VEVOR. All rights reserved.