

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Gevi](#) /
- › [Gevi 10-Cup Drip Coffee Maker with Built-in Grinder User Manual](#)

Gevi DCMA0-BK0A1

Gevi 10-Cup Drip Coffee Maker with Built-in Grinder User Manual

Model: DCMA0-BK0A1

INTRODUCTION

This manual provides detailed instructions for the safe and efficient operation, maintenance, and troubleshooting of your Gevi 10-Cup Drip Coffee Maker with Built-in Grinder. Please read this manual thoroughly before first use and retain it for future reference.



Image: The Gevi 10-Cup Drip Coffee Maker, showcasing its sleek black design, control panel, glass carafe, and a cup of brewed coffee alongside a glass of iced coffee.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and injury to persons, do not immerse cord, plugs, or appliance in water

or other liquid.

- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

PRODUCT COMPONENTS

Your Gevi coffee maker includes the following main components:

- Main Unit with Built-in Grinder
- Glass Carafe
- Permanent Filter (Reusable)
- Filter Basket
- Water Reservoir
- Control Panel with Touch Screen
- Warming Plate
- Coffee Scoop

INITIAL SETUP

1. **Unpacking:** Carefully remove all packaging materials and the coffee maker from the box. Ensure all components listed in the "Product Components" section are present.
2. **Remove Protective Film:** Before first use, locate and remove the protective film covering the touch screen control panel. This film ensures the screen remains scratch-free during transit.

Protective Film

Please remove this film before use



Image: A hand peeling off a clear protective film from the touch screen of the Gevi coffee maker, highlighting the importance of this step before operation.

- 3. First Cleaning:** Before brewing coffee for the first time, clean all removable parts (carafe, filter basket, permanent filter) with warm, soapy water. Wipe the exterior of the unit with a damp cloth. Run at least one full cycle with only water to flush the internal system.
- 4. Positioning:** Place the coffee maker on a flat, stable, heat-resistant surface, away from the edge of the counter. Ensure there is adequate ventilation around the unit.
- 5. Power Connection:** Plug the power cord into a grounded electrical outlet.

OPERATING INSTRUCTIONS

Understanding the Control Panel

The Gevi coffee maker features a large, intuitive touch screen control panel for easy operation and customization.

Large Control Panel



Touch
screen



Function
Programmable



Custom
coffee



Image: A close-up view of the Gevi coffee maker's large touch screen control panel, showing icons for various functions like 'Keep Warm Timer', 'Recipes', 'Strength', 'Clean', and 'Delay Brew Timer'.

Brewing Coffee

- Add Water:** Open the water reservoir lid and fill with fresh, cold water up to the desired level indicated on the side of the machine. Do not exceed the MAX fill line.
- Add Coffee Beans/Grounds:**
 - **For Whole Beans (using built-in grinder):** Add whole coffee beans to the grinder hopper. The machine will automatically grind the beans before brewing.
 - **For Pre-Ground Coffee:** Place the reusable permanent filter into the filter basket. Add the desired amount of pre-ground coffee into the filter. For optimal flavor, use approximately one scoop (provided) per cup.



Reusable Coffee Filter & Basket

Image: A hand using a scoop to add coffee grounds into the reusable coffee filter and basket, demonstrating the process of preparing for brewing.

- 3. Select Brewing Strength:** Use the touch screen to select your desired brewing strength. The machine offers options such as Classic, Intense, Rich, and Ice for different coffee preferences.

4 Brewing Strengths



Image: The Gevi coffee maker on a counter, with four glasses below showing different coffee strengths: Classic, Intense, Rich, and Ice, illustrating the machine's versatility.

- 4. Pre-Infusion Feature:** This coffee maker utilizes a pre-infusion process to ensure deep and even extraction of coffee grounds, enhancing flavor.

PRE-INFUSION for Deep Extraction

Ensure the coffee grounds are evenly extracted



Image: A diagram illustrating the pre-infusion process within the coffee maker, showing water saturating coffee grounds evenly before the main brewing cycle for optimal extraction.

5. **Start Brewing:** Press the "On/Off" button or the "Brew" button on the touch screen to begin the brewing cycle.
6. **Programmable Timer:** To set a delayed brew time, use the "Delay Brew Timer" function on the control panel. You can program the machine to start brewing up to 24 hours in advance.



Image: The Gevi coffee maker next to its detached control panel, which displays "24 Hours Programmable Timer", indicating the machine's ability to schedule brewing.

- 7. Keep Warm Function:** After brewing, the coffee maker's warming plate will automatically activate to keep your coffee hot. The "Keep Warm Timer" can be set for 5 minutes to 3 hours and 59 minutes.



Keep Warm Timer

5 Minutes-3 Hours
59 Minutes

Image: A close-up of the Gevi coffee maker's warming plate, glowing red to indicate heat, with a cup of hot coffee and pastries nearby, demonstrating the keep warm function.

CARE AND MAINTENANCE

Daily Cleaning

- Always unplug the coffee maker before cleaning.
- Wash the glass carafe, permanent filter, and filter basket in warm, soapy water after each use. Rinse thoroughly and dry. These parts are generally top-rack dishwasher safe, but hand washing is recommended for longevity.
- Wipe the exterior of the coffee maker with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.
- Do not immerse the main unit, cord, or plug in water or any other liquid.

Descaling (Decalcification)

Mineral deposits from water can build up in your coffee maker over time, affecting performance and coffee taste. Descaling should be performed regularly, depending on water hardness and frequency of use (e.g., every 2-4 weeks).

1. Fill the water reservoir with a mixture of white vinegar and water (1:2 ratio, e.g., 1 cup vinegar to 2 cups water).
2. Place the empty carafe on the warming plate.
3. Press the "Clean" button on the touch screen. The machine will run a cleaning cycle.
4. After the cycle is complete, discard the vinegar solution.
5. Run 2-3 full cycles with fresh, clean water to rinse out any remaining vinegar taste.

TROUBLESHOOTING GUIDE

Problem	Possible Cause	Solution
Coffee does not brew.	Machine not plugged in; power outage; water reservoir empty; brew cycle not initiated.	Ensure power cord is securely plugged in. Check circuit breaker. Fill water reservoir. Press the "On/Off" or "Brew" button.
Coffee tastes weak or too strong.	Incorrect coffee-to-water ratio; wrong grind size; mineral buildup.	Adjust coffee amount. Ensure correct grind setting for whole beans. Descale the machine. Use the strength selection feature.
Grinder not working.	Bean hopper empty; grinder clogged; lid not properly closed.	Add beans to hopper. Clean grinder components. Ensure grinder lid is securely closed.
Water leaks from machine.	Water reservoir overfilled; carafe not properly placed; filter basket overflowing.	Do not exceed MAX fill line. Ensure carafe is centered on warming plate. Check filter basket for clogs or overflowing.
Clock loses time.	Internal clock drift.	This is a known characteristic for some units. Reset the clock periodically as needed.

If the problem persists after attempting these solutions, please contact Gevi customer support.

PRODUCT SPECIFICATIONS

Feature	Detail
Brand	Gevi
Model Number	DCMA0-BK0A1
Coffee Maker Type	Drip Coffee Machine with Built-in Grinder
Capacity	10 Cups
Operation Mode	Fully Automatic
Coffee Input Type	Whole Beans, Pre-Ground Coffee
Included Components	Permanent Filter, Glass Carafe

Feature	Detail
Product Dimensions (L x W x H)	12.1 x 8 x 13.8 inches
Item Weight	7.48 pounds
Programmable Timer	Up to 24 Hours
Keep Warm Plate	4-Hour Duration (Adjustable 5 min - 3 hr 59 min)



Image: The Gevi coffee maker with overlaid measurements indicating its dimensions: 12.1 inches length, 8.0 inches width, and 13.8 inches height.

WARRANTY AND CUSTOMER SUPPORT

Gevi products are designed and manufactured to the highest quality standards. For information regarding warranty coverage, please refer to the warranty card included with your product packaging or visit the official Gevi website.

If you encounter any issues or have questions about your Gevi 10-Cup Drip Coffee Maker, please contact Gevi customer support for assistance. Provide your model number (DCMA0-BK0A1) and a detailed description of the issue when contacting support.

Gevi Official Store: [Visit Gevi Store on Amazon](#)