

## COSORI CAF-DC112

# COSORI Turbo Tower Pro Air Fryer CAF-DC112 User Manual

Model: CAF-DC112 | Capacity: 10.8L

## 1. PRODUCT OVERVIEW

The COSORI Turbo Tower Pro Air Fryer CAF-DC112 is designed for efficient and versatile cooking. It features a 10.8L total capacity with two stacked baskets, dual heating elements, and ceramic coating for enhanced performance and easy cleaning. This appliance supports various cooking functions including air frying, roasting, baking, grilling, reheating, dehydrating, and proofing.



Image 1.1: COSORI Turbo Tower Pro Air Fryer CAF-DC112. This image displays the complete air fryer unit with its two stacked baskets and digital control panel.

## 1.1 Key Features

- **10.8L Total Capacity:** Comprising a 4.3L upper basket and a 6.5L lower basket for simultaneous cooking.
- **Dual Heating Elements:** Ensures even heat distribution for consistent cooking results.
- **Ceramic Coated Surfaces:** All food-contact surfaces are 100% ceramic coated for quality cooking and easy cleanup.
- **7 Cooking Functions:** Air Fry, Bake, Roast, Grill, Reheat, Dehydrate, and Proof.

- **DC Motor Technology:** Features 5 fan speeds and automatic temperature adjustment for precise cooking.
- **Space-Saving Design:** Stacked basket configuration optimizes counter space.



Image 1.2: The air fryer's compact, stacked design saves 41% counter space compared to side-by-side models, with dimensions of 41.3P x 30l x 40.5H cm.

## 2. SETUP AND FIRST USE

### 2.1 Unboxing and Initial Inspection

Carefully remove all packaging materials from the air fryer and its accessories. Inspect the unit for any signs of damage. Ensure all components listed in the packing list are present.

Your browser does not support the video tag.

Video 2.1: COSORI Unboxing and Setup Guide. This video demonstrates the proper unboxing procedure, removal of protective materials, and initial assembly of the air fryer components.

### 2.2 Cleaning Before First Use

Before using your air fryer for the first time, clean all removable parts. Wash the baskets, crisper plates, and roast rack with warm, soapy water. Rinse thoroughly and dry completely. Wipe the exterior of the air fryer with a damp cloth.

### 2.3 Component Assembly

- Insert the crisper plates into the bottom of each basket, ensuring they are securely seated below the designated line.
- For three-layer cooking, position the roast rack on the silicone stoppers within the lower basket.

# *Turbo Tower Friggitrice ad Aria*

Cottura Uniforme Sempre

Design riscaldamento  
superiore



Cottura uniforme  
(Doppia Resistenza per cestello inferiore)

Design senza  
riscaldamento superiore



Cottura non uniforme

Image 2.2: Proper placement of the crisper plate in the basket and the roast rack on its silicone stoppers for secure fitting.

## 2.4 Initial Test Run

For optimal results and to eliminate any manufacturing odors, perform a test run. Run the air fryer in both zones at 195°C (380°F) for 10 minutes. This helps to condition the appliance.

## 2.5 Applying the Language Sticker

Locate the multi-language function sticker provided. Carefully peel and apply it to the designated area on the control panel to translate the function labels for easier use.





Image 2.3: A user applying the multi-language function sticker to the control panel of the COSORI Turbo Tower Pro Air Fryer.

## 3. OPERATING INSTRUCTIONS

### 3.1 Basic Operation

- **Power On/Off:** Press the power button to turn the unit on or off.
- **Selecting Zones:** Use the '1' and '2' buttons to select the upper or lower cooking zone.
- **Adjusting Temperature and Time:** Use the temperature and time arrows to set your desired cooking parameters.
- **Start/Pause:** Press the play/pause button to start or pause cooking.

### 3.2 Cooking Functions

The air fryer offers 7 preset functions for various cooking needs:

- **Air Fry:** Ideal for crispy foods like fries and chicken wings.
- **Roast:** Perfect for meats and vegetables.
- **Bake:** For cakes, muffins, and other baked goods.

- **Grill:** For searing and grilling.
- **Reheat:** To warm up leftovers.
- **Dehydrate:** For drying fruits, vegetables, and jerky.
- **Proof:** For dough rising.



Image 3.1: This image highlights the DC motor with 5 fan speeds and the 7 versatile cooking functions of the air fryer, including Air Fry, Roast, Bake, Grill, Reheat, Dry, and Proof.

### 3.3 Dual Zone and Three-Layer Cooking

The COSORI Turbo Tower Pro allows for simultaneous cooking in both baskets, or even three layers within a single basket using the roast rack. This enables preparing complete meals efficiently.

- **Scenario A (Carbohydrates & Proteins/Vegetables):** Place carbohydrates (e.g., fries) in Zone 1. Place vegetables (e.g., snap peas) on the crisper plate in Zone 2, then add the roast rack and place proteins (e.g., salmon) on top.
- **Scenario B (Proteins & Vegetables):** Place bone-in or crispy-skin meats (e.g., chicken drumsticks) in Zone 1. Place root vegetables (e.g., sweet potatoes) on the crisper plate in Zone 2, then add the roast rack and place green vegetables (e.g., broccoli) on top.

Your browser does not support the video tag.

Video 3.2: COSORI Three-Layer Cooking Instructions. This video demonstrates how to utilize both baskets and the roast rack to cook different food types simultaneously, creating a balanced meal.

Refer to the Quick Start Guide (QSG) for recommended temperature and time settings for various food types in each zone.

### 3.4 Safety Precautions During Operation

- Always use heat-resistant gloves when handling hot baskets, crisper plates, or the roast rack.
- Do not overfill the baskets to ensure proper air circulation and even cooking.
- Ensure the baskets are fully inserted before starting or resuming cooking.

## 4. MAINTENANCE AND CLEANING

### 4.1 Cleaning the Air Fryer

Regular cleaning ensures the longevity and optimal performance of your air fryer.

- **Baskets and Accessories:** The ceramic-coated baskets, crisper plates, and roast rack are dishwasher safe. For manual cleaning, use warm, soapy water and a non-abrasive sponge.
- **Interior:** Wipe the interior of the air fryer with a damp cloth after each use. For stubborn residue, use a mild detergent. Ensure the interior is completely dry before next use.
- **Exterior:** Clean the exterior with a soft, damp cloth. Do not immerse the main unit in water or any other liquid.



Image 4.1: The cooking surfaces are 100% ceramic coated, making them easy to clean and dishwasher safe.

## 4.2 Storage

Store the air fryer in a cool, dry place when not in use. Ensure all parts are clean and dry before storage. Keep the power cord neatly wrapped.

## 5. TROUBLESHOOTING

If you encounter any issues with your COSORI Turbo Tower Pro Air Fryer, please refer to the following common troubleshooting tips:

- **Appliance Not Turning On:** Ensure the power cord is securely plugged into a working electrical outlet. Check if the power button has been pressed.
- **Food Not Cooking Evenly:** Ensure baskets are not overfilled. Shake or flip food halfway through cooking. Verify that the correct temperature and time settings are used for the food type.
- **White Smoke from Appliance:** This may occur if there is excess oil or grease from food dripping onto the heating element. Clean the baskets and interior thoroughly. Ensure food is not excessively oily.
- **Error Codes:** If an error code appears on the display, consult the full user manual for specific code meanings and solutions.

For persistent issues or concerns not addressed here, please contact COSORI customer support.

## 6. SPECIFICATIONS

Specification	Value
Brand	COSORI

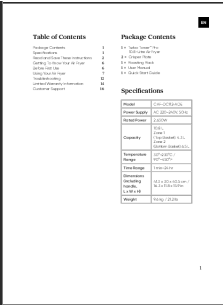

Specification	Value
Model	CAF-DC112-AEU
Color	Grey
Product Dimensions	41.3 x 30 x 40.5 cm
Capacity	10.8 Liters (4.3L upper, 6.5L lower)
Wattage	2630 watts
Voltage	240 Volts
Material	Metal
Automatic Shutoff	Yes
Item Weight	9.6 Kilograms

## 7. WARRANTY AND SUPPORT

COSORI provides a warranty for this product. Please refer to the warranty card included in your packaging or visit the official COSORI website for detailed warranty information and registration.

For technical assistance, product inquiries, or support, please contact COSORI customer service through their official website or the contact information provided in your product documentation.

### Related Documents - CAF-DC112

	<p><a href="#">COSORI Turbo Tower Pro Air Fryer User Manual</a></p> <p>Comprehensive user manual for the COSORI Turbo Tower Pro Air Fryer (Model CAF-DC112-ADE), covering setup, operation, cooking functions, troubleshooting, and warranty information.</p>
	<p><a href="#">COSORI Turbo Tower™ Pro 10.8-Litre Air Fryer User Manual</a></p> <p>User manual for the COSORI Turbo Tower™ Pro 10.8-Litre Air Fryer, providing detailed instructions, safety precautions, cooking guides, and troubleshooting tips for optimal use and maintenance.</p>



