

KIRAINAFLY KY-2408

KIRAINAFLY Electric Spice and Coffee Grinder User Manual

Model: KY-2408

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions before using the appliance.
- Do not immerse the motor base in water or other liquids.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock, or injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- This appliance is for household use only.
- Close supervision is necessary when any appliance is used by or near children.

PRODUCT OVERVIEW

The KIRAINAFLY Electric Spice and Coffee Grinder is designed for efficient and consistent grinding of various dry ingredients. It features a powerful motor, durable stainless steel blades, and a removable grinding cup for easy cleaning.



Image: The KIRAINAFLY Electric Spice and Coffee Grinder in Silver, showing its compact design.

Components:

- Motor Base with Power Cord
- Stainless Steel Removable Grinding Cup
- Transparent Lid with One-Touch Button
- Cleaning Brush

SETUP INSTRUCTIONS

1. **Unpack the Grinder:** Carefully remove all components from the packaging. Ensure all parts listed in the Product Overview are present.
2. **Clean Before First Use:** Wash the removable stainless steel grinding cup and transparent lid with warm, soapy water. Rinse

thoroughly and dry completely. Wipe the motor base with a damp cloth. Do not immerse the motor base in water.

3. **Assemble the Grinding Cup:** Place the stainless steel grinding cup vertically into the main body of the motor base. Rotate it clockwise until it is fully locked into position.

Your browser does not support the video tag.

Video: Demonstrates how to install and remove the grinding cup for the KIRAINAFLY Electric Grinder.

OPERATING INSTRUCTIONS

This grinder is suitable for coffee beans, spices, herbs, flaxseed, and nuts. Do not grind wet or oily ingredients.

1. **Add Ingredients:** Ensure the grinding cup is securely locked. Add your desired dry ingredients (e.g., coffee beans, spices) into the stainless steel grinding cup. Do not exceed the "MAX" fill line indicated inside the cup (80 grams or 3 ounces for coffee beans).
2. **Secure the Lid:** Place the transparent lid onto the grinding cup, ensuring it is properly seated. The grinder will not operate if the lid is not correctly in place.
3. **Start Grinding:** Plug the power cord into a suitable electrical outlet. Press and hold the button on the lid to start grinding. The grinding process will continue as long as the button is pressed.
4. **Control Grind Coarseness:** The longer you press the button, the finer the grind will be.
 - **Coarse Grind (e.g., French Press):** 8-10 seconds
 - **Medium Grind (e.g., Drip Coffee):** 10-15 seconds
 - **Fine Grind (e.g., Espresso):** 15-20 seconds
 - **Extra Fine Grind:** 20-25 seconds

Observe the grinding process through the transparent lid to achieve your desired consistency.

5. **Stop Grinding:** Release the button to stop the grinding process.
6. **Remove Ground Ingredients:** Unplug the grinder from the power outlet. Remove the transparent lid. Rotate the stainless steel grinding cup anti-clockwise to unlock and lift it out from the motor base. Carefully pour out the ground ingredients.

MEET YOUR NEEDS IN SECONDS

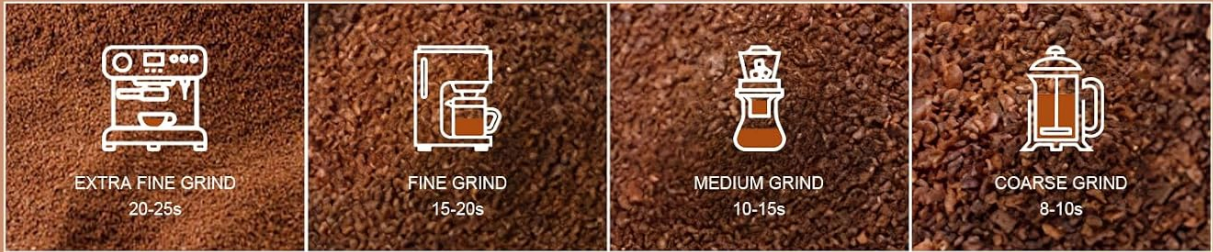


Image: Visual guide showing recommended grinding times for different coarseness levels, from coarse to extra fine.



Image: A hand pressing the lid button to operate the KIRAINAFLY Electric Grinder, demonstrating its simple one-touch function.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your grinder.

1. **Unplug Before Cleaning:** Always ensure the grinder is unplugged from the power outlet before cleaning.
2. **Clean the Grinding Cup:** Remove the stainless steel grinding cup from the motor base. Rinse it directly under running water with mild soap. Use the included cleaning brush to remove any stubborn residue around the blades and inside the cup. Ensure the cup is completely dry before reassembling or storing.
3. **Clean the Lid:** Wash the transparent lid with warm, soapy water and rinse thoroughly. Dry completely.
4. **Clean the Motor Base:** Wipe the exterior of the motor base with a damp cloth. Do not immerse the motor base in water or any other liquid.
5. **Storage:** Store the grinder in a dry place when not in use.



KIRAINAFLY has always been committed to manufacturing coffee grinders, coffee machines, etc. that can be perfectly integrated into our daily lives. We actively listen to the voices of users and constantly make improvements and innovations. To bring you safe, reliable, convenient and practical products, allowing you to feel the ultimate experience and satisfaction in every moment!

Image: The removable stainless steel grinding cup detached from the motor base, highlighting its easy-to-clean design.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Grinder does not start.	1. Not plugged in. 2. Lid not properly secured. 3. Grinding cup not locked.	1. Ensure the power cord is securely plugged into a working outlet. 2. Ensure the transparent lid is correctly placed and fully seated. 3. Rotate the grinding cup clockwise until it locks into place.
Ingredients are not grinding evenly.	1. Overfilling the grinding cup. 2. Insufficient grinding time.	1. Do not exceed the "MAX" fill line. Grind in smaller batches if necessary. 2. Increase grinding time by holding the button longer. Use pulse action for better control.
Grinder stops during operation.	Overheating protection activated.	Unplug the grinder and allow it to cool down for at least 10-15 minutes before attempting to use it again. Avoid continuous operation for extended periods.
Difficulty cleaning residue.	Dried residue on blades or cup.	Use the provided cleaning brush to dislodge particles. For stubborn residue, soak the removable cup in warm, soapy water before scrubbing.

PRODUCT SPECIFICATIONS

Brand	KIRAINAFLY
Model Number	KY-2408

Color	Silver
Material	Stainless Steel
Wattage	300 watts
Voltage	220 Volts
Capacity	80 Grams (approx. 3 ounces)
Item Weight	1.3 Pounds
Dimensions (L x W x H)	3.6"L x 2.8"W x 7.4"H
Included Components	Cleaning brush, Instruction manual

WARRANTY AND CUSTOMER SUPPORT

KIRAINAFLY is committed to customer satisfaction. For any questions, concerns, or assistance with your product, please contact our customer service team. Refer to your purchase documentation for specific warranty details and contact information. Our customer service is available to provide prompt support and ensure your experience with our products is positive.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DPPZB7PW>

More documents and user manuals: <https://manuals.plus/>