

Lynnloland L220028P10

Lynnloland Black 10-Light Farmhouse Chandelier Instruction Manual

Model: L220028P10

1. INTRODUCTION

This instruction manual provides detailed guidance for the safe and efficient installation, operation, and maintenance of your Lynnloland Black 10-Light Farmhouse Chandelier. Please read all instructions carefully before beginning installation and retain this manual for future reference.

The Lynnloland Black 10-Light Farmhouse Chandelier features 10 elegantly simple lamp arms with a solid structure and a rustic black finish, offering a classic and vintage aesthetic. This fixture is suitable for various indoor spaces including kitchen islands, bedrooms, foyers, dining rooms, living rooms, and entryways.

2. SAFETY INFORMATION

- **WARNING:** To avoid electric shock, ensure power is turned off at the circuit breaker before installation or servicing.
- All electrical connections must be in accordance with local codes, ordinances, and the National Electric Code (NEC). Consult a qualified electrician if you are unfamiliar with electrical wiring.
- Use only bulbs of the specified type and wattage to prevent overheating and potential fire hazards.
- Do not install this fixture in wet or damp locations. It is designed for indoor use only.
- Handle the fixture with care to avoid damage to components or wiring.

3. PACKAGE CONTENTS

Carefully unpack the fixture and check that all parts are included. If any parts are missing or damaged, do not attempt to assemble or install the product. Contact customer service for assistance.

- Chandelier Body (pre-assembled arms)
- Mounting Hardware (screws, wire nuts, mounting plate)
- Splicing Rods (4 pieces for adjustable height)
- Canopy
- Instruction Manual



Upgraded



VS



OURS ★★★★★★	Others ★
✓ Bigger size (35 inches)	✗ Small size (21.1 inches)
✓ Heavy-duty metal, no crooked	✗ Poorly made metal & easy to crooked
✓ United light, no assembly required	✗ Too much pieces, lots of assembly
✓ Safe & secure metal stay straight	✗ Unsafe & unsteady chain
✓ Corrosion-resistant antirusting paint	✗ Rust and flaking paint

Figure 1: Chandelier components and mounting hardware.

4. SETUP AND INSTALLATION

The chandelier is designed for easy installation with pre-assembled lamp arms. No complex assembly of individual arms is required.

4.1. Unfolding the Lamp Arms

The lamp arms are pre-assembled and folded for packaging. Simply unfold the arms to their desired position. The 360° rotating arm design allows for flexible adjustment.



Figure 2: Unfolding the pre-assembled lamp arms.

4.2. Adjusting Height

The chandelier includes four splicing rods, allowing for height adjustment from 17.5 inches to 47 inches. Select the appropriate number of rods to achieve your desired hanging height. The splicing rod design provides stability compared to chain-type fixtures.



Figure 3: Adjustable height options using splicing rods.

4.3. Mounting to Ceiling

1. Turn off power at the circuit breaker.
2. Attach the mounting plate to the junction box in the ceiling using the provided screws.
3. Connect the electrical wires: black to black (live), white to white (neutral), and bare copper to ground. Secure connections with wire nuts.
4. Carefully push the wired connections into the junction box.
5. Attach the canopy to the mounting plate, securing it with the decorative nuts.
6. Install the light bulbs (see Section 5.1).
7. Restore power at the circuit breaker.

The chandelier is suitable for installation on both sloped and flat ceilings.

5. OPERATING INSTRUCTIONS

5.1. Bulb Requirements

This chandelier requires 10 E12 base bulbs. It is compatible with various bulb types, including incandescent, LED, CFL, and halogen bulbs. **Bulbs are NOT included.**

For dimmable functionality, install dimmable E12 bulbs and connect the fixture to a compatible dimmer switch (dimmer switch NOT included).

5.2. Powering On/Off

Operate the chandelier using your wall switch. If a dimmer switch is installed, adjust the light intensity as desired.

6. MAINTENANCE

- **Cleaning:** To clean the fixture, turn off the power and wipe with a soft, dry cloth. Do not use abrasive cleaners or solvents, as these may damage the finish.
- **Bulb Replacement:** Ensure power is off before replacing bulbs. Allow bulbs to cool completely before touching. Replace with E12 base bulbs of the appropriate wattage.
- **Inspection:** Periodically check all electrical connections and mounting hardware to ensure they remain secure.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Light does not turn on	No power to fixture; Loose wiring; Faulty bulb	Check circuit breaker; Verify wire connections; Replace bulb
Light flickers	Loose bulb; Loose wiring; Incompatible dimmer switch	Tighten bulb; Check wire connections; Ensure dimmer is compatible with bulb type
Dimming not working	Non-dimmable bulbs; Incompatible dimmer switch	Use dimmable bulbs; Replace with a compatible dimmer switch

8. SPECIFICATIONS

Feature	Detail
Brand	Lynnoland
Model Number	L220028P10
Color	Matte Black
Material	Metal
Style	Modern Farmhouse
Light Fixture Form	Chandelier

Feature	Detail
Room Type	Bedroom, Dining Room, Hallway, Kitchen
Power Source	Corded Electric
Light Source	LED (compatible with incandescent, CFL, halogen)
Number of Light Sources	10
Voltage	120 Volts
Wattage	60 watts (per bulb, max)
Bulb Base	E12
Adjustable Height	17.5" to 47"
Required Assembly	No (pre-assembled arms)

9. WARRANTY AND SUPPORT

As a responsible seller, Lynnloland provides a **36-month warranty** for this product. We also offer technical support from a professional team.

If you encounter any problems with your Lynnloland Black 10-Light Farmhouse Chandelier, please do not hesitate to contact us. You can typically find a "Contact Seller" option on the product page where you made your purchase. We are committed to providing a satisfactory solution within 24 hours.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question