



[Manuals.plus](#) /

> [OmniBreeze](#) /

> OmniBreeze FC15-23MR 6-Inch Table Fan Instruction Manual

## OmniBreeze FC15-23MR

# OmniBreeze FC15-23MR 6-Inch Table Fan Instruction Manual

Model: FC15-23MR

## 1. INTRODUCTION

Thank you for choosing the OmniBreeze FC15-23MR 6-inch table fan. This manual provides essential information for the safe and efficient operation of your new fan. Please read it thoroughly before use and retain it for future reference.

## 2. IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or injury, please observe the following safety precautions:

- Always unplug the fan before cleaning or performing any maintenance.
- Do not operate the fan with a damaged cord or plug. If damaged, contact customer support.
- Keep the fan away from water or other liquids. Do not immerse in water.
- Ensure the fan is placed on a stable, level surface to prevent tipping.
- Do not insert fingers or any objects through the grille when the fan is operating.
- This appliance is for indoor use only. Do not use outdoors.
- Supervise children when the fan is in use.

## 3. PACKAGE CONTENTS

Verify that all items are present in your package:

- OmniBreeze FC15-23MR 6-inch Table Fan
- Remote Control (with 1 C battery included)
- User Manual (this document)

## 4. PRODUCT OVERVIEW

Familiarize yourself with the components of your OmniBreeze table fan.



Figure 4.1: Front view of the OmniBreeze 6-inch table fan, showcasing its compact design and grille.



Figure 4.2: Close-up of the fan's base, showing the LED display and touch controls, alongside the remote control.

## Control Panel & Remote Functions:

- **Power Button:** Turns the fan On/Off.
- **Speed Button:** Cycles through 5 fan speeds.
- **Oscillation Button:** Activates/deactivates horizontal oscillation (60°).
- **Timer Button:** Sets the auto-off timer (up to 7 hours).
- **Mode Button:** (If applicable, e.g., natural breeze mode)
- **Vertical Tilt:** Manually adjust the fan head up to 90° vertically.

## 5. SETUP

1. **Unpack:** Carefully remove the fan and all accessories from the packaging.
2. **Placement:** Place the fan on a firm, level surface. Ensure there is adequate space around the fan for optimal air circulation.
3. **Power Connection:** Plug the power cord into a standard 120V AC electrical outlet.
4. **Remote Battery:** The remote control comes with one C battery pre-installed. Remove any plastic tab if present to

activate the battery.

## 6. OPERATING INSTRUCTIONS

Your OmniBreeze fan can be operated using either the touch controls on the base or the included remote control.

### 6.1 Power On/Off

- Press the **Power button** (🔌) on the control panel or remote to turn the fan on or off.

### 6.2 Adjusting Fan Speed

- Press the **Speed button** (🌀) repeatedly to cycle through the 5 available fan speeds. The LED display will indicate the current speed setting.

### 6.3 Oscillation Function

The fan offers both horizontal and vertical oscillation for comprehensive air distribution.



Figure 6.1: The fan supports 85° vertical and 60° horizontal automatic oscillation.

- **Horizontal Oscillation:** Press the **Oscillation button** (🌀) to activate or deactivate the 60° automatic horizontal oscillation.

- **Vertical Tilt:** Manually adjust the fan head to your desired vertical angle, up to 90°.

## 6.4 Timer Function

- Press the **Timer button** (🕒) repeatedly to set the auto-off timer. The timer can be set for up to 7 hours. The fan will automatically turn off after the set time has elapsed.

## 7. MAINTENANCE

Regular cleaning will help maintain your fan's performance and extend its lifespan.

1. **Unplug:** Always unplug the fan from the power outlet before cleaning.
2. **Exterior Cleaning:** Use a soft, damp cloth to wipe the exterior surfaces of the fan. Do not use abrasive cleaners or solvents.
3. **Grille and Blades:** The front grille can be removed for cleaning the fan blades. Refer to Figure 7.1 for guidance. Use a soft brush or vacuum cleaner to remove dust from the blades and grilles. Ensure all parts are completely dry before reassembling and operating the fan.



Figure 7.1: Exploded view illustrating how to disassemble the fan for cleaning the blades and internal components.

**Storage:** When not in use for extended periods, store the fan in a cool, dry place, preferably in its original packaging.

## 8. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Fan does not turn on.	No power supply.	Ensure the power cord is securely plugged into a working outlet.
Fan operates but no air movement.	Fan speed is too low.	Increase the fan speed using the Speed button.
Remote control not working.	Battery is dead or incorrectly inserted.	Replace the C battery in the remote control, ensuring correct polarity.
Fan is unusually noisy.	Dust accumulation on blades or obstruction.	Unplug the fan and clean the blades and grilles as described in the Maintenance section. Ensure no foreign objects are obstructing the fan.

## 9. SPECIFICATIONS

<b>Brand</b>	OmniBreeze
<b>Model Name</b>	FC15-23MR
<b>Color</b>	BLACK
<b>Electric Fan Design</b>	Table Fan
<b>Power Source</b>	DC
<b>Product Dimensions (D x W x H)</b>	8.5" x 9" x 12.2"
<b>Special Features</b>	Adjustable Tilt, Oscillating, Remote Controlled, Timer
<b>Recommended Uses</b>	Air Circulation
<b>Wattage</b>	22 Watts
<b>Voltage</b>	120 Volts
<b>Item Weight</b>	4.4 Pounds
<b>Indoor/Outdoor Usage</b>	Indoor
<b>Control Method</b>	Remote
<b>Number of Power Levels</b>	5
<b>Motor Type</b>	DC
<b>Installation Type</b>	Tabletop
<b>UPC</b>	819079023694
<b>Size</b>	6 Inch
<b>Batteries</b>	1 C battery (included)

## 10. WARRANTY AND SUPPORT

OmniBreeze products are designed for reliability and performance. For warranty information or technical support, please refer to the warranty card included with your purchase or visit the official OmniBreeze website.

If you encounter any issues not covered in the troubleshooting section, please contact our customer service team for assistance.



© 2025 OmniBreeze. All rights reserved.