

[Manuals.plus](#) /

› [Kircuit](#) /

› Kircuit AC/DC Adapter User Manual

Kircuit DV-888DC

Kircuit AC/DC Adapter User Manual

Compatible with ALDI 26015 815313 21V Cordless Cyclonic 2 in 1 Stick Vacuum Cleaner DV-888DC

1. PRODUCT OVERVIEW

The Kircuit AC/DC Adapter is specifically designed to provide reliable power to your ALDI 26015 815313 21V Cordless Cyclonic 2 in 1 Stick Vacuum Cleaner (models DV-888DC, DV888DC). This adapter efficiently converts standard AC wall power into the DC power required by your vacuum cleaner, enabling both operation and battery charging. It is a portable and essential power source for home or office use, rigorously tested to ensure compatibility and performance.



Figure 1.1: Front view of the Kircuit AC/DC Adapter, showing the main unit with the input prongs and the attached output cable terminating in a barrel connector.

2. SETUP AND INSTALLATION

Follow these steps to properly set up your Kircuit AC/DC Adapter:

1. **Unpack the Adapter:** Carefully remove the adapter from its packaging. Inspect it for any visible damage.
2. **Identify Components:** The adapter consists of the main power brick with integrated AC prongs and an attached DC output cable with a barrel connector.
3. **Connect to Device:** Locate the power input port on your ALDI 26015 815313 21V Cordless Cyclonic 2 in 1 Stick Vacuum Cleaner (DV-888DC). Insert the barrel connector of the Kircuit adapter firmly into this port. Ensure a snug fit.
4. **Connect to Power Outlet:** Plug the AC prongs of the adapter into a standard 100-240VAC 50/60Hz electrical wall outlet.
5. **Verify Connection:** Once plugged in, the adapter is ready to supply power to your vacuum cleaner.



Figure 2.1: The Kircuit AC/DC Adapter shown plugged into a power strip, demonstrating its compact design and ease of connection to a standard electrical outlet.

3. OPERATING INSTRUCTIONS

The Kircuit AC/DC Adapter is designed for straightforward operation:

- **Powering the Vacuum:** With the adapter connected to both the vacuum cleaner and a power outlet, your ALDI DV-888DC vacuum cleaner will receive power directly from the outlet. This allows for continuous operation without relying on battery power.
- **Charging the Battery:** When the vacuum cleaner is connected to the adapter and the adapter is plugged into a live outlet, the vacuum's internal battery will begin to charge. Refer to your vacuum cleaner's manual for specific charging indicators and times.
- **Safety Features:** The adapter incorporates Over Voltage Protection (OVP), Over Current Protection (OCP), and Short Circuit Protection (SCP) to safeguard both the adapter and your connected device from electrical anomalies.



Figure 3.1: The Kircuit AC/DC Adapter with its 6.5 ft (approximately 2 meter) cord fully extended, illustrating the reach it provides for connecting to power outlets.

4. MAINTENANCE AND CARE

To ensure the longevity and optimal performance of your Kircuit AC/DC Adapter, follow these maintenance guidelines:

- **Keep Clean:** Wipe the adapter with a soft, dry cloth to remove dust and dirt. Do not use liquid cleaners or abrasive materials.
- **Store Properly:** When not in use, store the adapter in a cool, dry place away from direct sunlight and extreme temperatures. Avoid tightly coiling the cable to prevent damage.
- **Handle with Care:** Avoid dropping the adapter or subjecting it to strong impacts. Do not pull the cable to unplug the adapter from the wall outlet or the device; always grasp the plug itself.
- **Inspect Regularly:** Periodically check the cable and connectors for any signs of fraying, cuts, or bent pins. If any damage is observed, discontinue use immediately.

5. TROUBLESHOOTING

If you encounter issues with your Kircuit AC/DC Adapter, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Adapter not supplying power.	<ul style="list-style-type: none">Loose connection.Faulty power outlet.Damaged adapter cable/connector.	<ul style="list-style-type: none">Ensure all connections (wall to adapter, adapter to device) are secure.Test the power outlet with another device.Inspect the adapter for physical damage. If damaged, discontinue use.
Vacuum cleaner battery not charging.	<ul style="list-style-type: none">Adapter not connected properly.Vacuum cleaner's battery is worn out.Vacuum cleaner's charging circuit issue.	<ul style="list-style-type: none">Verify the adapter is securely connected to both the wall and the vacuum.<i>Rechargeable batteries typically last 2-3 years.</i> Consider if the vacuum's battery needs replacement.Consult your vacuum cleaner's manual or manufacturer for device-specific charging issues.
Adapter feels unusually hot.	<ul style="list-style-type: none">Overload or poor ventilation.Internal fault.	<ul style="list-style-type: none">Ensure the adapter is not covered and has adequate airflow.Unplug immediately. If the issue persists, discontinue use.

6. SPECIFICATIONS

Key technical specifications for the Kircuit AC/DC Adapter:

Feature	Detail
Brand	Kircuit
Manufacturer	Shenzhen Waweis Technology Co., Ltd
Input Voltage	100-240VAC, 50/60Hz
Output Voltage	21V (<i>Specific output current not provided, but implied by compatibility</i>)
Compatible Devices	ALDI 26015 815313 21V Cordless Cyclonic 2 in 1 Stick Vacuum Cleaner (DV-888DC, DV888DC)
Connector Type	Barrel Connector
Color	Black
Special Features	OVP (Over Voltage Protection), OCP (Over Current Protection), SCP (Short Circuit Protection)
Power Source	Corded Electric

7. SUPPORT INFORMATION

For further assistance or inquiries regarding your Kircuit AC/DC Adapter, please contact the manufacturer or seller through the platform where the product was purchased. Ensure you have your product details, including the ASIN (B0DPQFT515), ready when seeking support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DPQFT515>

More documents and user manuals: <https://manuals.plus/>