

Manuals.plus /

› Foxdawn /

› Foxdawn Portable Bluetooth Speaker Instruction Manual

## Foxdawn PT300

# Foxdawn Portable Bluetooth Speaker Instruction Manual

Model: PT300

Brand: Foxdawn

## 1. INTRODUCTION

---

Thank you for choosing the Foxdawn Portable Bluetooth Speaker. This powerful and versatile speaker is designed to deliver exceptional audio quality with deep bass and clear treble, complemented by a dynamic LED light show. It is built for both indoor and outdoor use, featuring a rugged, splash-resistant design and long-lasting battery life. This manual provides essential information for setting up, operating, and maintaining your speaker to ensure optimal performance and longevity.





Figure 1.1: Foxdown Portable Bluetooth Speaker. This image shows the speaker from an angled front view, highlighting its two large illuminated woofers and integrated carry handle.

## 2. SAFETY INFORMATION

---

Please read all safety instructions carefully before using the speaker. Keep this manual for future reference.

- **Water Resistance:** The speaker is IPX4 splashproof, meaning it can withstand splashes of water. Do not submerge the speaker in water or expose it to heavy rain. Ensure all port covers are securely closed before exposure to moisture.

- **Battery Safety:** Do not attempt to replace the battery. Do not expose the speaker to extreme temperatures (above 45°C/113°F or below 0°C/32°F). Avoid direct sunlight for prolonged periods.
- **Charging:** Use only the provided power cable for charging. Ensure the charging port is dry before connecting the power cable.
- **Cleaning:** Disconnect the power cable before cleaning. Use a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Disassembly:** Do not attempt to disassemble, repair, or modify the speaker. This will void the warranty and may cause damage or injury.
- **Hearing Protection:** Avoid listening at high volume levels for extended periods to prevent hearing damage.

### 3. WHAT'S IN THE BOX

---

Carefully unpack the box and ensure all items are present and in good condition:

- Foxdawn Portable Bluetooth Speaker (Model: PT300)
- Power Cable
- Quick Start Guide



Figure 3.1: Speaker with included power cable. This image shows the speaker from a top-down angle, with a power cable visible next to it, indicating the included accessories.

## 4. PRODUCT OVERVIEW

---

The Foxdawn PT300 speaker features a robust design with intuitive controls and powerful audio components.

### 4.1. Components

- **Woofers:** Two 5.25-inch full-range woofers for deep bass.
- **Tweeters:** Two 2.15-inch tweeters for clear highs.
- **Bass Reflex Port:** Enhances bass response.
- **Control Panel:** Top-mounted panel with silicone tactile buttons for power, volume, playback, light control, and bass/treble adjustment. Buttons are backlit for visibility in dim light.
- **Silicone Sealing Gasket:** Provides IPX4 splash resistance for outdoor use.

- **Integrated Handle:** For easy portability.



Figure 4.1: Speaker internal components. This image illustrates the speaker's internal structure, showing the two 5.25-inch full-range woofers and two 2.15-inch tweeters, along with the bass reflex port.

# IPX4 Splashproof



Enjoy worry-free listening in any environment!



Figure 4.2: Control panel and splashproof features. This image highlights the top control panel with its silicone tactile buttons and the overall IPX4 splashproof design, including the silicone sealing gasket.

## 5. SETUP

---

### 5.1. Charging the Speaker

Before first use, fully charge the speaker. Connect the provided power cable to the speaker's charging port and plug the other end into a power outlet. The charging indicator lights will show the charging status. A full charge provides up to 15 hours of playtime.

# Up to 15 Hours of Playtime

Party from dusk till dawn with up to 15 hours of play time on a single charge.



Charge & play without interruption  
(PD30W Fast-charging support)

# 15H



Figure 5.1: Speaker battery life. This image visually represents the speaker's capability of providing up to 15 hours of playtime on a single charge, with support for PD30W fast charging.

## 5.2. Power On/Off

Press and hold the Power button on the control panel to turn the speaker ON or OFF.

## 5.3. Bluetooth Pairing

1. Turn on the speaker. It will automatically enter Bluetooth pairing mode, indicated by a flashing LED light.
2. On your device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
3. Select "Foxdawn PT300" from the list.
4. Once paired, the LED light will stop flashing and remain solid, and you will hear a confirmation sound.

The speaker uses Bluetooth 5.3 for stable and high-quality audio transmission with a range of up to 50 feet.

## 5.4. TWS (True Wireless Stereo) Pairing

To achieve a wider stereo sound experience, you can pair two Foxdawn PT300 speakers together using TWS technology.

1. Ensure both speakers are turned ON and not connected to any other Bluetooth device.

2. On one speaker (this will be the primary speaker), press the TWS button (often indicated by an infinity symbol or two interlocking circles).
3. The speaker will search for another Foxdawn PT300 speaker.
4. Once connected, both speakers will emit a confirmation sound, and their LED indicators will change to reflect the TWS connection.
5. Now, connect your device to the primary speaker via Bluetooth as described in section 5.3. Audio will play through both speakers in stereo.



Figure 5.2: TWS pairing of two speakers. This image demonstrates two Foxdawn speakers connected wirelessly, illustrating the True Wireless Stereo (TWS) feature for enhanced sound.

## 6. OPERATING THE SPEAKER

---

### 6.1. Basic Playback Controls

- **Play/Pause:** Press the Play/Pause button (usually a triangle or two vertical bars) to start or pause

playback.

- **Volume Up/Down:** Press the Volume + or Volume - buttons to adjust the volume.
- **Next/Previous Track:** Press and hold the Volume + or Volume - buttons (or dedicated track skip buttons if present) to skip to the next or previous track.

## 6.2. LED Light Show

The speaker features a dynamic LED light show with multiple modes and colors to enhance your listening experience.

- **Change Light Mode:** Press the Light Mode button (often a sun or star icon) to cycle through 5 different light modes.
- **Change Light Color:** Some modes allow color changes. Press the Color button (if available) to cycle through 10 different colors.
- **Turn Lights Off:** Press and hold the Light Mode button to turn the LED lights off.



Figure 6.1: Dynamic LED light show. This image displays the speaker's futuristic light show capabilities, detailing 5 different light modes and 10 available colors that pulse with the music.

## 6.3. Sound Customization (Bass & Treble)

Fine-tune your audio experience by adjusting the bass and treble levels directly on the speaker.

- **Adjust Bass:** Use the dedicated Bass +/- buttons to increase or decrease the bass output.
- **Adjust Treble:** Use the dedicated Treble +/- buttons to increase or decrease the treble output.
- **Reset EQ:** Press the Reset button to return bass and treble settings to their default levels.



Figure 6.2: Bass and Treble adjustment. This image shows the speaker's control panel with clear indications for adjusting bass and treble, allowing users to customize their sound profile.

#### 6.4. Auxiliary Input (AUX)

Connect devices without Bluetooth capability using a 3.5mm audio cable (not included) to the AUX input port on the speaker.

1. Connect one end of the 3.5mm audio cable to your device's headphone jack.
2. Connect the other end to the AUX input port on the speaker.
3. The speaker will automatically switch to AUX mode, or you may need to press a Mode button to select AUX.

The speaker also includes an MP3 player function, allowing direct playback from compatible storage devices (details not specified in product data, assume standard USB/SD card input if available, but not explicitly

mentioned for this model).

## 7. MAINTENANCE

---

Proper care and maintenance will extend the life of your Foxdawn Portable Bluetooth Speaker.

- **Cleaning:** Use a soft, lint-free cloth to wipe the speaker's surface. For stubborn dirt, slightly dampen the cloth with water. Do not use harsh chemicals, cleaning sprays, or abrasive materials.
- **Storage:** When not in use for extended periods, store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To maintain battery health, avoid fully discharging the battery frequently. If storing for a long time, charge the battery to about 50-70% every few months.
- **Water Resistance:** While IPX4 splashproof, avoid exposing the speaker to excessive moisture. Ensure all port covers are sealed when near water. Dry the speaker thoroughly if it gets wet.

## 8. TROUBLESHOOTING

---

If you encounter issues with your speaker, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Speaker does not turn on.	Low battery; Power button not pressed correctly.	Charge the speaker fully. Press and hold the Power button for a few seconds.
No sound from speaker.	Volume too low; Device not paired; Incorrect input mode.	Increase speaker and device volume. Re-pair Bluetooth. Ensure correct input mode (Bluetooth/AUX).
Bluetooth connection unstable or fails.	Speaker too far from device; Interference; Device Bluetooth issue.	Move speaker closer to device (within 50 ft). Avoid obstacles. Turn off other Bluetooth devices. Restart speaker and device.
TWS pairing fails.	Speakers already paired to other devices; Too far apart.	Ensure both speakers are disconnected from other devices. Place speakers close to each other. Follow TWS pairing steps carefully.
LED lights not working.	Lights turned off; Malfunction.	Press the Light Mode button to cycle through modes. If still not working, contact support.

## 9. SPECIFICATIONS

Feature	Detail
Model Name	PT300
Brand	Foxdawn
Speaker Type	Portable Speaker
Speaker Maximum Output Power	240 Watts (Peak)
Woofer Diameter	5.25 Inches (x2)
Tweeter Diameter	2 Inches (x2)
Connectivity Technology	Bluetooth, Auxiliary
Wireless Communication Technology	Bluetooth 5.3
Bluetooth Range	50 Feet
Battery Life	Up to 15 Hours
Power Source	Battery Powered
Water Resistance Level	IPX4 Splashproof
Product Dimensions (D x W x H)	7.67"D x 7.83"W x 15.35"H
Item Weight	12.49 pounds
Material	Acrylonitrile Butadiene Styrene (ABS), Metal
Control Method	Push Button
Included Components	Power Cable, Quick Start Guide
UPC	762949061114

## 10. WARRANTY AND SUPPORT

### 10.1. Warranty Information

The Foxdawn Portable Bluetooth Speaker (Model PT300) comes with a **Lifetime Warranty**. This warranty covers manufacturing defects and ensures the product's quality and performance under normal use. Please retain your proof of purchase for warranty claims.

For specific terms and conditions of the warranty, please refer to the Quick Start Guide included in your product packaging or visit the official Foxdawn website.

### 10.2. Customer Support

If you have any questions, require technical assistance, or need to make a warranty claim, please contact

Foxdawn customer support. Details for contacting support are typically found in the Quick Start Guide or on the official Foxdawn website.

When contacting support, please be prepared to provide your product model number (PT300) and a detailed description of the issue.