



[Manuals.plus](#) /

› [GREENER](#) /

› GREENER Electric Pressure Washer 4500 PSI, 4 Quick Nozzles, 2.4GPM, 23FT Outlet Hose, 16FT Power Cord, Power Washer Electric Powered with Soap Cannon for Car, House, Driveway, Patio Cleaning-Blue 4500PSI

## GREENER RM

# GREENER Electric Pressure Washer 4500 PSI User Manual

Model: RM

Brand: GREENER

## INTRODUCTION

---

Welcome to the GREENER Electric Pressure Washer user manual. This guide provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new pressure washer. Please read this manual thoroughly before first use and keep it for future reference.



The GREENER Electric Pressure Washer, featuring a compact design, comes with a spray gun, four quick-connect nozzles, a foam cannon, and hoses for comprehensive cleaning tasks.

## IMPORTANT SAFETY INFORMATION

---

Always wear appropriate personal protective equipment (PPE) including eye protection and gloves when operating the pressure washer.

Ensure the power cord and electrical outlet are in good condition and suitable for outdoor use.

Never point the spray gun at people, pets, or electrical outlets.

Disconnect the power supply before performing any maintenance or cleaning.




The spray gun features a safety lock mechanism to prevent accidental discharge, ensuring user safety during operation and storage.

## SETUP GUIDE

---

Follow these steps to set up your GREENER Electric Pressure Washer:

1. **Unpack Components:** Carefully remove all parts from the packaging. Verify all components listed in the packing list are present.
2. **Attach High-Pressure Hose:** Connect the high-pressure hose to the pressure washer's outlet and to the spray gun. Ensure connections are secure.
3. **Connect Water Supply:** Connect a garden hose (not included) to the water inlet of the pressure washer. Ensure the water supply is clean and free of debris. The unit supports both faucet and self-priming (bucket) water sources.

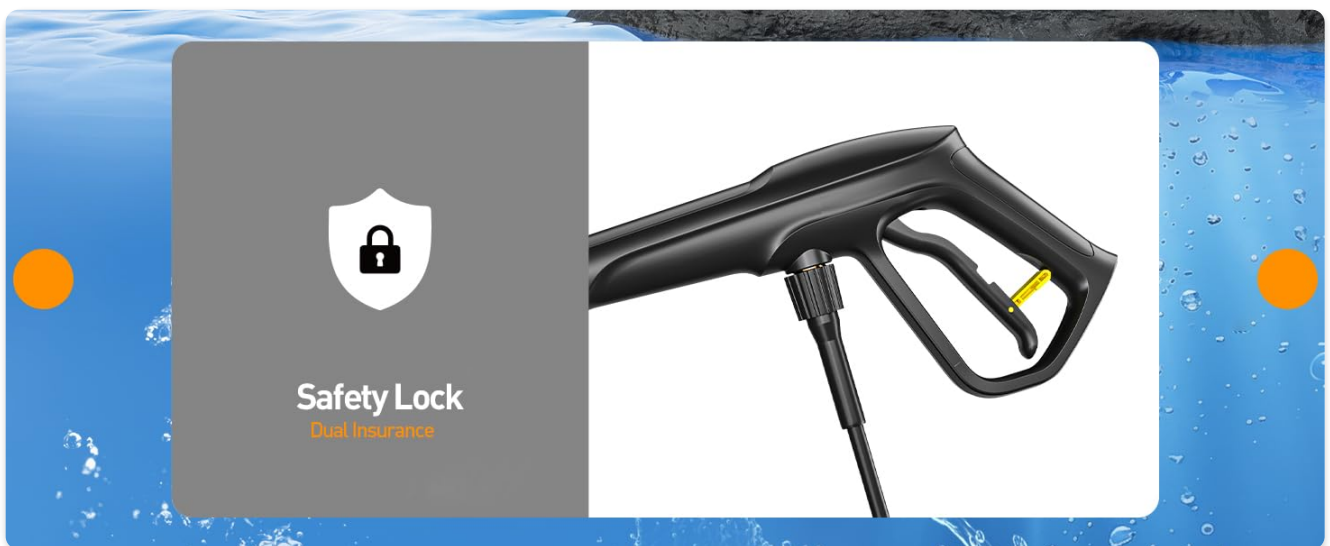


The pressure washer offers versatile water intake options, allowing connection to a standard faucet or drawing water directly from a bucket for self-priming.

4. **Connect Power Cord:** Plug the 16ft power cord into a grounded electrical outlet.
5. **Prepare Spray Gun:** Before attaching a nozzle, pull the trigger on the spray gun to exhaust any air from the system

until a steady stream of water emerges.

6. **Select Nozzle:** Choose the appropriate quick-connect nozzle for your cleaning task (0°, 15°, 25°, 40°). Insert the selected nozzle into the spray gun until it clicks securely into place.

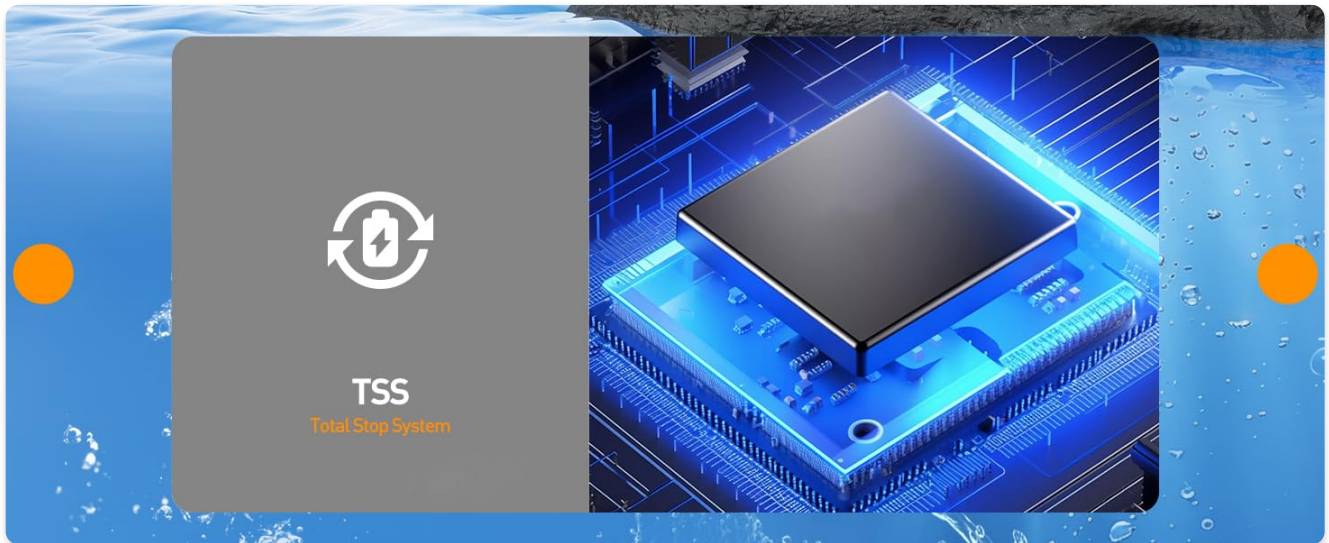

The pressure washer includes four quick-connect nozzles: 0° (red) for powerful blasting, 15° (yellow) for heavy-duty power, 25° (green) for general cleaning, and 40° (white) for gentle spraying.

7. **Add Detergent (Optional):** If using the foam cannon, fill the dedicated detergent bottle with appropriate pressure washer detergent. Attach the foam cannon to the spray gun.



The included foam cannon allows for easy application of detergent, creating a thick foam for effective cleaning of vehicles and other surfaces.

Your pressure washer is now ready for operation.

## OPERATING YOUR PRESSURE WASHER

---

### Starting the Unit:

- Ensure the water supply is turned on.
- Turn the power switch to the "ON" position. The pump will run for a few seconds to build pressure and then shut off. This is normal.
- Squeeze the trigger on the spray gun to begin spraying. The pump will activate automatically when the trigger is

engaged.

## Nozzle Selection and Application:

Nozzle Color	Spray Angle	Recommended Use
Red	0°	For cracks and caked stains (e.g., concrete, metal). Use with extreme caution due to high pressure.
Yellow	15°	For driveways, concrete, and siding. Provides a focused wash for tough dirt.
Green	25°	For general cleaning of decks, cars, and fences. Offers a wider spray for broader coverage.
White	40°	For windows and outdoor furniture. Provides a uniform, gentle spray.



The 0° nozzle delivers a powerful, concentrated stream for removing stubborn dirt and grime from hard surfaces like concrete and metal.



The 15° nozzle provides a focused spray, ideal for cleaning driveways, concrete, and siding, effectively tackling tough dirt.



The 25° nozzle offers a wider spray for general cleaning tasks such as washing decks, cars, and fences.



The 40° nozzle provides a gentle, uniform spray, suitable for cleaning delicate surfaces like windows and outdoor furniture.

**Total Stop System (TSS):** The pump automatically stops when the trigger is not engaged, conserving energy and extending the life of the pump and motor.



The Total Stop System (TSS) automatically shuts off the pump when the spray gun trigger is released, saving energy and prolonging the unit's lifespan.

## MAINTENANCE AND STORAGE

Proper maintenance ensures the longevity and optimal performance of your pressure washer.

### After Each Use:

- **Flush System:** Disconnect the power and water supply. Run the pressure washer for a few seconds to release any remaining pressure and water from the system.
- **Clean Nozzles:** Remove nozzles and rinse them with clean water. Use the included nozzle cleaning tool to clear any blockages.
- **Drain Detergent Tank:** If used, empty and rinse the detergent tank thoroughly.
- **Wipe Down Unit:** Clean the exterior of the pressure washer with a damp cloth.

### Storage:

- Store the pressure washer in a dry, frost-free area.
- Coil the high-pressure hose and power cord neatly.
- Secure the spray gun and nozzles in their designated holders on the unit.



The pressure washer features convenient integrated storage for the power cord, high-pressure hose, spray gun, and nozzles, promoting a clutter-free storage solution.

## TROUBLESHOOTING GUIDE

If you encounter issues with your pressure washer, refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
No water coming out	Water supply off or restricted	Check water tap, ensure hose is not kinked.
Low pressure	Clogged nozzle	Clean or replace nozzle.
Low pressure	Air in pump	Bleed air from pump by running unit with trigger open and no nozzle attached until steady water flow.

Problem	Possible Cause	Solution
Motor stops frequently	Overheating or low voltage	Allow unit to cool. Check power supply for adequate voltage.
Unit does not start	Power cord not plugged in or faulty outlet	Check power connection and try a different outlet.

For issues not listed here, please contact customer service.

## PRODUCT SPECIFICATIONS

Feature	Detail
Brand	GREENER
Model	RM
Maximum Pressure	4500 PSI
Maximum Flow Rate	2.4 GPM
Power Source	AC Electric
Hose Length	23 Feet
Power Cord Length	16 Feet
Product Dimensions	11"L x 9"W x 25"H
Item Weight	14.47 pounds
UPC	717018038474

## WARRANTY AND CUSTOMER SUPPORT

GREENER provides a warranty on every pressure washer sold, covering defects not caused by improper use.

For any questions during use or to claim warranty service, please reach out to our customer service for assistance. Trust GREENER's commitment to quality and your satisfaction.

Visit the official GREENER Store for more information: [GREENER Store](#)