

GREENER B0DPQM48H7

Greener Electric Pressure Washer Instruction Manual

Model: B0DPQM48H7

1. INTRODUCTION

Thank you for choosing the Greener Electric Pressure Washer. This manual provides essential information for the safe and efficient operation, assembly, maintenance, and troubleshooting of your new pressure washer. Please read this manual thoroughly before use and retain it for future reference.

2. SAFETY INFORMATION

Always observe basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and personal injury. Familiarize yourself with the controls and proper use of the equipment.

- **Read All Instructions:** Before operating the pressure washer, read and understand all safety warnings and operating instructions.
- **Wear Eye Protection:** Always wear appropriate eye protection (safety glasses or goggles) to prevent injury from high-pressure spray.
- **Proper Electrical Connection:** Ensure the pressure washer is connected to a grounded outlet. Do not modify the plug.
- **Keep Children Away:** Do not allow children or untrained individuals to operate the pressure washer.
- **Avoid Direct Spray:** Never direct the spray at people, pets, electrical devices, or the unit itself.
- **Stable Surface:** Operate the pressure washer on a stable, level surface to prevent tipping.

3. PACKAGE CONTENTS

Verify that all components are present upon unpacking. If any parts are missing or damaged, contact customer service.

- Greener Electric Pressure Washer Unit

- High-Pressure Hose (23 ft)
- Spray Gun with Lance
- Quick-Connect Nozzles (0°, 15°, 25°, 40°)
- Foam Cannon/Detergent Bottle
- Power Cord (16 ft)
- Water Inlet Connector
- Assembly Hardware & Manual



Figure 3.1: All components included in the Greener Electric Pressure Washer package.

4. SETUP AND ASSEMBLY


Follow these steps to assemble your pressure washer before first use.

1. **Attach the Handle:** Secure the handle to the main unit using the provided screws.
2. **Install Hose and Cord Holders:** Attach the power cord hook and spray lance holder to the unit.
3. **Connect High-Pressure Hose:** Connect one end of the high-pressure hose to the pressure washer's outlet and the other end to the spray gun. Ensure connections are tight.

4. **Connect Water Supply:** Attach your garden hose to the water inlet connector on the pressure washer. The unit supports both faucet and bucket water sources. Ensure the water supply is turned on before starting the unit.
5. **Attach Nozzle:** Select the desired quick-connect nozzle and firmly insert it into the end of the spray lance until it clicks into place.



Figure 4.1: Visual guide for easy installation of the pressure washer components.

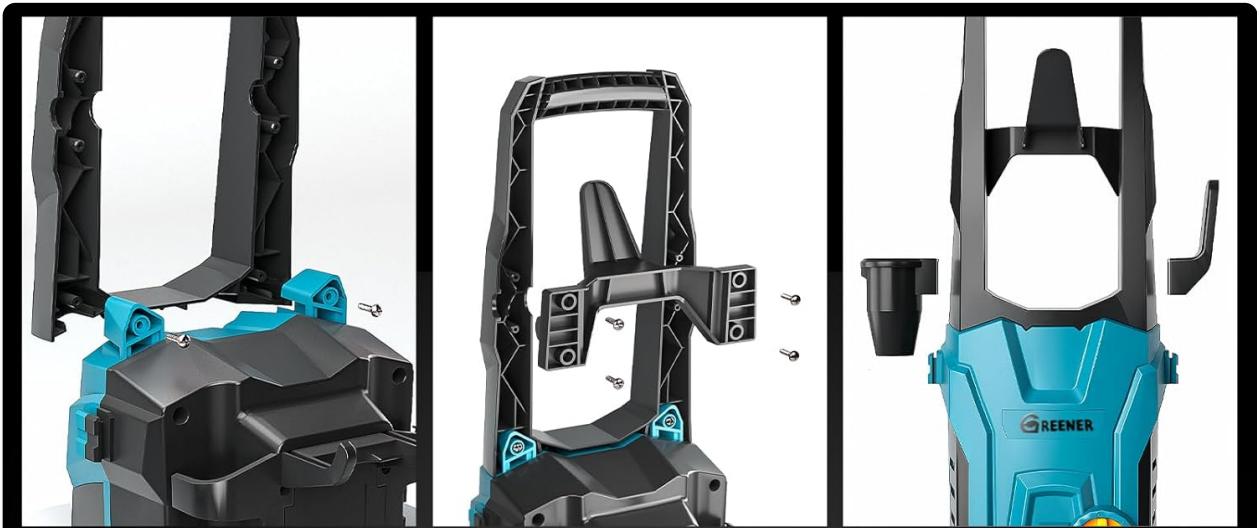

Easy Installation



Figure 4.2: The pressure washer can draw water from a standard faucet or self-prime from a bucket.

5. OPERATING INSTRUCTIONS

Proper operation ensures effective cleaning and extends the life of your pressure washer.

5.1 Nozzle Selection

The Greener Electric Pressure Washer includes four quick-connect metal spray nozzles and a foam cannon, each designed for specific cleaning tasks:

- **0° (Red):** Powerful blasting for stubborn stains and hard-to-reach areas. Use with caution.
- **15° (Yellow):** Heavy-duty power for concrete, brick, and other hard surfaces.
- **25° (Green):** General cleaning for decks, cars, and fences.
- **40° (White):** Gentle spraying for windows, outdoor furniture, and delicate surfaces.
- **Foam Cannon:** For applying detergent or soap.



SUPERIOR PRESSURE

Figure 5.1: Quick-connect nozzles for various cleaning applications.

5.2 Detergent Application

To use the foam cannon, fill the dedicated detergent bottle with your preferred cleaning solution. Attach the foam cannon to the spray gun. The system is designed to bypass the pump, simplifying maintenance.



Figure 5.2: Applying foam with the soap mode and foam cannon.

5.3 General Cleaning


The electric pressure washer delivers powerful cleaning performance suitable for various household tasks:

- **Driveways & Patios:** Effectively removes dirt, grime, and mildew.
- **Cars & Vehicles:** Gentle enough for vehicle exteriors with appropriate nozzle selection.
- **House Siding:** Cleans vinyl, aluminum, and other siding materials.
- **Decks & Fences:** Restores wood and composite surfaces.

Powerful Pressure Washer with Mutil-Function



Driveway

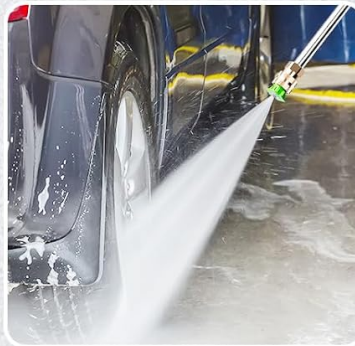

Car



The Siding



Furniture



Cracks



Deck

Figure 5.3: Versatile cleaning applications for the pressure washer.

6. MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your pressure washer.

- **Automatic Stop System:** The pump automatically stops when the trigger is not engaged. This conserves energy and prolongs the life of the pump and motor.
- **Nozzle Cleaning:** Periodically clean nozzles to prevent blockages and maintain spray pattern.
- **Water Filter:** Check and clean the water inlet filter regularly to prevent debris from entering the pump.
- **Winter Storage:** If storing in freezing temperatures, drain all water from the pump and hoses to prevent damage.

7. TROUBLESHOOTING

If you encounter issues, refer to this section for common solutions.

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Unit does not start	No power supply; GFCI tripped; On/Off switch off	Check power connection, reset GFCI, turn switch to ON.
Low pressure	Insufficient water supply; Clogged nozzle; Air in pump	Ensure full water flow, clean nozzle, purge air by running without nozzle until steady stream.
Water leaks	Loose connections; Damaged O-rings	Tighten all connections, replace damaged O-rings.

8. SPECIFICATIONS

Feature	Detail
Brand	GREENER
Power Source	AC Electric
Item Weight	15.9 Pounds
Hose Length	23 Feet
Power Cord Length	16 Feet
Product Dimensions	12"L x 12"W x 15"H
Maximum Flow Rate	3 Gallons Per Minute
Nozzle Types	0°, 15°, 25°, 40° Quick-Connect, Foam Cannon

9. WARRANTY AND SUPPORT

GREENER provides a warranty on every pressure washer sold, covering defects not caused by improper use. For any questions during use or to claim warranty service, please reach out to our customer service for assistance. Trust GREENER's commitment to quality and your satisfaction.

For further support, visit the official [GREENER Store on Amazon](#).