

Effireli YK-RM-C3184

User Manual

EFFIRELI RM-C3184 REPLACEMENT REMOTE CONTROL

Model: YK-RM-C3184

INTRODUCTION

This manual provides instructions for the Effireli RM-C3184 Replacement Remote Control, designed for various JVC TV models. This remote offers a straightforward, plug-and-play experience with no programming or setup required. Simply insert batteries and begin operation.

For a list of compatible models, please refer to the "Specifications" section or the product description.

PRODUCT OVERVIEW



Image: Front view of the Effireli RM-C3184 Replacement Remote Control. The remote is black with various buttons, including

a power button, number pad, volume and channel controls, navigation buttons, and dedicated app buttons like Netflix and YouTube.

SETUP

- 1. Unpack the Remote:** Carefully remove the remote control from its packaging.
- 2. Insert Batteries:** Open the battery compartment cover on the back of the remote. Insert two AAA batteries (not included), ensuring correct polarity (+ and -). Close the battery compartment.
- 3. Ready to Use:** The remote is pre-programmed and requires no additional setup. Point the remote towards your JVC TV and begin operation.

Note: If the remote does not respond, ensure batteries are inserted correctly and are not depleted. Also, verify that your TV model is listed as compatible.

OPERATING INSTRUCTIONS

Familiarize yourself with the functions of each button on your RM-C3184 remote control.

Button	Function
Power (Red Circle with Line)	Turns the TV on or off.
NETFLIX	Direct access to the Netflix application.
Source (Rectangle with Arrow)	Selects the input source (e.g., HDMI, AV, TV).
Number Pad (0-9)	Enters channel numbers or numerical input.
TV	Switches to TV mode.
-/-- (Dash/Double Dash)	Used for entering two-digit channel numbers or other specific functions.
Swap (Double Arrow)	Switches between the current and previously viewed channel.
Volume Up (+) / Down (-)	Adjusts the volume level.
Mute (Speaker with Slash)	Mutes or unmutes the TV sound.
Channel Up (P^)/ Down (P^v)	Changes the TV channel up or down.
MENU	Opens the main menu of the TV.
Q.MENU (Quick Menu)	Opens the quick settings or quick menu.
Navigation Arrows (Up, Down, Left, Right)	Navigates through menus and options.
OK	Confirms a selection or enters a menu.
BACK	Returns to the previous screen or menu.
EXIT	Exits the current menu or application.
Info (i)	Displays information about the current program or input.

Button	Function
Media Player (Film Strip Icon)	Accesses the media player function.
EPG (Electronic Program Guide)	Opens the Electronic Program Guide.
YouTube	Direct access to the YouTube application.
Favorites/Search (Star with Magnifying Glass)	Accesses favorite channels or search function.
TXT (Teletext)	Activates or deactivates Teletext.
LANG. (Language)	Changes the audio language.
SUBT. (Subtitles)	Turns subtitles on or off.
Audio Description (Speaker with Plus)	Activates or deactivates audio description.
Media Controls (Rewind, Play/Pause, Fast Forward)	Controls media playback (e.g., USB, streaming).
Color Buttons (Red, Green, Yellow, Blue)	Perform specific functions depending on the current menu or application.

MAINTENANCE

- **Cleaning:** Wipe the remote with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones of the same type.
- **Storage:** If the remote will not be used for an extended period, remove the batteries to prevent leakage and damage.
- **Avoid Damage:** Do not drop the remote, expose it to extreme temperatures, or immerse it in water.

TROUBLESHOOTING

Problem	Solution
Remote not responding.	◦ Check if batteries are inserted correctly with proper polarity. ◦ Replace old batteries with new ones. ◦ Ensure there are no obstructions between the remote and the TV's IR sensor. ◦ Verify that the remote is compatible with your specific JVC TV model.
Certain buttons do not work.	◦ Ensure the remote is pointed directly at the TV. ◦ Some functions may be specific to certain TV models or modes. ◦ Clean the remote's surface, especially around the unresponsive buttons, to remove any debris.

Problem	Solution
TV does not turn on/off.	◦ Confirm the TV is plugged into a power outlet and is receiving power. ◦ Try using the power button on the TV itself to confirm TV functionality.

SPECIFICATIONS

- **Model:** YK-RM-C3184
- **Brand:** Effireli
- **Connectivity Technology:** Infrared (IR)
- **Power Source:** 2 x AAA Batteries (not included)
- **Special Feature:** No Programming Required
- **Compatible Devices:** JVC Televisions (Specific models include: LT-32VH52K, LT-49V62JU, LT-32VF52J, LT-32VH53J, LT-39V3100, LT-39VF52J, LT-43VF52J, LT-43VF52K, LT-32VH53I, LT-43VF53A, LT-43VU72A, LT-43VU72J, LT-49V57JF, LT-49V73AU, LT-55VU800, LT-65VU800, LT-49VU72A, LT-49VU72K, LT-49VU800, LT-55V72AU, LT-55V73AU, LT-55V77JU, LT-55V93JU, LT-55VU72K, LT-55VU900, LT-65V73AU, LT-65V82AU, LT-55VU63k, LT-24VH52J, LT-32VF52K)
- **Dimensions:** Approximately 9.13 x 1.97 x 0.91 inches
- **Weight:** Approximately 2.89 ounces (without batteries)

WARRANTY AND SUPPORT

This Effireli RM-C3184 Replacement Remote Control comes with a **12-month warranty** covering manufacturing defects from the date of purchase. Additionally, a **30-day money-back guarantee** is offered. Returns and exchanges are accepted within the warranty period for manufacturing defects. For technical support, warranty claims, or inquiries regarding compatibility, please contact the seller directly through the platform where the product was purchased. Provide your order number and a detailed description of the issue for prompt assistance.