



Manuals.plus /

› DEIME /

› DEIME Dual Zone Air Fryer 10.6 QT - Instruction Manual

## DEIME AZ RCNJ-US 922DSV

# DEIME Dual Zone Air Fryer 10.6 QT Instruction Manual

Model: AZ RCNJ-US 922DSV

[Safety](#)

[Overview](#)

[Setup](#)

[Operation](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

## INTRODUCTION

---

Thank you for choosing the DEIME Dual Zone Air Fryer. This appliance is designed to provide a healthy and convenient way to cook a variety of meals with little to no oil. Please read this manual thoroughly before use to ensure safe and optimal operation.

## IMPORTANT SAFETY INFORMATION

---

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury.

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.

- Do not use appliance for other than intended use.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not cover the air intake or air outlet vents while the appliance is operating.
- Ensure the appliance is placed on a stable, level, heat-resistant surface.

## PRODUCT OVERVIEW

---

### Components

- Main Unit with Digital Touch Screen Control Panel
- Dual Cooking Baskets (10.6 QT total capacity)
- Removable Non-Stick Racks for each basket
- Visual Cooking Window



Figure 1: Front view of the DEIME Dual Zone Air Fryer, showcasing the digital control panel and dual cooking windows.

### Key Features

- **Dual Zone Technology:** Cook two different foods at different temperatures and times simultaneously.
- **Smart Finish Function:** Synchronizes cooking times so both zones finish at the same time.
- **Match Cook Function:** Easily duplicate settings across both zones.

- **8 Preset Cooking Programs:** French fries, roast chicken, pizza, fruit dehydrator, reheat, and more.
- **Visual Cooking Window:** Monitor food progress without opening the baskets.
- **Non-Stick Baskets:** Easy to clean and prevents food from sticking.



Figure 2: Digital touch screen displaying the 8 preset cooking functions for various food types.

## SETUP

### Unpacking

1. Remove all packaging materials from the air fryer and its accessories.
2. Inspect the appliance for any damage. Do not use if damaged.
3. Clean the cooking baskets and non-stick racks with warm, soapy water. Rinse and dry thoroughly.

## Placement

- Place the air fryer on a stable, level, and heat-resistant surface.
- Ensure there is adequate air circulation around the appliance (at least 6 inches from walls or other appliances).
- Plug the power cord into a grounded electrical outlet.

## OPERATING INSTRUCTIONS

---

### Basic Operation

1. Place food into the cooking baskets. Ensure not to overfill.
2. Insert the baskets firmly into the main unit.
3. Press the Power button to turn on the display.
4. Select a preset cooking program (e.g., French Fries, Steak) or manually set the temperature and time using the +/- buttons.
5. Press the Start button to begin cooking.
6. The appliance may prompt you to "Shake" or "Turn Food" halfway through the cooking cycle for even results.

# Precise Time & Temperature Control



Figure 3: Digital display showing temperature and time settings, adjustable for precise cooking.

## Dual Zone Cooking (Smart Finish & Match Cook)

The DEIME Dual Zone Air Fryer allows for versatile cooking across two independent zones.

- **Smart Finish:**

- Set desired cooking program/settings for Zone 1.
- Set desired cooking program/settings for Zone 2.
- Press the "Smart Finish" button. The air fryer will automatically adjust the start times for each zone so they finish simultaneously.

- **Match Cook:**

- Set desired cooking program/settings for Zone 1.
- Press the "Match Cook" button. The settings from Zone 1 will be automatically applied to Zone 2.

Your browser does not support the video tag.

Video 1: Demonstration of the DEIME Dual Zone Air Fryer's control panel, showing how to set temperature, time, and utilize the

## Cooking Tips

- For best results, preheat the air fryer for 3-5 minutes before adding food.
- Shake or flip food halfway through cooking for even browning and crispiness.
- Avoid overcrowding the baskets to allow hot air to circulate effectively. Cook in batches if necessary.
- Lightly spray food with oil for extra crispiness, especially for fresh vegetables.

## MAINTENANCE AND CLEANING

---

### Cleaning the Air Fryer

1. Always unplug the appliance and allow it to cool completely before cleaning.
2. Wipe the exterior of the air fryer with a damp cloth. Do not immerse the main unit in water.
3. The cooking baskets and non-stick racks are removable and can be washed with warm, soapy water. They are not dishwasher safe.
4. For stubborn food residue, soak the baskets in warm, soapy water for 10-15 minutes before cleaning. Use a non-abrasive sponge.
5. Ensure all parts are completely dry before reassembling and storing the appliance.

**Caution:** Do not use metal scouring pads or abrasive cleaning materials, as these can damage the non-stick coating.

## TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Air fryer does not turn on.	Appliance not plugged in; power outlet malfunction; basket not inserted correctly.	Ensure plug is securely in a working outlet; check circuit breaker; ensure baskets are fully inserted and clicked into place.
Food is not crispy.	Baskets overcrowded; insufficient oil; temperature too low; cooking time too short.	Cook in smaller batches; lightly spray food with oil; increase temperature or cooking time.
White smoke coming from appliance.	Excess fat/oil from food dripping into the bottom of the basket; residue from previous use.	Clean baskets thoroughly after each use; remove excess oil from food before cooking.
Uneven cooking.	Food not shaken/flipped; baskets overcrowded.	Shake or flip food halfway through cooking; cook in smaller batches.

## SPECIFICATIONS

---

Feature	Detail
Brand	DEIME
Model Name	AZ RCNJ-US 922DSV
Capacity	10.6 Quarts
Output Wattage	1800 Watts
Max Temperature Setting	400 Degrees Fahrenheit
Control Method	Touch
Material	Stainless Steel
Special Feature	Stain Resistant
Product Dimensions	15.3"D x 16.2"W x 12"H
Item Weight	21 pounds
Nonstick Coating	Yes
Dishwasher Safe	No

## WARRANTY AND SUPPORT

---

For warranty information and customer support, please refer to the warranty card included in your product packaging or visit the official DEIME website.

If you have any questions during use, please feel free to contact us. The product has been upgraded, please refer to the Product Description picture for the latest information.