

Manuals.plus /

› SatelliteSale /

› SatelliteSale Remote Control User Manual

SatelliteSale 850063688185

SatelliteSale Remote Control User Manual

Model: 850063688185

Brand: SatelliteSale

1. INTRODUCTION AND OVERVIEW

This manual provides comprehensive instructions for the SatelliteSale Remote Control, designed as a direct replacement for Altice Optimum Cablevision Cable Box models T4HIU2101/47K and T4HU1616/47K. It aims to guide you through the setup, operation, and maintenance of your new remote, ensuring seamless control of your cable box.





Image 1.1: Front view of the SatelliteSale Replacement Remote Control. This image displays the full layout of the remote's buttons and its ergonomic design.

2. WHAT'S IN THE BOX

Upon opening your SatelliteSale Remote Control package, you should find the following items:

- 1 x SatelliteSale Remote Control

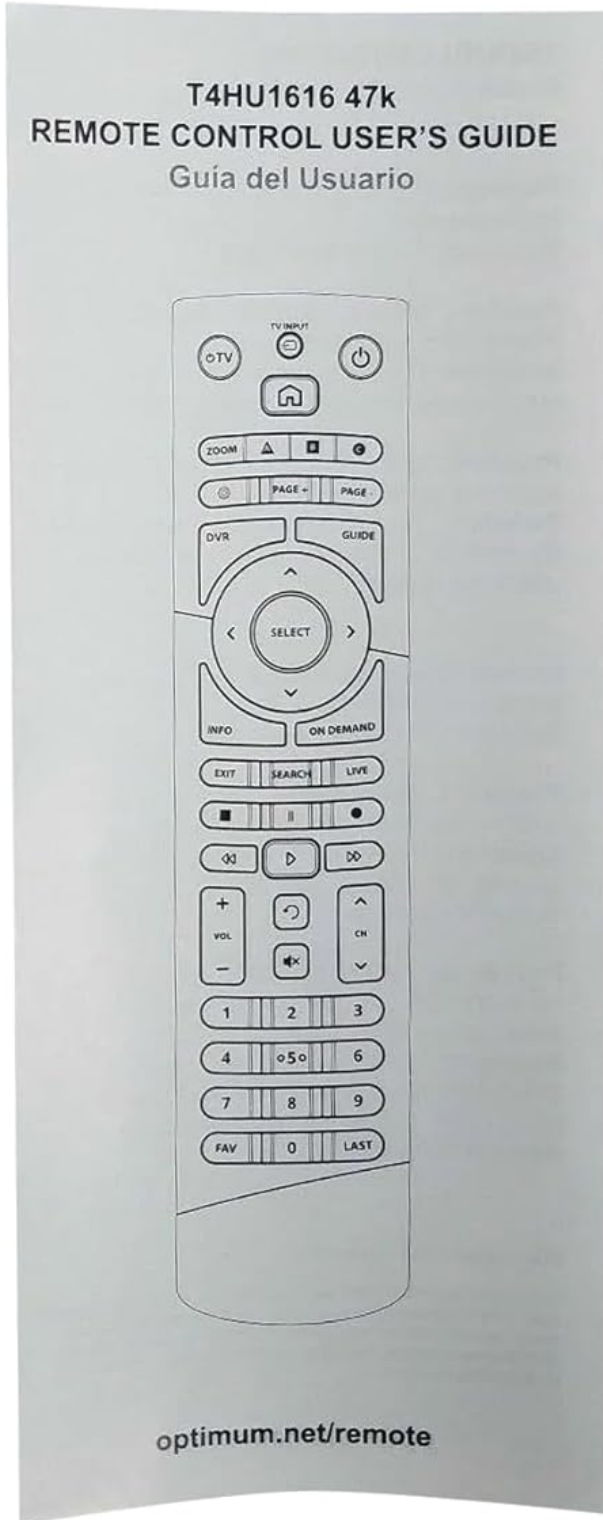


Image 2.1: Contents of the SatelliteSale Remote Control package, including the remote, a user guide (not included with this specific

product, but shown in image), and batteries.

3. PRODUCT FEATURES

The SatelliteSale Remote Control offers a range of features designed for optimal user experience:

- **Universal Compatibility:** Works perfectly with Altice Optimum Cablevision models T4HIU2101/47K and T4HU1616/47K.
- **Affordable Replacement:** A cost-effective alternative to the original remote, ideal for replacing lost or damaged remotes.
- **Intuitive Design:** Features an easy-to-navigate button layout for quick access to all essential functions.
- **Durable Construction:** Made from high-quality materials to ensure long-term reliability and comfortable everyday use.
- **Ergonomic Design:** Lightweight and comfortable to hold, making it easy to use for extended periods without strain.

4. SETUP

4.1. Battery Installation

Your SatelliteSale Remote Control requires two AAA batteries (not included unless specified in packaging). Follow these steps to install them:

1. Locate the battery compartment on the back of the remote control.
2. Press down on the tab and slide the battery cover downwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) ends align correctly with the indicators inside the compartment.
4. Slide the battery cover back into place until it clicks securely.






Image 4.1: Rear view of the remote control with the battery compartment open, showing the correct orientation for battery insertion.

5. OPERATING INSTRUCTIONS

5.1. Button Functions

Familiarize yourself with the various buttons on your remote control and their corresponding functions:

About your remote

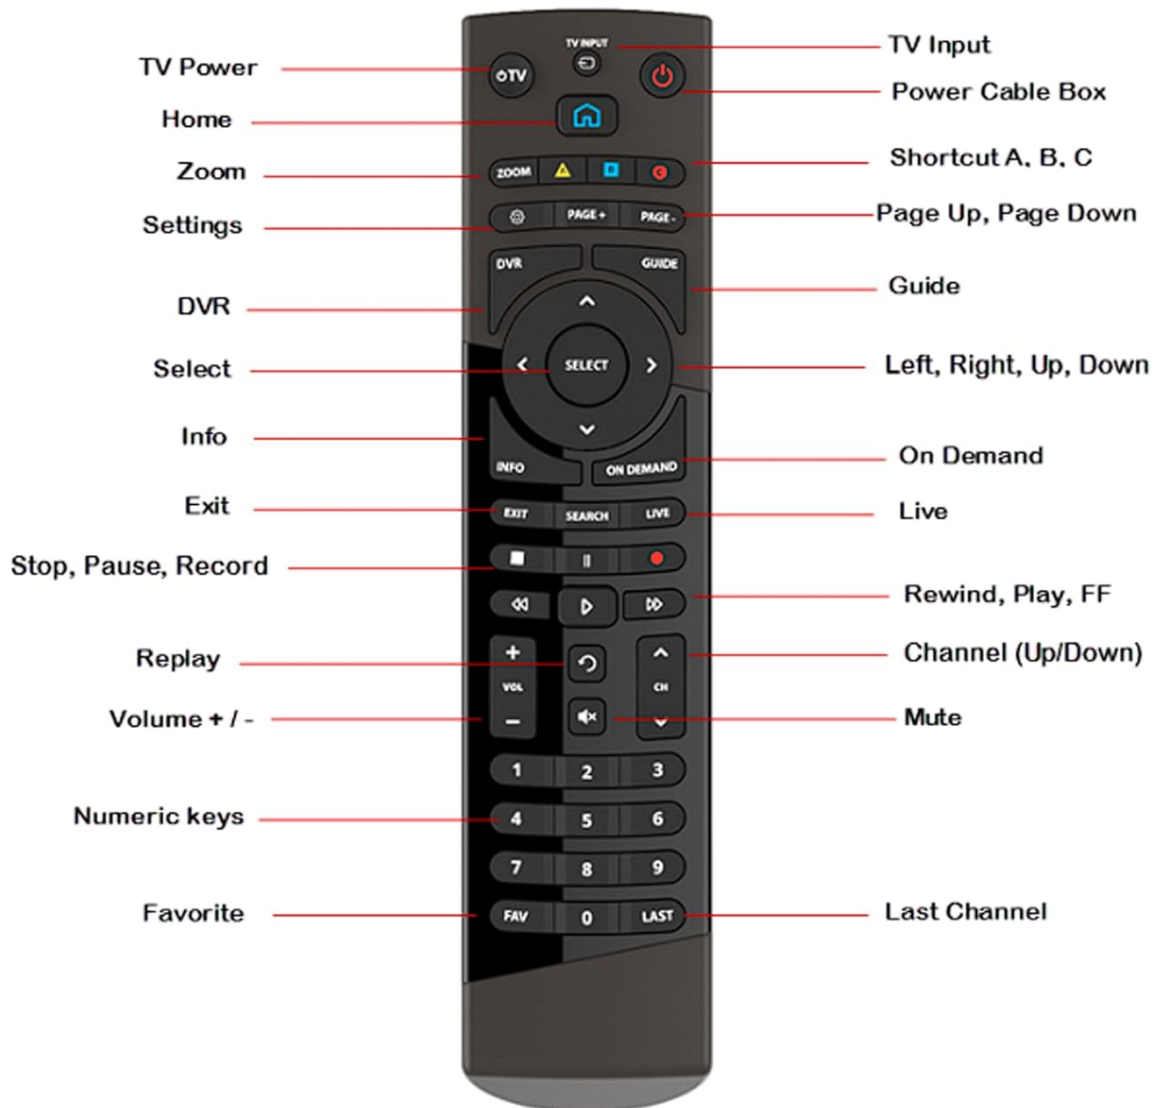

If the **HOME** button blinks red five times when pressed, your batteries are low and need to be replaced

Image 5.1: Detailed diagram illustrating the function of each button on the SatelliteSale Remote Control.

- **TV INPUT:** Switches between video input sources on your television.
- **OTV:** Accesses Optimum TV features.
- **Power Button (Red):** Turns the cable box power on or off.
- **Home Button:** Navigates to the main menu or home screen.
- **Zoom:** Adjusts the screen zoom level.
- **Shortcut A, B, C:** Programmable shortcut buttons.
- **PAGE + / PAGE -:** Navigates through pages in menus or guides.
- **DVR:** Accesses your Digital Video Recorder functions.
- **GUIDE:** Opens the program guide.
- **Directional Arrows (Up, Down, Left, Right):** Navigates through menus and options.
- **SELECT:** Confirms a selection.
- **INFO:** Displays information about the current program.
- **ON DEMAND:** Accesses On Demand content.

- **EXIT:** Exits the current menu or screen.
- **SEARCH:** Initiates a content search.
- **LIVE:** Returns to live television.
- **Media Control Buttons (Rewind, Play/Pause, Fast Forward, Stop, Record):** Controls playback of recorded or on-demand content.
- **Replay:** Jumps back a few seconds in live or recorded content.
- **VOL + / VOL -:** Adjusts the volume level.
- **Mute:** Mutes or unmutes the audio.
- **CH ^ / CH v:** Changes channels up or down.
- **Numeric Keys (0-9):** Directly enters channel numbers or other numerical inputs.
- **FAV:** Accesses favorite channels.
- **LAST:** Returns to the previously viewed channel.

5.2. Basic Operation

Once batteries are installed, point the remote control towards your Altice Optimum Cable Box. The remote operates using infrared (IR) technology, so ensure there are no obstructions between the remote and the cable box. Press the desired buttons to control your television and cable services.

6. TROUBLESHOOTING

If you encounter issues with your SatelliteSale Remote Control, refer to the following common problems and solutions:

- **Remote Not Responding:**
 - Ensure the remote is pointed directly at the cable box.
 - Check for any obstructions between the remote and the cable box's IR receiver.
 - Verify that the batteries are inserted correctly with the correct polarity (+/-).
 - Replace the batteries with fresh ones.
- **HOME Button Blinks Red Five Times:**
 - This indicates that the batteries are low and need to be replaced immediately.
- **Specific Buttons Not Working:**
 - Clean the remote's surface and buttons with a soft, dry cloth to remove any dirt or debris that might be interfering with button presses.
 - If only certain buttons are unresponsive after battery replacement and cleaning, the remote may be damaged and require replacement.

7. SPECIFICATIONS

Feature	Specification
Model Number	850063688185
Package Dimensions	8.78 x 2.28 x 0.87 inches
Item Weight	3.52 ounces
Max Number of Supported Devices	2
Compatible Devices	Set Top Box
Connectivity Technology	Infrared
Number of Buttons	25

8. MAINTENANCE

To ensure the longevity and optimal performance of your SatelliteSale Remote Control, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry, lint-free cloth to wipe the surface of the remote. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid excessive moisture and never submerge the remote in liquid.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity.
- **Battery Care:** If the remote will not be used for an extended period, remove the batteries to prevent leakage and potential damage to the remote.
- **Avoid Drops:** Protect the remote from drops and impacts, which can damage internal components.