

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Gaabor](#) /
- › [Gaabor Air Fryer Oven AF-120T01S 12L 127V User Manual](#)

Gaabor AF-120T01S

Gaabor Air Fryer Oven AF-120T01S 12L 127V User Manual

Model: AF-120T01S | Brand: Gaabor

1. INTRODUCTION

This manual provides essential instructions for the safe and efficient operation, maintenance, and troubleshooting of your Gaabor Air Fryer Oven AF-120T01S. Please read this manual thoroughly before first use and retain it for future reference.



Figure 1: Front view of the Gaabor Air Fryer Oven AF-120T01S.

2. IMPORTANT SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons.

- Read all instructions before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.

- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

3. PRODUCT COMPONENTS

The Gaabor Air Fryer Oven AF-120T01S includes the following main components:

- Main Air Fryer Oven Unit
- Instruction Manual
- Frying Basket
- Drip Tray
- Grill Rack



Figure 2: Gaabor Air Fryer Oven with included accessories (basket, tray, grill).

4. SETUP

1. **Unpacking:** Carefully remove all packaging materials from the appliance and its accessories.
2. **Cleaning:** Before first use, clean the frying basket, drip tray, and grill rack with warm soapy water. Wipe the interior and exterior of the main unit with a damp cloth. Ensure all parts are completely dry before assembly.
3. **Placement:** Place the air fryer oven on a stable, heat-resistant, and level surface. Ensure there is adequate space (at least 10 cm) around the appliance for proper ventilation. Do not place it near walls or other appliances.
4. **Power Connection:** Ensure your power outlet matches the appliance's voltage (127 Volts). Plug the power cord into a grounded wall outlet.



Figure 3: Proper placement of the Air Fryer Oven on a kitchen counter.

5. OPERATING INSTRUCTIONS

5.1. Basic Operation

1. **Prepare Food:** Place your food in the frying basket, on the grill rack, or in an oven-safe dish on the drip tray. Do not overfill.
2. **Insert Accessories:** Slide the drip tray, basket, or grill rack into the oven. Close the door securely.
3. **Power On:** Plug the appliance into a 127V power outlet. The control panel will illuminate.
4. **Set Temperature and Time:** Use the touch panel controls to select the desired temperature (up to 200°C) and cooking time (up to 60 minutes). The digital display will show the settings.
5. **Start Cooking:** Press the start button to begin the cooking process. The internal light may turn on, and you can

monitor cooking through the transparent viewing window.

6. **Automatic Shut-off:** The appliance will automatically shut off when the timer reaches zero. A chime will sound.
7. **Remove Food:** Carefully open the door and use heat-resistant gloves to remove the cooked food and accessories.

5.2. Special Functions

The Gaabor Air Fryer Oven AF-120T01S features additional functions for versatile cooking:

- **Dehydrate:** Use this function for drying fruits, vegetables, or making jerky. Refer to specific recipes for recommended temperatures and times.
- **Reheat:** Ideal for warming up leftovers while maintaining crispness.
- **Defrost:** Gently thaws frozen food.



Figure 4: Side view of the Air Fryer Oven during operation, showing food inside.

6. MAINTENANCE AND CLEANING

1. **Unplug:** Always unplug the appliance from the power outlet and allow it to cool completely before cleaning.
2. **Accessories:** The frying basket, drip tray, and grill rack are dishwasher safe or can be washed by hand with warm soapy water. Avoid abrasive cleaning materials.
3. **Interior:** Wipe the interior of the oven with a damp cloth and mild detergent. For stubborn stains, use a non-abrasive sponge. Ensure the interior is dry before next use.

4. **Exterior:** Clean the exterior with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners.
5. **Storage:** Store the appliance in a cool, dry place when not in use.



Figure 5: Back view of the Air Fryer Oven, highlighting ventilation areas important for maintenance.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet malfunction.	Ensure the power cord is securely plugged into a working 127V outlet.
Food is not cooked evenly.	Overfilled basket; incorrect temperature/time.	Do not overfill the basket. Shake or flip food halfway through cooking. Adjust temperature and time as needed.

Problem	Possible Cause	Solution
White smoke coming from the appliance.	Grease residue from previous use; fatty food.	Clean the drip tray and interior thoroughly. For fatty foods, ensure proper ventilation and consider using less oil.
Appliance smells like plastic.	New appliance odor.	This is normal for first few uses. Run the appliance empty for 10-15 minutes to burn off manufacturing residues. Ensure good ventilation.

8. SPECIFICATIONS

Brand: Gaabor

Model: AF-120T01S

Capacity: 12 Liters

Voltage: 127 Volts

Power Output: 2000 Watts

Maximum Temperature: 200°C

Timer: Up to 60 minutes

Special Features: Touch panel, automatic shut-off, defrost, dehydrate, reheat functions, transparent viewing window.

Material: Plastic

Dimensions (Product): 42 cm (Depth) x 37 cm (Width) x 42 cm (Height)

Weight: 7.2 kg

9. WARRANTY AND SUPPORT

For warranty information, product support, or service inquiries, please refer to the official Gaabor website or contact their customer service department. Keep your purchase receipt as proof of purchase for warranty claims.

Gaabor Official Store: [Visit Gaabor Store on Amazon](#)

Extended warranty options may be available for purchase. Please check with your retailer for details.

