

HWWR MS80

HWWR Portable Bluetooth Karaoke Machine MS80 User Manual

Model: MS80 (80W Version)

1. INTRODUCTION

Thank you for choosing the HWWR Portable Bluetooth Karaoke Machine MS80. This device is designed to provide an immersive audio experience with powerful sound, dual wireless microphones, and dynamic lighting effects. Please read this manual thoroughly before use to ensure proper operation and to maximize your enjoyment of the product.



Image 1.1: Overview of HWWR Karaoke Machine features.

2. SAFETY INFORMATION

- Do not expose the device to water or excessive moisture.
- Avoid extreme temperatures.
- Do not attempt to disassemble or repair the unit yourself. Refer all servicing to qualified personnel.
- Keep out of reach of children.
- Use only the provided charging cable and power adapter.
- Ensure proper ventilation when operating the device.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- 1 x HWWR Karaoke Speaker
- 2 x Wireless Microphones
- 1 x Shoulder Strap
- 1 x AUX Cable
- 1 x Charging Cable (Type-C)
- 1 x User Manual (this document)



Image 3.1: All components included in the HWWR Karaoke Machine package.

4. PRODUCT OVERVIEW

The HWWR MS80 features a robust design with intuitive controls and multiple connectivity options. It includes a 6.8-inch subwoofer for deep bass and a full-frequency speaker for clear audio. The top panel integrates a slot for holding a phone or tablet.

SIMPLE OPERATION

With separate function buttons for easy setup



Image 4.1: Detailed view of the control panel and input ports.

Control Panel Functions:

- **Microphone/Instrument Input (6.35mm):** Connect wired microphones or instruments.
- **Mic Vol:** Adjust microphone volume.
- **DC 5V Input:** Charging port.
- **USB Port:** For USB drive playback.
- **TF Card Slot:** For TF card playback.
- **Echo:** Adjust echo effect for microphones.
- **Power/Master Volume:** Power ON/OFF and main volume control.
- **AUX Input:** For external audio devices.
- **Mode/Loop Button:** Switch between input modes (Bluetooth, USB, TF, AUX) and control loop playback.
- **Prev/Next Buttons:** Navigate tracks.
- **Play/Pause Button:** Control media playback.
- **Priority Mic/Accompany Button:** Activates microphone priority or accompany mode.
- **REC Button:** Initiate recording (requires USB/TF storage).
- **LED Button:** Cycle through or turn off LED light modes.

5. SETUP

5.1 Charging the Karaoke Machine

1. Connect the provided Type-C charging cable to the DC 5V input port on the karaoke machine.
2. Connect the other end of the cable to a compatible USB power adapter (not included) or a USB port.
3. The charging indicator will illuminate. Allow approximately 4-6 hours for a full charge.
4. A full charge provides up to 24 hours of continuous playback.

5.2 Installing Microphone Batteries

Each wireless microphone requires 2 AA batteries (not included).

1. Unscrew the bottom part of the microphone handle.
2. Insert 2 AA batteries, ensuring correct polarity (+/-).
3. Screw the bottom part back on securely.



Image 5.1: Microphone battery installation and noise reduction feature.

6. OPERATING INSTRUCTIONS

6.1 Power On/Off

Rotate the **Power/Master Volume** knob clockwise to turn on the machine. Rotate counter-clockwise until it clicks to turn off.

6.2 Bluetooth Connection

1. Turn on the karaoke machine. It will automatically enter Bluetooth pairing mode, indicated by a flashing 'BLUE' on the display.
2. On your device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
3. Select "HWWR MS80" from the list.
4. Once connected, the 'BLUE' indicator will stop flashing, and a confirmation sound will play.

Enjoy Karaoke in Anywhere, Anytime



Image 6.1: Bluetooth 5.3 connectivity with various devices.

6.3 Microphone Usage

1. Turn on the wireless microphones by pressing the power button. They will automatically pair with the karaoke machine.
2. Adjust the microphone volume using the **Mic Vol** knob on the main unit.
3. Adjust the echo effect using the **Echo** knob.
4. The microphones feature an HD display for power and frequency, and built-in chips for excellent voice pickup and anti-whistle technology.



Image 6.2: Features of the wireless microphones.



Image 6.3: Wireless microphone range and stability.

6.4 Media Playback (USB/TF Card/AUX)

1. Insert a USB drive or TF card into the respective slot. The machine will automatically switch to the corresponding mode and begin playback.
2. To use AUX input, connect an external audio device (e.g., MP3 player) to the AUX port using the

provided AUX cable. Press the **Mode/Loop** button to select AUX mode.

3. Use the **Prev**, **Next**, and **Play/Pause** buttons to control playback.

6.5 DJ Lights

Press the **LED** button to cycle through 6 dynamic colorful lighting effects or to turn them off. The lights sync to the music, enhancing the party atmosphere.



Image 6.4: Examples of colorful disco light modes.

6.6 Special Functions

- **Mic Priority:** Press the **Priority Mic/Accompany** button to activate microphone priority. When active, music volume will automatically lower when you speak into the microphone.
- **Accompany Mode:** Press the **Priority Mic/Accompany** button again to switch to accompany mode, which can remove vocals from certain tracks.
- **Recording (REC):** With a USB drive or TF card inserted, press the **REC** button to start recording your performance. Press again to stop.
- **Connecting to TV:** The karaoke machine can connect to a TV via Bluetooth (if your TV supports it) or using an AUX cable. This allows you to display lyrics on the TV while audio plays through the karaoke machine.

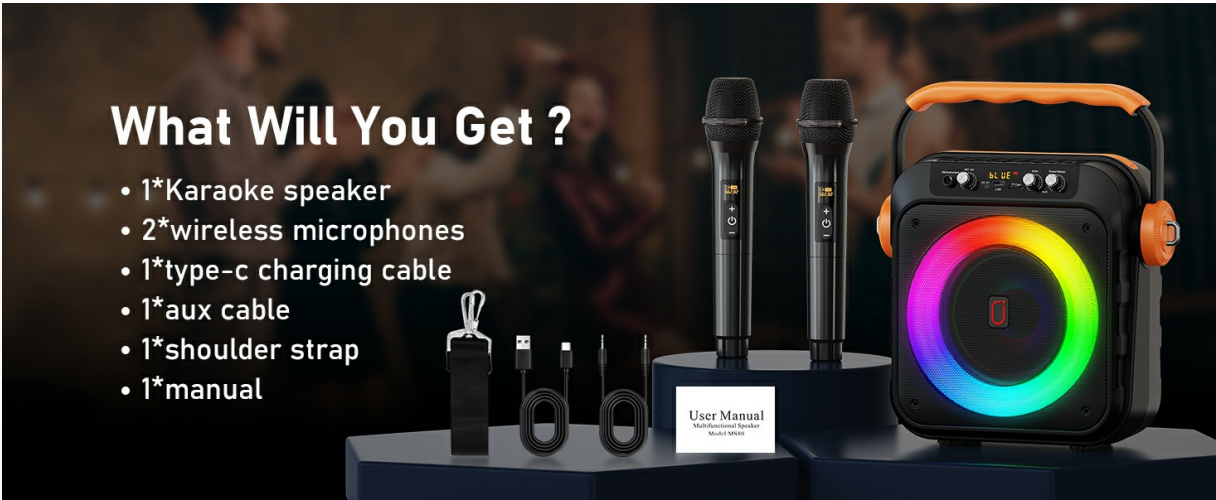


Image 6.5: Connecting the karaoke machine to a TV for lyric display.

7. MAINTENANCE

- Clean the device with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Store the karaoke machine in a cool, dry place away from direct sunlight and extreme temperatures.
- If not used for extended periods, charge the battery every 3 months to maintain its lifespan.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Battery depleted; Power switch off	Charge the unit; Turn the Power/Master Volume knob clockwise
No sound	Volume too low; Incorrect mode selected; Device not connected	Increase Master Volume; Press Mode/Loop to select correct input; Reconnect Bluetooth/AUX
Microphone not working	Microphone batteries low/dead; Microphone not paired; Mic Vol too low	Replace AA batteries; Power cycle microphone; Increase Mic Vol knob
Bluetooth disconnection	Device out of range; Interference	Move device closer to karaoke machine; Avoid obstacles or other wireless devices

9. SPECIFICATIONS

- **Model Number:** MS80
- **Output Wattage:** 80 Watts
- **Speaker Count:** 2 (Full-frequency speaker with 6.8-inch subwoofers)
- **Bluetooth Version:** 5.3
- **Battery Capacity:** 6500mAh (Karaoke Machine)
- **Battery Life:** Up to 24 hours (Karaoke Machine)
- **Microphone Power:** 2 x AA batteries per microphone
- **Connectivity:** Bluetooth, USB, TF Card, 3.5mm AUX, 6.35mm Mic/Instrument Input
- **Special Features:** Echo Effect, Light Up Speaker (6 modes), PA System, Rechargeable, SD Card Slot,

Mic Priority, Accompany Mode, Recording

- **Product Dimensions:** 12.6 x 6.06 x 14.2 inches
- **Item Weight:** 5 pounds
- **Material Type:** Metal & ABS




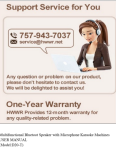 



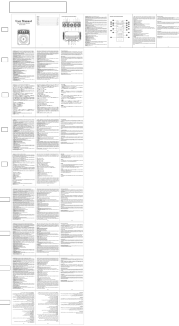
Image 9.1: Internal speaker components and audio technology.

10. WARRANTY AND SUPPORT

The HWWR Karaoke Machine MS80 comes with a **1-year warranty** from the date of purchase. For any product-related inquiries, technical assistance, or warranty claims, please contact HWWR customer support.

- **Customer Support:** Available 7 days a week, 24 hours a day.
- **After-sales Service:** US Local After-sales Center available.

Please retain your proof of purchase for warranty validation.

	<p>HWWR D28-T Bluetooth Karaoke Machine User Manual</p> <p>Comprehensive user manual for the HWWR D28-T portable Bluetooth karaoke machine. Learn about product specifications, features, button operations, and usage instructions for this kid-friendly karaoke device.</p>
	<p>HWWR Multifunctional Bluetooth Speaker with Microphone Karaoke Machines User Manual (Model: D20-T)</p> <p>User manual for the HWWR Multifunctional Bluetooth Speaker with Microphone Karaoke Machines, Model D20-T. This guide provides detailed instructions on product features, Bluetooth and TWS connection, charging, troubleshooting, technical specifications, and package contents.</p>
	<p>Karaoke Machine D17 Wireless Version User Manual</p> <p>User manual for the HWWR Karaoke Machine D17 Wireless Version. This guide provides detailed specifications, button operations for the main unit and wireless microphone, instructions for Bluetooth, TF card, and AUX modes, information on indicator lights, and usage tips for a superior audio experience.</p>
	<p>HWWR D10-T Portable Bluetooth Speaker User Manual</p> <p>User manual for the HWWR D10-T portable Bluetooth speaker, detailing product features, connection instructions, troubleshooting, and specifications.</p>
	<p>HWWR Wireless Lavalier Microphone K38 User Manual</p> <p>User manual for the HWWR Wireless Lavalier Microphone K38, detailing product introduction, operating methods, indicator light descriptions, and package contents for professional recording, live streaming, and vlogging.</p>
	<p>JYX TX05 Bluetooth Karaoke Machine User Manual</p> <p>Comprehensive user manual for the JYX TX05 Bluetooth Karaoke Machine, detailing setup, operation, features, and troubleshooting for this portable audio system with two microphones.</p>