

XMRM-ML

XMRM-ML Bluetooth Voice Remote Control User Manual

Model: XMRM-ML | Brand: Generic

INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your new remote control. Please read it thoroughly before use.

PRODUCT OVERVIEW





Figure 1: Front view of the XM307M-ML Bluetooth Voice Remote Control, showing all buttons including power, number pad, navigation, volume, channel, and dedicated app buttons for Netflix, Prime Video, YouTube, and Apps.



Figure 2: Rear view of the remote control with the battery compartment cover removed, illustrating the slots for two AAA batteries.

The XMRM-ML Bluetooth Voice Remote Control is designed for seamless interaction with MI TV Q2 4K QLED Android Smart TVs, including models L50M7-Q2ME, L55M7-Q2ME, and L65M7-Q2ME. It features voice control capabilities and dedicated buttons for popular streaming services.

SETUP

1. Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards to open it.
3. Insert two (2) AAA batteries, ensuring the positive (+) and negative (-) terminals align with the indicators inside the compartment.
4. Slide the battery cover back into place until it clicks securely.

2. Pairing with Your TV

This remote control uses Bluetooth for connectivity. Pairing is required for full functionality, especially for voice control.

1. Ensure your MI TV Q2 is powered on.
2. On your TV, navigate to **Settings > Remotes & Accessories**.
3. Select **Add accessory** or **Pair new device**.
4. On the remote control, simultaneously press and hold the **Home** button (house icon) and the **Back** button (arrow pointing left) for approximately 5-10 seconds, or until the LED indicator on the remote starts blinking.
5. Once the remote control appears in the list of available devices on your TV screen (e.g., "XMRM-ML Remote"), select it to complete the pairing process.
6. A confirmation message will appear on your TV once pairing is successful.

Note: If pairing fails, ensure the remote is close to the TV and repeat the steps. If issues persist, try restarting your TV.

OPERATING INSTRUCTIONS

Button Functions

Button	Function
Power (⏻)	Turns the TV on or off.
Number Pad (0-9)	Direct channel selection or inputting numbers.
Audio	Accesses audio settings or audio tracks.
Info	Displays program information.
EPG	Opens the Electronic Program Guide.
TTX	Accesses Teletext (if available).
Settings (Gear icon)	Opens the TV settings menu.
Netflix	Direct access to the Netflix application.
Prime Video	Direct access to the Amazon Prime Video application.
YouTube	Direct access to the YouTube application.
Apps	Opens the applications menu.
Google Assistant (Microphone icon)	Activates voice control for commands and searches.
Navigation Pad (Up, Down, Left, Right, OK)	Navigates menus and confirms selections.
Back (Left arrow)	Returns to the previous screen or menu.
Home (House icon)	Returns to the TV's home screen.
Xiaomi TV+	Direct access to Xiaomi TV+ content.
Volume Up (+) / Down (-)	Adjusts the TV volume.

Button	Function
Mute	Mutes or unmutes the TV audio.
Channel Up (^) / Down (v)	Changes TV channels.
Exit	Exits the current menu or application.
Color Buttons (Red, Green, Yellow, Blue)	Context-sensitive functions within certain applications or menus.

Voice Control

To use the voice control feature, press and hold the **Google Assistant** button (microphone icon) on the remote. Speak clearly into the microphone located at the top of the remote. Release the button when you are finished speaking. You can use voice commands to:

- Search for movies, TV shows, or videos.
- Open applications.
- Control smart home devices (if configured).
- Ask questions and get information.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Do not use liquid cleaners or abrasive materials, as they may damage the surface or internal components.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or it stops functioning. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries.
- **Storage:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage. Store in a cool, dry place.
- **Avoid Damage:** Do not drop the remote control, expose it to extreme temperatures, or immerse it in water.

TROUBLESHOOTING

Problem	Possible Cause / Solution
Remote not responding.	<ul style="list-style-type: none"> ◦ Batteries: Check if batteries are inserted correctly. Replace with new AAA batteries. ◦ Pairing: Ensure the remote is properly paired with your TV. Refer to the "Pairing with Your TV" section. ◦ Obstruction: Ensure there are no obstructions between the remote and the TV.
Voice control not working.	<ul style="list-style-type: none"> ◦ Pairing: Voice control requires Bluetooth pairing. Confirm the remote is paired. ◦ Microphone: Ensure you are holding the Google Assistant button while speaking and speaking clearly into the microphone. ◦ Internet Connection: Voice commands often require an active internet connection on your TV.

Problem	Possible Cause / Solution
Buttons are sticky or unresponsive.	<ul style="list-style-type: none">◦ Cleaning: Clean the remote surface with a soft, dry cloth. Avoid liquids.◦ Damage: If the remote has been dropped or exposed to liquids, internal damage may have occurred.

SPECIFICATIONS

- **Product Name:** Remote Controller
- **Type:** For XIAOMI MI TV Q2 4K QLED Android Smart TV
- **Model:** XMRRM-ML
- **Compatible TV Models:** L50M7-Q2ME, L55M7-Q2ME, L65M7-Q2ME
- **Power Source:** 2 x AAA batteries (not included)
- **Material:** ABS
- **Connectivity:** Bluetooth
- **Special Feature:** Voice Search (Google Assistant)
- **Dimensions:** Approximately 7.87 x 7.87 x 3.94 inches (Package Dimensions)
- **Weight:** Approximately 1.1 pounds (Item Weight)

WARRANTY AND SUPPORT

This product is a replacement remote control. For specific warranty information, please refer to the terms provided by your retailer at the time of purchase. As a generic replacement part, direct manufacturer warranty may not apply. Please retain your purchase receipt for any warranty claims.

For technical support or further assistance, please contact the seller or your TV manufacturer's support channels if the issue is related to TV functionality rather than the remote itself.

Seller: PartHive US

Amazon Product Link: <https://www.amazon.com/dp/B0DPSQ8486>