

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Doublepow](#) /

› [LP40 Pro Wireless Earbuds User Manual](#)

Doublepow LP40 Pro

Doublepow LP40 Pro Wireless Earbuds User Manual

Model: LP40 Pro

INTRODUCTION

Thank you for choosing the Doublepow LP40 Pro Wireless Earbuds. These Bluetooth 5.3 headphones are designed to provide a high-fidelity audio experience with features like low latency, noise cancellation, and comfortable wear. This manual will guide you through the setup, operation, maintenance, and troubleshooting of your new earbuds.

PACKAGE CONTENTS

- LP40 Pro Wireless Earbuds (Left and Right)
- Charging Case
- USB Charging Cable
- User Manual

PRODUCT OVERVIEW

Familiarize yourself with the components of your LP40 Pro earbuds and charging case.



Image: The LP40 Pro wireless earbuds resting inside their white charging case, with the Doublepow logo visible on the front and a small blue indicator light.

Doublepow



Wake up Siri

High-end fingerprint touch



Play/Pause short touch "multi-function key"



Summon Siri long press 1.5s"



The last song hit the left ear three times



Reduce volume Double-click left ear



Increase volume Double-click the right ear



Next song Three hits right ear

Tips: Voice Assistant only supports IOS users

Image: A diagram illustrating the touch control functions on the LP40 Pro earbud, including play/pause, volume control, track navigation, and voice assistant activation.

SETUP

1. Initial Charging

Before first use, fully charge the earbuds and the charging case.

1. Connect the provided USB charging cable to the Type-C port on the charging case.
2. Connect the other end of the cable to a USB power adapter (not included) or a computer's USB port.
3. The indicator light on the charging case will show charging status. A full charge typically takes about 1.5 hours for the case.
4. Place the earbuds into the charging case. They will begin charging automatically.

24h Long lasting life

Type-C interface is fast charging and accelerating, and it only takes 1.5 hours to fully charge



Image: The LP40 Pro charging case connected to a USB-C charging cable, illustrating the charging process and indicating a 24-hour long-lasting battery life with the case.

2. Pairing with a Device

The LP40 Pro earbuds utilize Bluetooth 5.3 for stable and efficient connection.

1. Ensure the earbuds are charged and inside the charging case.
2. Open the lid of the charging case. The earbuds will automatically enter pairing mode.
3. On your device (smartphone, tablet, laptop), go to Bluetooth settings and turn Bluetooth on.
4. Search for available devices and select "LP40 Pro" from the list.
5. Once connected, you will hear a confirmation tone, and the earbuds will be ready for use.

AUTOMATIC CONNECTION



Image: A hand taking an earbud out of the charging case, with text indicating "AUTOMATIC CONNECTION", demonstrating the ease of pairing.

OPERATING INSTRUCTIONS

Touch Controls

The LP40 Pro earbuds feature smart touch controls for easy management of audio and calls.

Action	Function
Single Tap (Either Earbud)	Play/Pause music, Answer/End call
Double Tap (Left Earbud)	Decrease Volume
Double Tap (Right Earbud)	Increase Volume

Action	Function
Triple Tap (Left Earbud)	Previous Track
Triple Tap (Right Earbud)	Next Track
Long Press (1.5s, Either Earbud)	Activate Voice Assistant (Siri, Google Assistant)
Long Press (2s, During Call)	Reject Call

Note: Voice assistant functionality may vary based on your device's operating system (e.g., Siri for iOS).


Wearing the Earbuds

For optimal sound quality and comfort, ensure the earbuds are properly seated in your ears.

- Identify the Left (L) and Right (R) earbuds.
- Gently insert each earbud into the corresponding ear canal.
- Adjust the earbud until it feels secure and comfortable.

LP40 PRO wireless bluetooth headset

After the designer's meticulous design, ergonomic design, comfortable to wear, bring a new music experience.

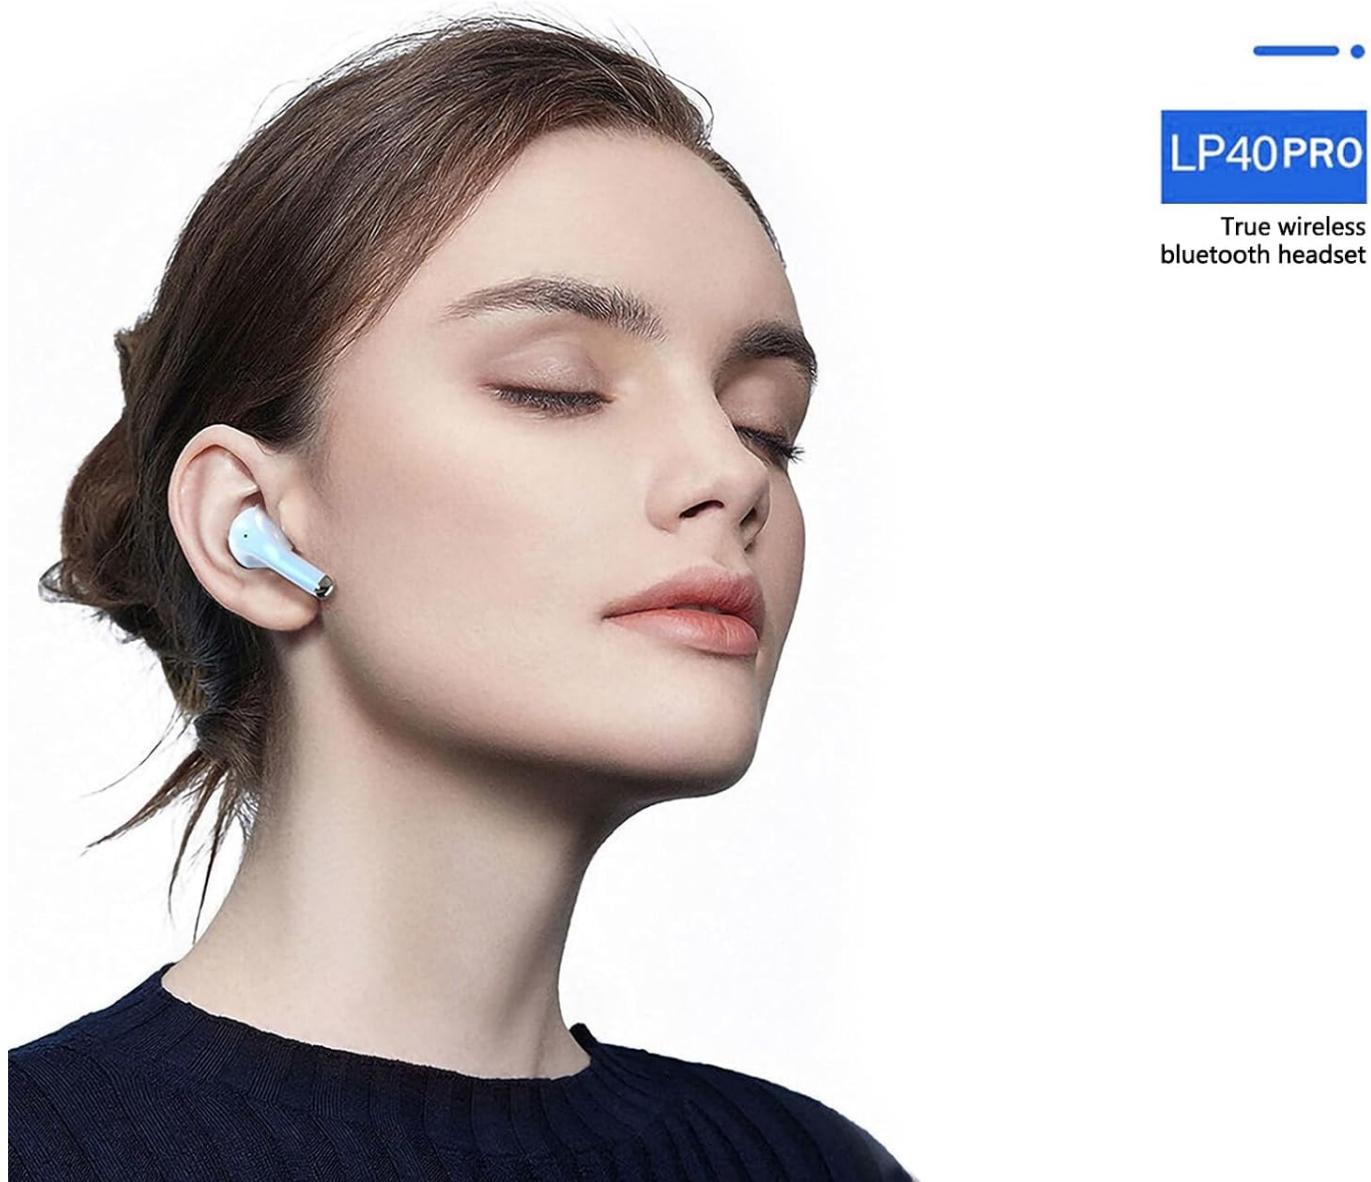

LP40PRO

True wireless
bluetooth headset

Image: A woman wearing a white LP40 Pro earbud, demonstrating the ergonomic design and comfortable fit for extended use.

MAINTENANCE AND CARE

Proper maintenance ensures the longevity and optimal performance of your earbuds.

- **Cleaning:** Regularly clean the earbuds and charging case with a soft, dry, lint-free cloth. Do not use abrasive cleaners or solvents.
- **Storage:** When not in use, store the earbuds in their charging case to protect them and keep them charged.
- **Temperature:** Avoid exposing the earbuds to extreme temperatures (hot or cold) or high humidity.
- **Water Resistance:** While designed for sports, avoid submerging the earbuds in water. They are resistant to sweat and light splashes, but not fully waterproof.

TROUBLESHOOTING

If you encounter issues with your LP40 Pro earbuds, refer to the following common solutions:

Problem	Possible Solution
Earbuds not pairing/connecting	<ul style="list-style-type: none">Ensure earbuds and case are charged.Turn off and on Bluetooth on your device.Forget "LP40 Pro" in your device's Bluetooth settings and re-pair.Place earbuds back in case, close lid, wait 5 seconds, then open lid to re-enter pairing mode.
No sound or low volume	<ul style="list-style-type: none">Check volume levels on both earbuds and your connected device.Ensure earbuds are properly seated in your ears.Clean any debris from the earbud mesh.
One earbud not working	<ul style="list-style-type: none">Place both earbuds back in the charging case, close the lid, and then open it again.Ensure both earbuds are charged.Try resetting the earbuds (refer to manufacturer's website if specific reset instructions are not in this manual).
Charging case not charging	<ul style="list-style-type: none">Check the USB cable and power adapter. Try a different cable or adapter.Ensure the charging port is clean and free of debris.

SPECIFICATIONS

Feature	Detail
Model Name	LP40 Pro
Connectivity Technology	Wireless (Bluetooth)
Bluetooth Version	5.3
Audio Driver Type	Dynamic Driver (13mm)
Earbud Weight	Approx. 3.1 grams per earbud
Charging Case Weight	Approx. 30 grams
Playtime (Single Charge)	Approx. 5-6 hours
Total Playtime (with Charging Case)	Approx. 24 hours
Charging Time (Case)	Approx. 1.5 hours (Type-C)
Control Method	Touch
Compatible Devices	Tablets, Television, Telephones, Laptops, Smart Speaker (Bluetooth enabled)



Metal moving coil horn unit subwoofer

The built-in composite metal dynamic coil horn unit is more shocking than other dynamic coil drives

EXQUISITE
AND COMPACT

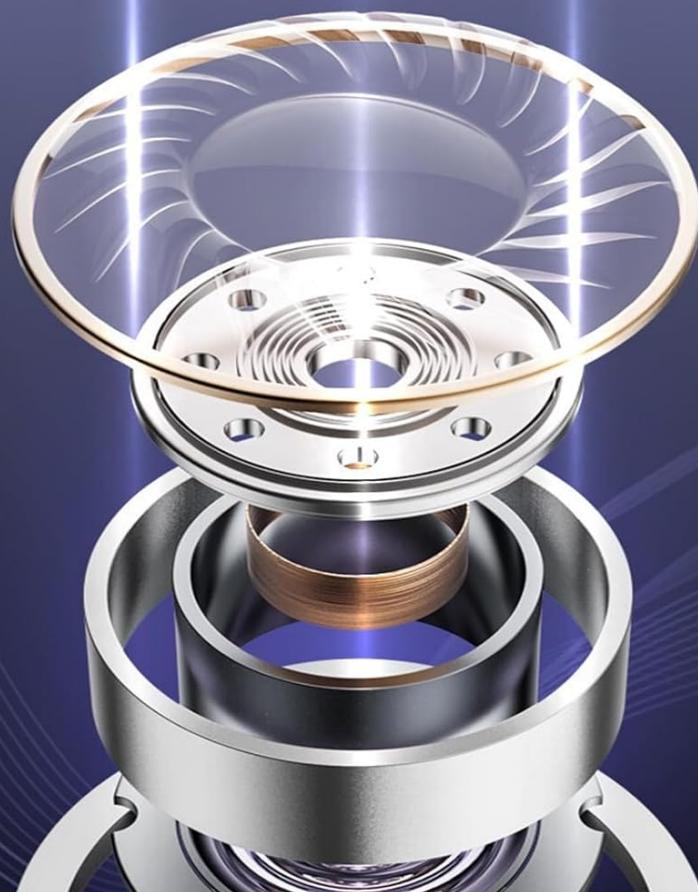


Image: A detailed diagram showing the internal structure of the LP40 Pro's metal moving coil horn unit subwoofer, highlighting its dynamic driver technology.

WARRANTY AND SUPPORT

Doublepow products are designed for reliability and performance. For warranty information and technical support, please refer to the official Doublepow website or contact their customer service directly.

- **Official Website:** www.doublepow.com (Example link, replace with actual if available)
- **Customer Service:** Refer to the contact information provided on the product packaging or official website.

Please retain your proof of purchase for warranty claims.

