



[Manuals.plus](#) /

> [ALisasin](#) /

> ALisasin 3-in-1 Smart Sweeper Robotic Vacuum Cleaner (Model XWT098) User Manual

ALisasin XWT098

ALisasin 3-in-1 Smart Sweeper Robotic Vacuum Cleaner (Model XWT098) User Manual

Model: XWT098 | Brand: ALisasin

1. INTRODUCTION

Thank you for choosing the ALisasin 3-in-1 Smart Sweeper Robotic Vacuum Cleaner. This device is designed to provide efficient and automated cleaning for your home, combining sweeping, suction, and mopping functionalities. Please read this manual thoroughly before operating the product to ensure proper use, maintenance, and optimal performance.



Image 1.1: The ALisasin 3-in-1 Smart Sweeper Robotic Vacuum Cleaner, a compact white circular device with an 'AUTO' button.

2. SAFETY INSTRUCTIONS

To prevent injury or damage, always observe the following safety precautions:

- Do not immerse the device in water or other liquids.
- Keep the device away from open flames or heat sources.
- Ensure the charging cable is not damaged and is used with a compatible USB power source.
- Do not allow children or pets to operate the device unsupervised.
- Avoid using the device on wet surfaces unless specifically designed for wet cleaning (mopping function).
- Remove any loose cables, small objects, or debris from the floor before operation to prevent entanglement.
- Do not attempt to repair or modify the device yourself. Contact customer support for assistance.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- 1 x ALIsasin Smart Sweeper Robotic Vacuum Cleaner
- 1 x USB Charging Cable
- 1 x Dry Cleaning Cloth
- 1 x Wet Cleaning Cloth
- 1 x Water Bottle (for humidification/wet cleaning)
- 2 x Side Brushes (additional pair)
- 1 x Cleaning Brush
- 1 x User Manual (this document)



Image 3.1: Visual representation of the package contents, including the robot, USB cable, cloths, water bottle, and side brushes.

4. SETUP

4.1 Charging the Device

1. Connect the USB charging cable to the charging port on the side of the robotic vacuum cleaner.

2. Plug the other end of the USB cable into a compatible USB power adapter (not included) or a computer USB port.
3. The indicator light will illuminate during charging. A full charge typically takes approximately 1 hour.
4. Once fully charged, the device provides approximately 90 minutes of use time.



Image 4.1: The robotic vacuum cleaner connected to a USB charging cable, illustrating the charging process.

4.2 Attaching Side Brushes and Cleaning Cloth

- **Side Brushes:** Gently push the side brushes onto their designated posts on the underside of the robot until they click into place. Ensure they are securely attached.
- **Cleaning Cloth:** Attach either the dry or wet cleaning cloth to the bottom of the device using the hook-and-loop fasteners. For wet cleaning, lightly dampen the wet cloth or use the provided water bottle to add a small amount of water to the designated reservoir if available (refer to device for specific water port location).

5. OPERATING INSTRUCTIONS

5.1 Starting and Stopping Cleaning

1. **Preparation:** Clear the cleaning area of large debris, loose cables, and fragile items.
2. **Power On:** Press the "AUTO" button located on the top of the device. The robot will emit a sound

and begin its cleaning cycle.

3. **Power Off/Pause:** To stop or pause the cleaning cycle, press the "AUTO" button again. The robot will cease operation.



Image 5.1: Illustration of the robot's multi-functionality, including spray humidification, double-sided sweeping, water locking cloth, and suction.

5.2 Cleaning Modes and Features

- **Sweeping:** The side brushes rotate to gather dust and debris towards the suction inlet.
- **Suction:** The internal motor creates suction to pull dirt and particles into the dustbin.
- **Mopping/Dragging:** The attached cleaning cloth (wet or dry) wipes the floor surface. Some models may include a humidification spray function to assist with dust removal.
- **Automatic Navigation:** The robot uses sensors to navigate around obstacles and clean the designated area. It is designed to clean spaces under 70 square meters.



Image 5.2: The robotic vacuum cleaner demonstrating its ability to clean under low-clearance furniture, specifically showing a 7cm clearance.



Image 5.3: The robotic vacuum cleaner in operation, with a blue light indicating its cleaning path on a wooden floor.

6. MAINTENANCE

6.1 Emptying the Dustbin

1. Turn off the robotic vacuum cleaner.
2. Locate the dustbin access panel on the top of the device.
3. Open the panel and carefully remove the dustbin.
4. Empty the contents of the dustbin into a trash receptacle.
5. Clean any filters or mesh inside the dustbin as needed.
6. Reinsert the dustbin and close the access panel securely.



Image 6.1: A hand demonstrating how to open the dustbin compartment on the robotic vacuum cleaner for emptying.

6.2 Cleaning Side Brushes and Wheels

- Regularly check the side brushes for tangled hair or debris. Use the provided cleaning brush or scissors to remove any obstructions.
- Inspect the wheels for any accumulated dirt or hair and clean them to ensure smooth movement.

6.3 Cleaning the Cleaning Cloths

- After each use, remove the cleaning cloth from the device.
- Wash the cloth with water and mild detergent. Allow it to air dry completely before reattaching or storing.

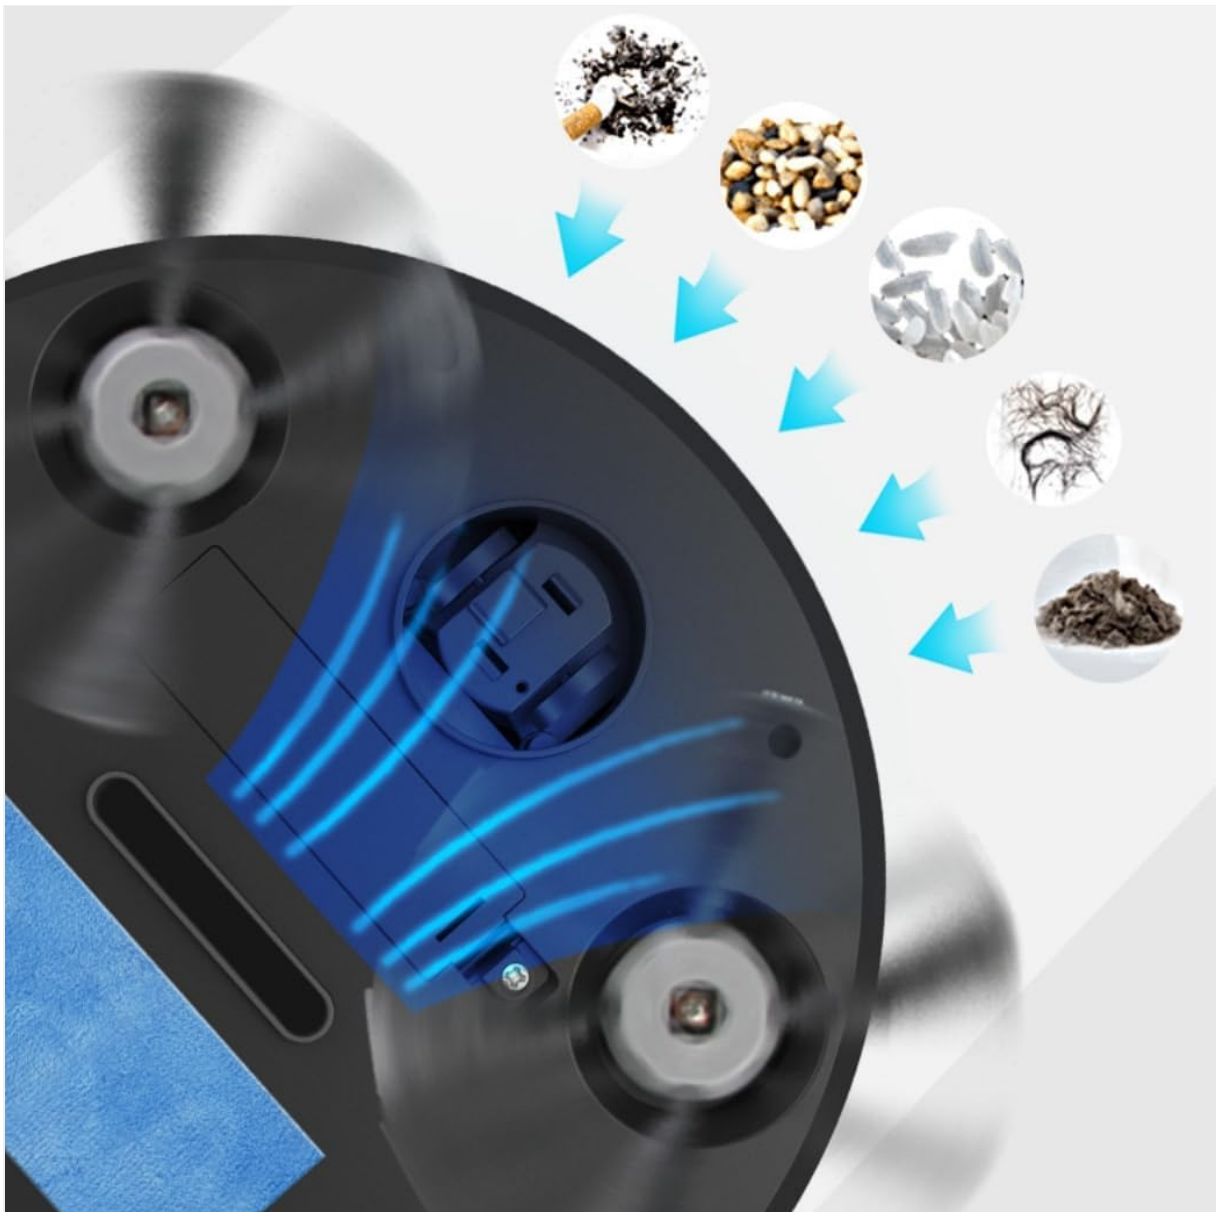


Image 6.2: An illustration of the robot's underside, highlighting the suction mechanism and the path of debris collection.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not turn on.	Low battery or no charge.	Charge the device using the USB cable. Ensure the cable is properly connected and the power source is active.
Device stops unexpectedly.	Low battery; Obstruction detected; Dustbin full.	Recharge the device. Remove any obstacles. Empty and clean the dustbin.
Poor cleaning performance.	Dustbin full; Side brushes tangled; Cleaning cloth dirty or dry.	Empty the dustbin. Clean side brushes. Clean or dampen the cleaning cloth.
Device makes unusual noise.	Debris caught in brushes or wheels.	Turn off the device and inspect brushes and wheels for any foreign objects. Remove carefully.

8. SPECIFICATIONS

Brand: ALisasin

Model Name: Robotic vacuum cleaner

Model Number: XWT098

Special Feature: Mopping the floor

Color: White

Product Dimensions: 9"L x 9"W x 2.5"H

Item Weight: 8 ounces

Included Components: Battery, USB Charging Cable, Dry Cloth, Wet Cloth, Water Bottle, Side Brushes, Cleaning Brush

Filter Type: Cloth

Battery Capacity: 1200mAh

Battery Life: Approximately 90 minutes

Charging Time: Approximately 1 hour

Power Source: Battery Powered (USB charging)

Form Factor: Round

Suction Power: 1000~1499Pa

UPC: 763527984764

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the retailer's policy or contact ALisasin customer service through their official channels. Keep your purchase receipt as proof of purchase.