

Generic V-645

Professional Hair Trimmer with LED Display - Model V-645

User Manual

Your comprehensive guide to optimal grooming.

INTRODUCTION

Thank you for choosing the Professional Hair Trimmer, Model V-645. This advanced grooming tool is designed to provide precise and efficient trimming for various hair types. Featuring a modern design with an LED digital display, a powerful lithium-ion battery, and a durable DLC coated blade, this trimmer offers superior performance and convenience. Please read this manual thoroughly before first use to ensure safe operation and optimal results.

SAFETY INFORMATION

For your safety and to prevent damage to the device, please adhere to the following guidelines:

- Avoid direct contact with eyes and skin, especially the blade.
- Keep the trimmer away from water and do not use it in wet environments (e.g., shower, bath).
- This device is intended for use on dry hair only.
- When charging via USB, always follow standard electrical safety precautions. Ensure the charging cable and port are dry and undamaged.
- Do not attempt to disassemble or repair the device yourself. Contact customer support for assistance.
- Keep out of reach of children.

PRODUCT FEATURES

- LED Digital Display:** Clearly shows battery level and real-time cutting duration, providing full control and optimal performance during use.
- Powerful Lithium-Ion Battery:** Ensures stable and reliable performance with extended operating times thanks to its high capacity.
- DLC Coated Blade:** Delivers precise and smooth cutting, offering resistance to wear and friction. This coating also helps reduce noise and heat for a comfortable grooming experience.
- Adjustable Comb Attachments:** Allows for precise control over cutting length, enabling you to achieve a variety of styles safely and easily.
- Convenient USB Charging:** Easily charge the machine from any USB-supported device, providing convenience for travel or daily use.



Image: The V-645 Professional Hair Trimmer set, showcasing the shaver, hair clipper, and detail trimmer. Each device features a distinctive blue camouflage pattern and an integrated LED digital display for battery and usage information.



Image: Detailed view of the VGR hair clipper's stainless steel blade, highlighting its superior cutting performance. Below, a guide comb is shown, indicating adjustable lengths of 1mm, 2mm, and 3mm for precise trimming.



STAINLESS STEEL BLADE

Superior cutting performance with stainless steel blade



GUIDE COMB

1.5/3/4.5/6/
10/13/16/19mm



Image: Another close-up of the VGR hair clipper, emphasizing the stainless steel blade for excellent cutting. The image also displays a guide comb with a wider range of length settings, including 1.5mm, 3mm, 4.5mm, 6mm, 10mm, 13mm, 16mm, and 19mm, offering versatility for various hair lengths.



DUAL INDEPENDENT FLEXING FOILS

Dual titanium hypoallergenic foils provide the perfect cut



STORAGE BAG

Convenient storage and carrying



Image: A detailed view of the VGR shaver, featuring dual independent flexing foils designed for a close and comfortable shave. The image also shows a convenient storage bag, emphasizing portability and easy carrying.

PACKAGE CONTENTS

Upon opening the package, please ensure all the following items are present:

- Professional Hair Trimmer (Model V-645)
- Shaver Attachment
- Detail Trimmer Attachment
- Adjustable Guide Combs (various sizes)
- USB Charging Cable
- Cleaning Brush
- Lubricating Oil
- Storage Bag
- User Manual (this document)



Image: The complete VGR V-645 Professional Barber Combo set, including the main trimmer, shaver, and detailer, displayed alongside its retail packaging, illustrating the full contents of the product.

SETUP

Initial Charging

1. Before first use, fully charge the trimmer. Connect the USB charging cable to the trimmer's charging port and plug the other end into a standard USB power adapter (not included) or a USB port on a computer.
2. The LED display will indicate the charging status and battery level. A full charge typically takes [X] hours (refer to specifications for exact time).
3. Once fully charged, disconnect the cable.

Attaching Guide Combs

1. Ensure the trimmer is turned off.
2. Select the desired guide comb length.
3. Align the comb with the trimmer blade and push it firmly until it clicks into place.
4. To remove, gently pull the comb away from the blade.

OPERATING INSTRUCTIONS

General Operation

- Press the power button to turn the trimmer on. The LED display will light up.
- To turn off, press the power button again.
- Always ensure your hair is clean and dry before trimming.

Using the Hair Trimmer

1. Attach the appropriate guide comb for your desired hair length.
2. Hold the trimmer with the blade flat against the skin or at a slight angle, depending on the area.
3. Move the trimmer slowly against the direction of hair growth for an even cut.
4. For detailing or outlining, remove the guide comb and use the bare blade carefully.

Using the Shaver Attachment

1. Ensure the shaver head is clean.
2. Hold the shaver flat against the skin.
3. Move in short, gentle strokes against the direction of hair growth.

MAINTENANCE

Cleaning the Blades

1. Turn off and unplug the trimmer.
2. Use the provided cleaning brush to remove any loose hairs from the blade and comb attachments.
3. For a more thorough clean, the blade head can be detached (refer to specific instructions for detachment if applicable, usually by pushing or clicking off). Rinse the blade head under running water, ensuring the main body of the trimmer does not get wet.
4. Allow the blade head to air dry completely before reattaching or storing.

Oiling the Blades

- After every few uses, or if the trimmer feels sluggish, apply 1-2 drops of the provided lubricating oil to the blades.
- Turn the trimmer on for a few seconds to distribute the oil evenly.
- Wipe off any excess oil with a soft cloth.

Storage

- Store the trimmer and its accessories in the provided storage bag in a cool, dry place.

- Ensure the trimmer is fully charged before long-term storage to maintain battery health.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Trimmer does not turn on.	Battery is depleted.	Charge the trimmer fully using the USB cable.
Poor cutting performance.	Blades are dirty or not oiled. Blades are dull.	Clean and oil the blades. If performance does not improve, blades may need replacement (contact support).
Trimmer pulls hair.	Blades are dirty or not oiled. Battery is low.	Clean and oil the blades. Ensure the trimmer is fully charged.
Excessive noise or vibration.	Blades need oiling. Foreign object caught in blades.	Oil the blades. Carefully inspect and remove any debris from the blades.

SPECIFICATIONS

Feature	Detail
Model	V-645
Brand	Generic
Power Source	Battery Powered
Blade Material	Solid Alloy (DLC Coated)
Special Features	USB Charging, LED Digital Display
Recommended Uses	Face Hair Trimming, Body Hair Trimming, Pet Fur Trimming
Color	Multi-color
Item Weight	1.2 Kilograms
Package Dimensions	35 x 22.2 x 7.9 cm
Target Audience	Adults of both genders
Batteries Required?	No (Built-in rechargeable battery)

WARRANTY AND SUPPORT

This product comes with a standard manufacturer's warranty. For specific warranty terms, duration, and claim procedures, please refer to the warranty card included in your package or contact the seller directly. Keep your proof of purchase for warranty claims.

For technical support, troubleshooting assistance beyond this manual, or inquiries about replacement parts, please

contact your retailer or the manufacturer's customer service. Contact information can typically be found on the product packaging or the manufacturer's official website.

© 2024 All Rights Reserved. Product specifications are subject to change without notice.