

Porodo 6849108448116

Porodo Lifestyle 4K Video Digital Camera User Manual

Model: 6849108448116

INTRODUCTION

Thank you for choosing the Porodo Lifestyle 4K Digital Camera. This camera is designed to capture your world in stunning detail, offering 4K video recording and high-resolution 50MP images. With features like 16x digital zoom, a flip flash, and a 180° rotating screen, it is ideal for vlogging, photography, and various content creation needs. This manual provides essential information on setting up, operating, and maintaining your camera to ensure optimal performance and longevity.

SAFETY INFORMATION

- Do not expose the camera to extreme temperatures, direct sunlight, or high humidity.
- Avoid dropping or subjecting the camera to strong impacts.
- Keep the camera away from water and liquids unless specifically designed for underwater use (this model is not).
- Do not attempt to disassemble or modify the camera. This will void the warranty.
- Use only the specified battery type and charging method.
- Keep out of reach of children.

PACKAGE CONTENTS

Please check the box for the following items:

- Porodo Lifestyle 4K Digital Camera
- Rechargeable Battery (650mAh)
- Type-C Charging Cable
- User Manual (this document)



Image: Front view of the Porodo Lifestyle 4K Digital Camera retail box, showing the camera and key features.



Image: Back view of the Porodo Lifestyle 4K Digital Camera retail box, displaying product specifications and features.

PRODUCT OVERVIEW

Familiarize yourself with the various parts of your Porodo Lifestyle 4K Digital Camera.



Image: The Porodo Lifestyle 4K Digital Camera shown with its 180° rotating screen flipped open and the integrated flash extended upwards.

1. **Lens:** Main optical component for capturing images and videos.
2. **Flip Flash:** Provides additional illumination in low-light conditions.
3. **180° Rotating Screen (2.2" Display):** Allows for flexible viewing angles, ideal for vlogging and selfies.
4. **Power Button:** Turns the camera on/off.
5. **Shutter Button:** Captures photos or starts/stops video recording.
6. **Zoom Controls:** Adjusts the 16x digital zoom.
7. **Navigation Buttons:** For menu navigation and settings adjustment.
8. **Type-C Port:** For charging and data transfer.
9. **Memory Card Slot:** For inserting an SD card (not included).

SETUP

1. Battery Installation and Charging

- Locate the battery compartment cover on the bottom of the camera.
- Slide the latch to open the cover.
- Insert the provided 650mAh battery, ensuring the contacts align correctly.
- Close the battery compartment cover until it clicks securely.
- Connect the camera to a power source using the Type-C charging cable. The charging indicator will illuminate.
- A full charge takes approximately 2.5 hours. The indicator will change or turn off when charging is complete.

2. Memory Card Installation

A memory card (SD card, not included) is required to store photos and videos.

- Locate the memory card slot, usually on the side or bottom of the camera.
- Insert the SD card with the metal contacts facing the correct direction (refer to the diagram near the slot if available) until it clicks into place.
- To remove, gently push the card in until it springs out.

3. Initial Power On

- Press and hold the Power button for a few seconds until the screen illuminates.
- Upon first use, you may be prompted to set the date and time. Use the navigation buttons to adjust and confirm.

OPERATING INSTRUCTIONS

Basic Photo Mode (50MP)

- Turn on the camera. It will typically default to photo mode.
- Frame your shot using the 2.2" display.
- Press the Shutter button halfway down to focus (if applicable).
- Press the Shutter button fully to capture a 50MP image.





Image: A person holding the Porodo Lifestyle 4K Digital Camera, demonstrating a typical usage scenario for capturing photos.



Image: Another view of a person holding the Porodo Lifestyle 4K Digital Camera, illustrating the camera's ergonomic design during use.

Basic Video Mode (4K)

- Switch the camera to video mode (usually via a dedicated button or menu option).
- Press the Shutter button once to start 4K video recording. A recording indicator (e.g., red dot, timer) will appear on the screen.
- Press the Shutter button again to stop recording.

4K**Video Resolution****PORODO**

PD-LFST078-BK

Image: The Porodo Lifestyle 4K Digital Camera highlighting its 4K video resolution capability.

Using the 16X Digital Zoom

- While in photo or video mode, use the zoom controls (often marked with 'W' for Wide and 'T' for Telephoto) to adjust the 16x digital zoom.
- Press 'T' to zoom in and 'W' to zoom out.

Using the Flip Flash

- To activate the flash, manually flip it up from its resting position.
- The camera will automatically use the flash when needed in low-light conditions, depending on your flash settings (e.g., Auto, Fill-in, Red-eye reduction).
- To turn off the flash, gently push it back down until it locks into place.

Using the 180° Rotating Screen

- The 2.2" display can be rotated 180 degrees.
- Flip the screen out from the side of the camera and rotate it to face forward for selfies or vlogging, or to various angles for

creative shots.

- Ensure the screen is securely positioned before shooting.



Image: The Porodo Lifestyle 4K Digital Camera illustrating its 2.2-inch display and 180-degree flip screen functionality.

Playback and Deleting Files

- Enter Playback mode (usually via a dedicated button or menu option).
- Use the navigation buttons to scroll through your photos and videos.
- To delete a file, select it and press the Delete button (often marked with a trash can icon). Confirm deletion when prompted.

Connecting to a Computer

- Turn off the camera.
- Connect the camera to your computer using the provided Type-C cable.
- Turn on the camera. It should appear as a removable disk drive on your computer.
- You can now transfer photos and videos to your computer.

MAINTENANCE

Cleaning the Camera

- Use a soft, lint-free cloth to clean the camera body.
- For the lens and screen, use a specialized lens cleaning cloth and solution. Do not use abrasive materials.
- Avoid spraying cleaning solutions directly onto the camera. Apply to the cloth first.

Battery Care

- Recharge the battery fully before first use.
- Avoid completely draining the battery frequently to prolong its lifespan.
- If storing the camera for an extended period, charge the battery to about 50% and remove it from the camera.

Storage

- Store the camera in a cool, dry place, away from direct sunlight and extreme temperatures.
- Use a camera bag or case to protect it from dust and scratches.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Camera does not turn on.	Battery is dead or not installed correctly.	Charge the battery. Ensure the battery is inserted with correct polarity.
Cannot take photos/videos.	Memory card is full, not inserted, or corrupted.	Insert a memory card. Delete unnecessary files. Format the card (this will erase all data).
Images/Videos are blurry.	Lens is dirty. Insufficient light. Camera shake.	Clean the lens. Use the flash or shoot in brighter conditions. Hold the camera steady.
Flash not working.	Flash is not flipped up. Flash setting is off.	Ensure the flash is manually flipped up. Check flash settings in the menu.
Camera freezes.	Software glitch.	Remove and reinsert the battery to reset the camera.

SPECIFICATIONS

Detailed technical specifications for the Porodo Lifestyle 4K Digital Camera:



PORODO

PD-LFST078-BK

Image: Visual representation of the camera's core capabilities: 4K video, 50MP photos, and 16x digital zoom.

Specifications

Battery Capacity	-	650mAh
Charging Port	-	Type-C
Working Time	-	3H
Recharge Time	-	2.5H
Screen Resolution	-	240 x 320
Image Resolution	-	50MP
Video Resolution	-	4K (3840x2160)



PORODO

PD-LFST078-BK

Image: A detailed table outlining the technical specifications of the Porodo Lifestyle 4K Digital Camera.

- **Model Name:** Porodo Lifestyle 4K Digital Camera – 50MP, 16x Zoom, Flip Flash, 180° Rotating Screen
- **Item Model Number:** 6849108448116
- **Brand:** Porodo
- **Maximum Webcam Image Resolution:** 50 MP
- **Video Resolution:** 4K (3840x2160)
- **Digital Zoom:** 16X
- **Optical Zoom:** 1.0
- **Display:** 2.2" (180° Rotating Screen)
- **Battery Capacity:** 650mAh (1 P76 battery included)
- **Working Time:** Up to 3 hours
- **Recharge Time:** Approximately 2.5 hours
- **Charging Port:** Type-C

- **Photo Sensor Technology:** CMOS
- **Supported File Formats:** JPG (images), AVI (videos)
- **Image Stabilization:** Digital
- **Aspect Ratio:** 16:9, 4:3
- **Metering Description:** Spot
- **Product Dimensions:** 6 x 13 x 9 cm; 310 g
- **Country of Origin:** China

WARRANTY AND SUPPORT

Porodo products are designed with quality and reliability in mind. For warranty information and technical support, please refer to the official Porodo website or contact your local distributor.

Online Support: Visit the [Porodo Store on Amazon](#) for product information and updates.

Extended Warranty Options: Additional warranty plans may be available through authorized retailers. Please check with your point of purchase for details.