

[Manuals.plus](#) /

› [Funko](#) /

› Funko Pop! Lilo & Stitch Angel with Lights (Model 1505) Instruction Manual

Funko 1505

Funko Pop! Lilo & Stitch Angel with Lights (Model 1505) Instruction Manual

This manual provides essential information for the setup, operation, maintenance, and specifications of your Funko Pop! collectible figure.

PRODUCT OVERVIEW

The Funko Pop! Lilo & Stitch Angel with Lights is a collectible vinyl figure featuring the character Angel from Disney's Lilo & Stitch. This special edition figure is adorned with a festive Santa hat and holds a string of colorful lights, designed for display and includes an illumination feature.



This image displays the Funko Pop! Angel figure, characterized by its stylized design, large head, and small body. Angel is depicted in a festive holiday theme, complete with a red and white Santa hat and a string of multi-colored lights.

SETUP

Unboxing

Carefully remove the figure from its packaging. Retain the packaging for future storage or reference, as it can help protect the figure's condition.

Placement

Place the figure on a stable, flat surface away from direct sunlight, extreme temperatures, and moisture. These conditions can cause fading, warping, or other damage to the figure's paint and material.

Activating Lights

If your figure includes an illumination feature, locate the battery compartment, typically on the base of the figure. Insert the required batteries (not included) according to the polarity markings. Activate the lights using the designated switch, if present. Refer to the product packaging for specific battery type requirements.

OPERATION

This Funko Pop! figure is primarily a display item. Its main operational feature is the integrated lighting.

Light Function

To activate the lights, ensure batteries are correctly installed (if applicable) and use the power switch. The lights are designed to provide a unique visual enhancement to the figure, making it stand out in your collection.

MAINTENANCE

Cleaning

To clean the figure, gently wipe it with a soft, dry, lint-free cloth. Avoid using abrasive cleaners, solvents, or excessive moisture, as these can damage the paint or material. For stubborn dirt, a slightly damp cloth can be used, followed by immediate drying.

Storage

When not on display, store the figure in its original packaging or a protective container in a cool, dry place. This helps prevent dust accumulation, exposure to harmful elements, and potential damage from impacts.

TROUBLESHOOTING

Lights Not Working

- Check if batteries are correctly inserted and not depleted (if battery-operated). Replace with fresh batteries if necessary.
- Ensure the power switch is in the "ON" position.
- Inspect the battery compartment for any corrosion or loose connections.
- If the issue persists after checking these points, contact Funko customer support for further assistance.

SPECIFICATIONS

Feature	Detail
Brand	Funko
Model Number (Pop! Collection)	1505
Manufacturer Model Number	1674
Material	Vinyl (Resin)
Dimensions (L x W x H)	10 x 8 x 15 cm (approximately 3.9 x 3.1 x 5.9 inches)
Weight	222.26 g (approximately 0.49 lbs)
Color	Multicolor

Special Features	Illumination, Realistic Details
Number of Pieces	1

WARRANTY INFORMATION

Specific warranty details for Funko Pop! figures are typically provided with the product packaging or available on the official Funko website. Please refer to these resources for comprehensive warranty terms and conditions. Keep your proof of purchase for any warranty claims.

CUSTOMER SUPPORT

For further assistance, product inquiries, or to report any issues with your Funko Pop! figure, please visit the official Funko website or contact their customer support directly.

You can also visit the Funko Brand Store on Amazon for more information and products:

[Visit the Funko Brand Store on Amazon](#)