



Manuals.plus /

› LEDIARY /

› LEDIARY 16-Inch Light Oak Caged Flush Mount Ceiling Fan User Manual

## LEDIARY Y24FSD0030-5801

# LEDIARY 16-Inch Light Oak Caged Flush Mount Ceiling Fan User Manual

Model: Y24FSD0030-5801 | Brand: LEDIARY

## 1. SAFETY INFORMATION

Please read and understand this entire manual before attempting to assemble, operate, or install the product. Failure to do so could lead to electric shock, fire, or serious personal injury.

- Always turn off power at the main circuit breaker before installation or maintenance.
- Ensure all electrical connections comply with local codes and ordinances, as well as the National Electrical Code (NEC). If you are unfamiliar with proper electrical wiring, consult a qualified electrician.
- Use only E26 bulbs (not included) as specified for this fixture.
- Do not bend or damage the fan blades during installation or cleaning.
- Keep hands, hair, and clothing away from the fan blades when the fan is operating.

## 2. PACKAGE CONTENTS

Verify that all components listed below are included in your package:

- LEDIARY Caged Flush Mount Ceiling Fan Unit
- Remote Control
- Hardware Bags (screws, wire nuts, mounting bracket)

*Note: E26 light bulbs are not included and must be purchased separately.*

## 3. PRODUCT OVERVIEW

The LEDIARY Caged Flush Mount Ceiling Fan combines modern farmhouse aesthetics with practical functionality. Its unique square light oak color cage design adds an artistic touch, making it suitable for various spaces including bedrooms, kitchens, and living rooms. This 16-inch bladeless fan features a quiet reversible

DC motor and is operated by a convenient remote control.




Figure 3.1: The LEDIARY Caged Flush Mount Ceiling Fan in a room setting, demonstrating remote control operation.



# Powerful, Peaceful & Comfortable

Ultra Quiet Operation

< 35dB

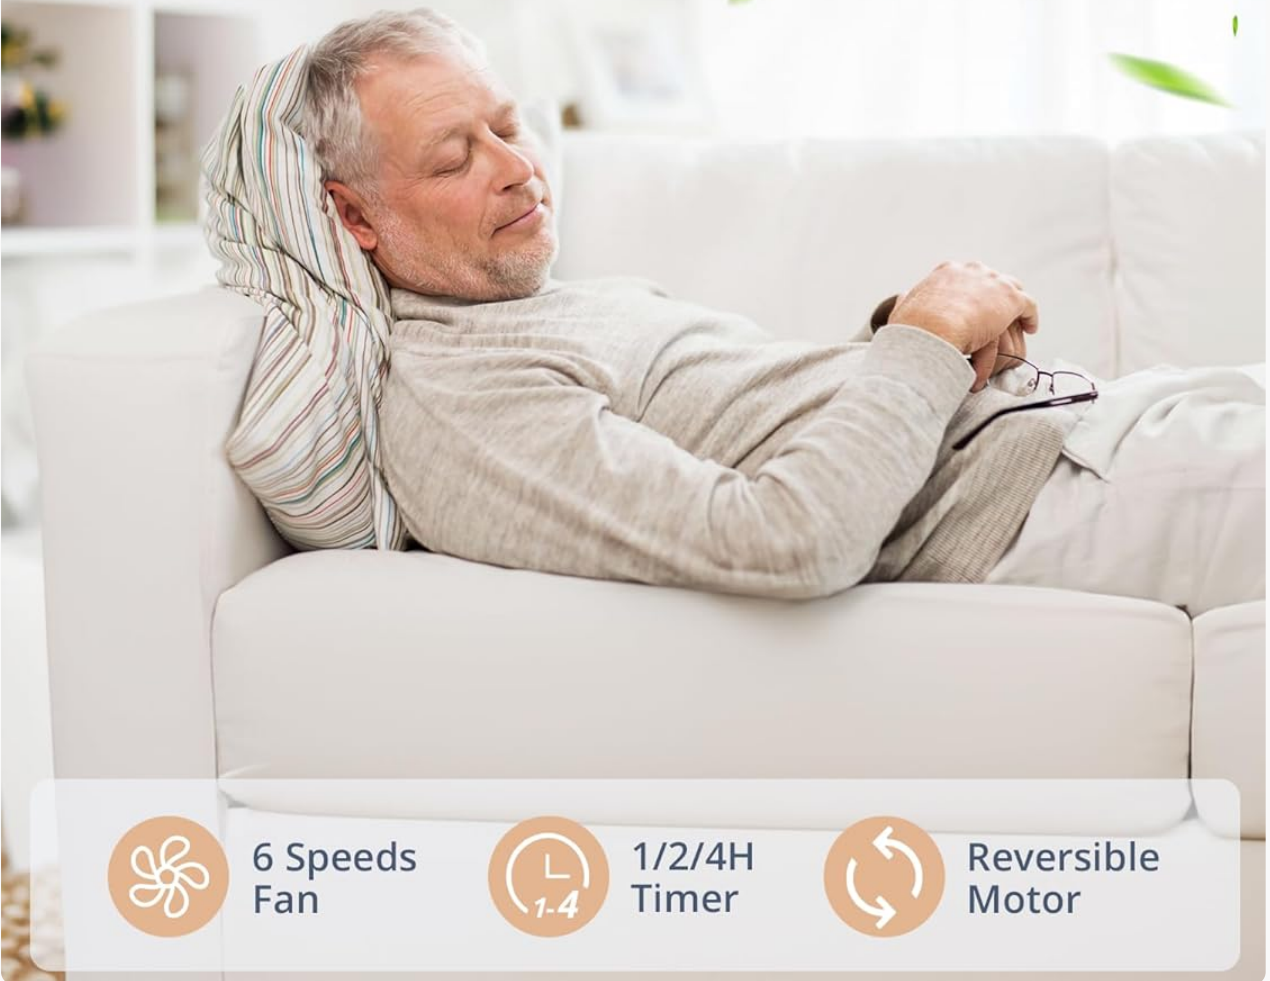

6 Speeds  
Fan



1/2/4H  
Timer



Reversible  
Motor

Figure 3.2: The fan operates quietly, with noise levels below 35dB, ensuring a peaceful environment.

# Cool in Summer & Warm in Winter

Through Reversible Air Circulation



Figure 3.3: Illustration of the reversible motor function for year-round comfort: downward airflow for summer cooling and upward airflow for winter heat circulation.

**Powerful  
Reversible Motor**



**E26 Bulbs Base  
(bulb not included)**



**Long-lasting  
7x ABS Blades**




**Unique Metal  
Caged Design**



*Figure 3.4: Detailed view of the powerful reversible DC motor, E26 bulb bases, long-lasting ABS blades, and unique metal caged design.*



# Compact 22.6" Ceiling Fan

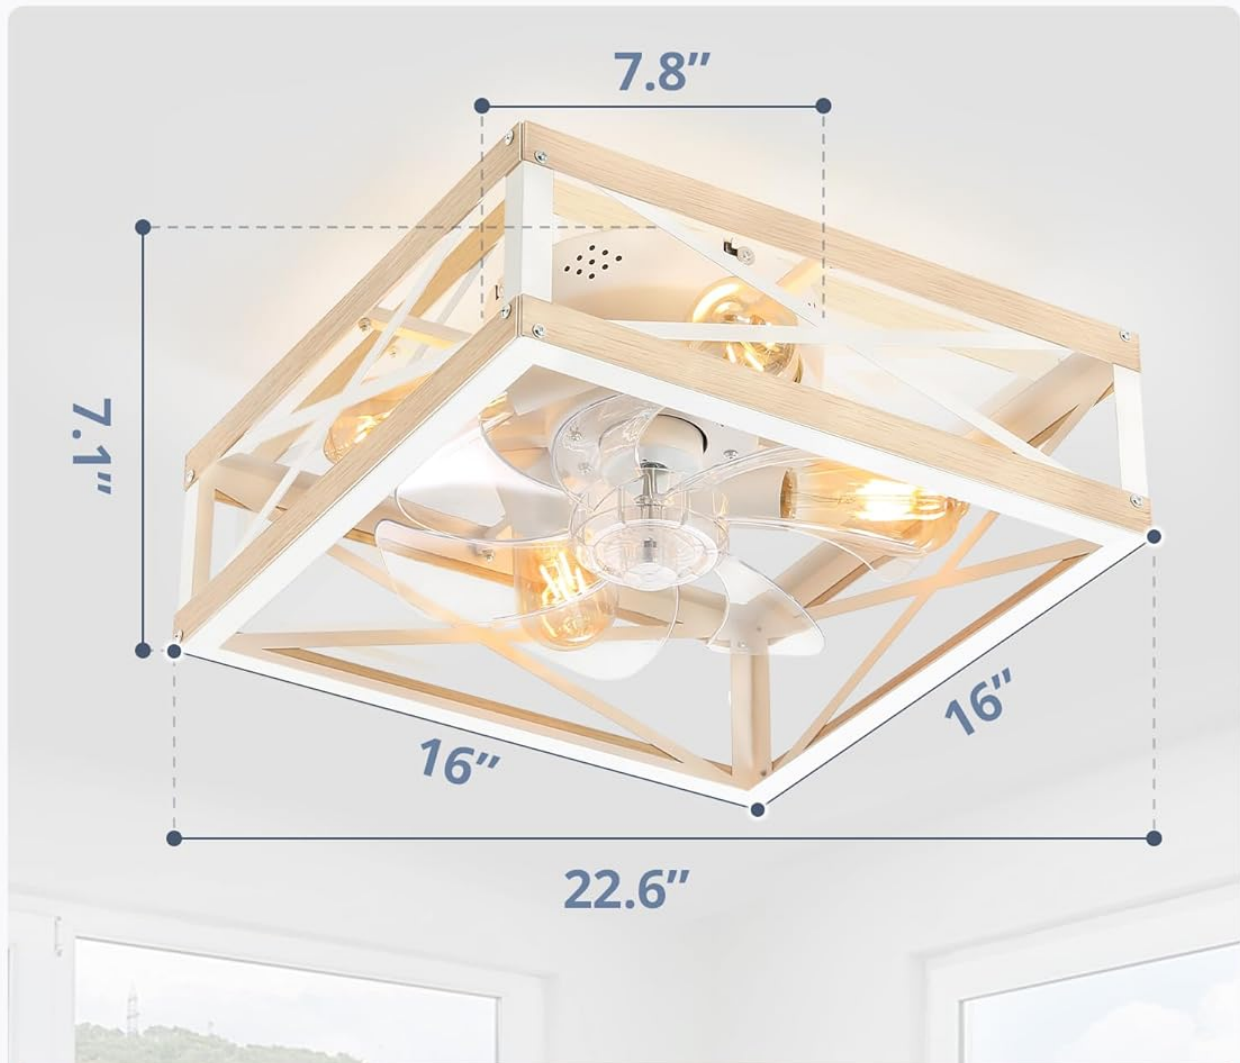

## Compatible with any E26 Bulbs

**E26\*4**  
(not included)



LED Edison Bulb A19



LED Bulb A19



LED Edison Bulb ST19



LED Bulb ST19



Edison LED Bulb T14

Figure 3.5: Product dimensions: 16 inches (D) x 16 inches (W) x 7.1 inches (H).

## 4. INSTALLATION

The components of the caged ceiling fan are largely pre-assembled for ease of installation. You primarily need to mount the unit onto the ceiling and connect the wiring. Installation can typically be completed in under 15 minutes without the need for an electrician, provided you follow the instructions carefully.

Figure 4.1: Visual guide for the installation process, including fixing the hanging board, connecting power lines, and securing the ceiling plate.

### Installation Steps:

1. **Prepare the Mounting Location:** Ensure the power is OFF at the circuit breaker. Remove any existing fixture.
2. **Install the Hanging Board:** Secure the hanging board to your ceiling junction box using the provided screws.
3. **Connect Wiring:** Carefully connect the fan's electrical wires to your household wiring according to the wiring diagram in the full manual. Use the provided wire nuts.
4. **Mount the Fan Unit:** Lift the fan unit and align it with the hanging board. Secure it in place using the appropriate screws.
5. **Install Light Bulbs:** Screw in four E26 base light bulbs (not included) into the sockets.
6. **Restore Power:** Turn the power back ON at the main circuit breaker.

## 5. OPERATING INSTRUCTIONS

The LEDIARY ceiling fan is controlled by a silent remote, offering convenient operation of its various features.

# Silent Remote Control



Figure 5.1: Remote control with clearly labeled buttons for fan and light functions.

## Remote Control Functions:

- **Power ON/OFF:** Press the power button to turn the fan and light on or off simultaneously.
- **Light Control:** Separate buttons allow you to turn the light ON/OFF independently from the fan.
- **Fan Speed:** Choose from 6 wind speeds (Low, Medium, High) to adjust airflow.
- **Reversible Mode (F/R):** Toggle between forward (downward airflow for cooling in summer) and reverse

(upward airflow for circulating warm air in winter) modes.

- **Timer Setting:** Set the fan to automatically turn off after 1, 2, or 4 hours.
- **Natural Breeze Mode:** Activates a fluctuating fan speed to simulate a natural breeze.
- **Sound ON/OFF:** Mute or unmute the remote's beeping sound.

## 6. MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your ceiling fan.

- **Cleaning:** To avoid scratching the finish, clean the fan with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Tighten Fasteners:** Periodically check all screws and connections for tightness. Due to the fan's natural movement, some connections may become loose over time.
- **Bulb Replacement:** Ensure power is off before replacing light bulbs. Allow bulbs to cool completely before handling.

## 7. TROUBLESHOOTING

If you encounter issues with your LEDIARY ceiling fan, refer to the common problems and solutions below:

Problem	Possible Cause	Solution
Fan does not operate	No power to the fan; Loose wire connections; Remote control battery low/dead.	Check circuit breaker; Verify all wire connections are secure; Replace remote control batteries.
Light does not turn on	Light bulbs are faulty or not installed correctly; Loose wire connections to light kit.	Replace light bulbs; Ensure bulbs are screwed in tightly; Check light kit wiring.
Remote control not working	Batteries are dead or incorrectly inserted; Remote not paired with fan.	Replace batteries, ensuring correct polarity; Refer to the full manual for remote pairing instructions.
Fan is noisy	Loose screws on mounting bracket or fan housing; Fan blades are unbalanced.	Tighten all screws; Ensure fan blades are securely attached and balanced (a balancing kit may be needed).

If the problem persists after attempting these solutions, please contact customer support.

## 8. SPECIFICATIONS

Feature	Detail
Brand	LEDIARY
Model Name	Y24FSD0030-5801
Color	Light Oak
Electric Fan Design	Ceiling Fan
Power Source	DC Motor
Style	Farmhouse
Product Dimensions	16"D x 16"W x 7.1"H
Room Type	Kitchen, Bedroom, Living Room, Dining Room
Special Features	Remote Controlled, Timer, 6 Wind Speeds, Reversible Mode, Natural Breeze Mode
Recommended Uses	Air Circulation
Wattage	17 watts
Voltage	120 Volts
Item Weight	7.26 Pounds
Indoor/Outdoor Usage	Indoor
Number of Power Levels	6
Light Bulb Base	E26 (bulbs not included)

## 9. WARRANTY AND SUPPORT

LEDIARY stands behind the quality of its products. This ceiling fan comes with **5-year warranty on the motor** and a **2-year service warranty on other parts**.

For any product inquiries, technical support, or warranty claims, please contact LEDIARY customer service through the retailer's platform or visit the official LEDIARY store online. Please have your model number (Y24FSD0030-5801) and purchase date available when contacting support.

We are committed to providing a great shopping experience and value your feedback.