

[Manuals.plus](#) /

› [Gotopceed](#) /

› Rechargeable Motion Sensor Ceiling Light User Manual

Gotopceed T070

Rechargeable Motion Sensor Ceiling Light User Manual

Brand: Gotopceed | **Model:** T070

INTRODUCTION

The Gotopceed Rechargeable Motion Sensor Ceiling Light provides convenient, wire-free illumination for various indoor spaces. Featuring a high-capacity rechargeable battery, magnetic installation, and versatile operating modes, this light is designed for ease of use and adaptability. It offers multiple color temperatures and adjustable brightness to suit your lighting needs.



Figure 1: Gotopceed Rechargeable Motion Sensor Ceiling Light Kit

WHAT'S IN THE BOX

- 2 x Rechargeable Motion Sensor Light
- 2 x Remote Control
- 2 x USB Cable
- 2 x Magnet Strip
- 4 x Sticky Back Pads
- 1 x Manual

SETUP

1. Charging the Light

Before first use, fully charge the ceiling light using the provided USB cable. The light features an 8000mAh high-capacity battery. A

full charge typically takes 4-5 hours.

- Connect the USB cable to the charging port on the light and a compatible USB power source.
- The charging indicator will show the charging status.
- Once fully charged, the light can last 7-10 hours in 'Stay On' mode or 30-60 days in 'Motion Sensor' mode, depending on usage frequency and brightness settings.



Figure 2: USB Charging Port and Battery Capacity

2. Installation Methods

The light offers two convenient installation methods: magnetic mounting with sticky pads or screw mounting for rougher surfaces.

Magnetic Mounting (No Drilling Required)

1. Clean the desired installation surface thoroughly to ensure it is dry and free of dust.
2. Peel off the protective film from one side of the sticky back pads and attach them to the magnet strip.
3. Peel off the protective film from the other side of the sticky back pads and firmly press the magnet strip onto the ceiling or wall.
4. Align the light with the installed magnet strip. The light will magnetically attach to the strip, holding it securely in place.

Screw Mounting (Optional)

For more permanent installation or on textured surfaces where adhesive might not hold, you can screw the magnet strip into place.

1. Position the magnet strip on the desired surface and mark the screw hole locations.
2. Drill pilot holes if necessary.
3. Secure the magnet strip to the surface using appropriate screws (not included, but typically small screws are sufficient).
4. Magnetically attach the light to the secured magnet strip.



Figure 3: Magnetic Mounting Principle

OPERATING INSTRUCTIONS

1. Working Modes

The light has two primary working modes, selectable via the remote control or buttons on the light:

- **Sensor Mode:** The light will automatically turn on when motion is detected within 9-16 feet and turn off after 20 seconds of no

movement. This mode is ideal for areas like hallways, closets, or stairs.

- **Stay On Mode:** The light remains continuously on until manually turned off. This mode is suitable for situations requiring prolonged illumination.



Figure 4: Understanding Working Modes

2. Remote Control Functions

Use the included remote control to easily adjust the light's settings:

- **On/Off:** Turn the light on or off.
- **Mode Selection:** Switch between Sensor Mode and Stay On Mode.
- **Color Temperature Adjustment:** Choose from 3 color temperatures:
 - 3000K (Warm White)
 - 4000K (Natural Light)
 - 6000K (Cool White)
- **Brightness Dimming:** Adjust the brightness across 10 levels to achieve your desired illumination.

- **Timer Function:** Set the light to automatically switch off after 15, 30, or 60 minutes.

Easy Remote Control

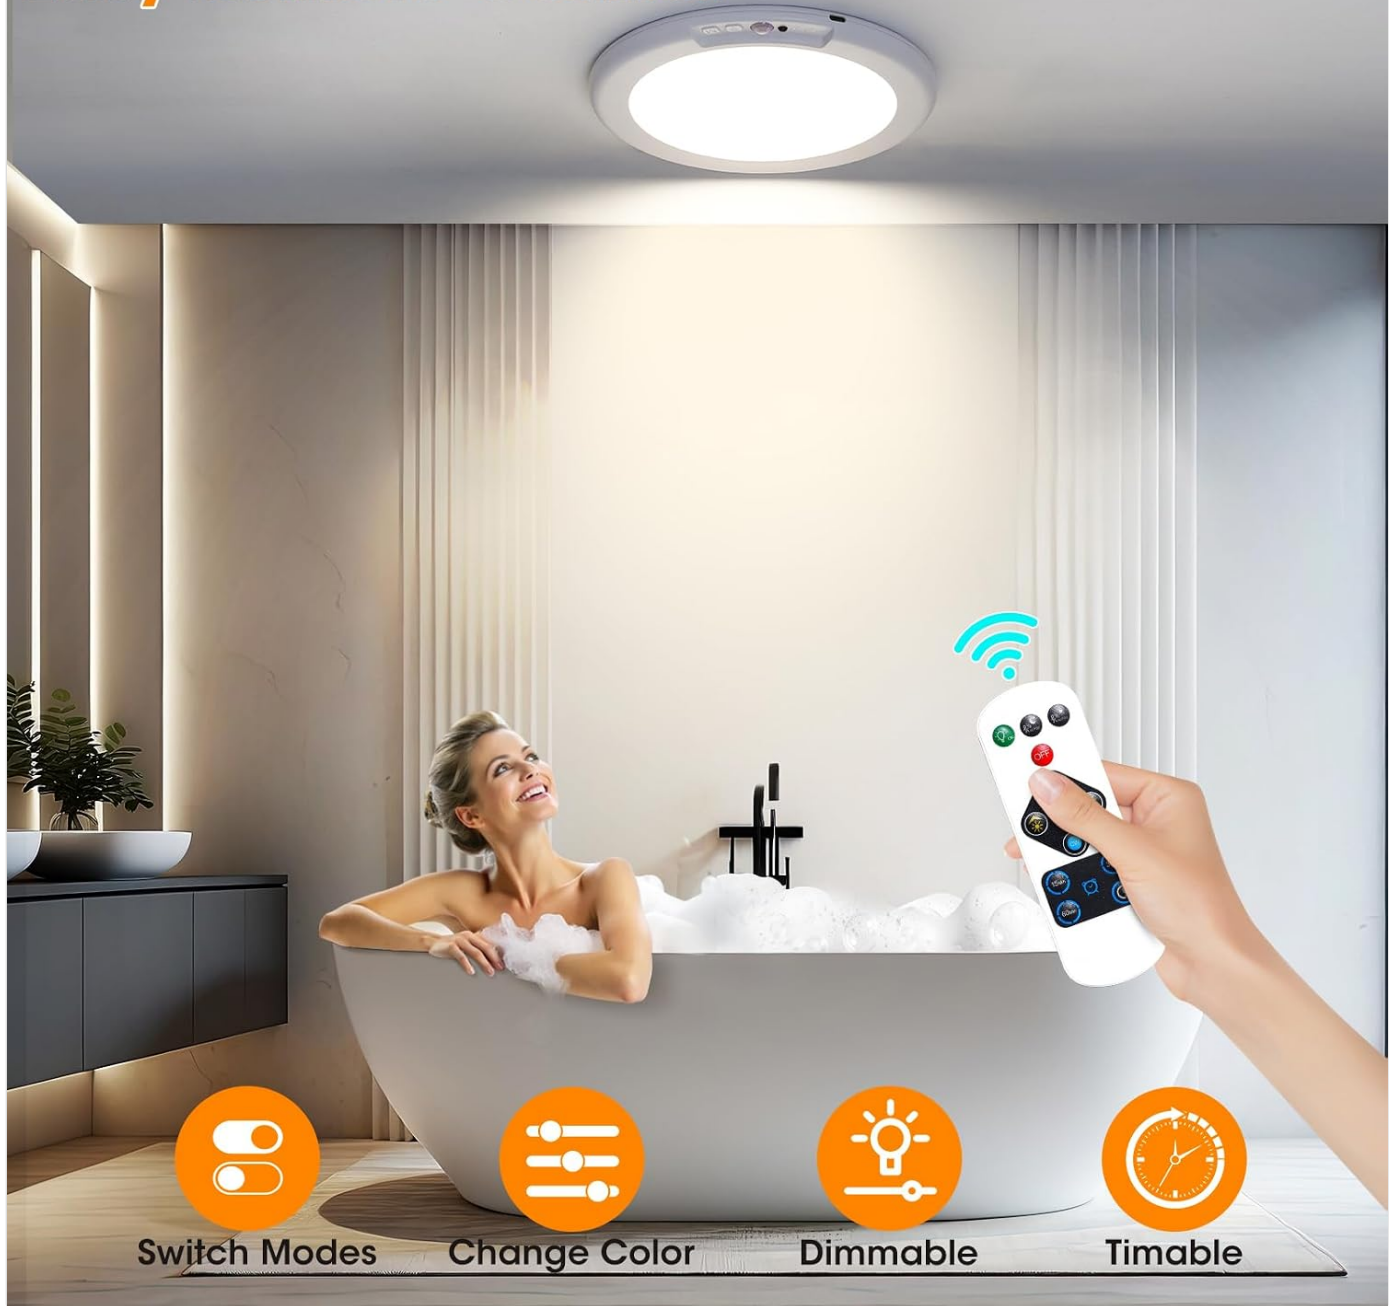


Figure 5: Remote Control Features



Figure 6: Color Temperature and Dimmable Options

MAINTENANCE

1. Recharging

When the light's brightness diminishes or it stops responding, it's time to recharge the battery. Simply detach the light from its magnetic base and connect it to the USB cable for charging as described in the Setup section.

2. Cleaning

To clean the light, gently wipe its surface with a soft, dry cloth. Do not use abrasive cleaners or immerse the light in water, as it is not water resistant.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Light does not turn on.	Battery is depleted.	Recharge the light fully.
Light does not turn on in Sensor Mode.	Insufficient darkness (if in Night Mode). Motion sensor obstructed or out of range.	Ensure the environment is dark enough for Night Mode, or switch to Day Mode. Clear any obstructions and ensure motion is within the 9-16 feet detection range.
Light turns off too quickly.	No continuous motion detected.	Ensure continuous motion within the sensor range or switch to 'Stay On' mode for prolonged illumination.
Remote control not working.	Remote battery depleted or signal obstructed.	Replace the remote control battery (A batteries). Ensure no obstructions between remote and light.
Light falls from mounting surface.	Adhesive failure or improper surface preparation.	Ensure surface is clean and dry before applying sticky pads. For textured or uneven surfaces, use screw mounting.

SPECIFICATIONS

Brand	Gotopceed
Model Name	2 Pack Rechargeable Motion Sensor Ceiling Light
Model Number	T070
Color	3 Colour Temperatures
Material	Plastic
Product Dimensions	7.5"L x 7.5"W x 0.5"H
Item Weight	1.63 pounds
Power Source	Battery Powered
Battery Capacity	8000mAh (Built-in)
Light Source Type	LED
Brightness	400 Lumen
Light Color Temperatures	3000K/4000K/6000K
Control Method	Remote, Motion Sensor
Installation Type	Magnetic Mounting
Indoor/Outdoor Usage	Indoor
Water Resistance Level	Not Water Resistant



Figure 7: Versatile Application Areas

WARRANTY AND SUPPORT

Gotopceed provides comprehensive customer support for your rechargeable ceiling light:

- **24 Hours Support:** Customer service is available 7 days a week, 24 hours a day, to assist you with any inquiries or issues. Expect a response within 12 hours.
- **24 Months Warranty:** The product comes with a 24-month after-sales service warranty. If you encounter any problems with your rechargeable motion sensor light, please contact us for a free replacement after confirmation.

For support, please refer to the contact information provided on the product packaging or the official Gotopceed website.

© 2025 Gotopceed. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question