

[Manuals.plus](#) /

› [Seesii](#) /

› SEESII Reciprocating Saw Cordless Instruction Manual

Seesii WFJ

SEESII Reciprocating Saw Cordless

INSTRUCTION MANUAL



Model: WFJ

1. PRODUCT OVERVIEW

The SEESII Cordless Reciprocating Saw (Model WFJ) is a versatile and powerful tool designed for efficient cutting of various materials including wood, PVC, and metal. Featuring a brushless motor, variable speed control, and a lightweight design, it offers both performance and ease of use for a wide range of projects.

What's Included:

- 1 × Cordless Reciprocating Saw
- 1 × Storage Box
- 8 × Saw Blades (various types for wood, metal, plastic)
- 2 × 4.0Ah Batteries
- 1 × Fast Charger
- 1 × User Manual
- 1 Pair of Gloves
- 1 Pair of Safety Glasses



Figure 1.1: Complete package contents of the SEESII Reciprocating Saw.

2. IMPORTANT SAFETY INFORMATION

Always adhere to basic safety precautions when operating power tools to reduce the risk of fire, electric shock, and serious personal injury. Keep this manual for future reference.

- **Read All Instructions:** Familiarize yourself with the tool's operation and safety features before use.
- **Wear Personal Protective Equipment (PPE):** Always wear safety glasses, gloves, and appropriate hearing protection.
- **Maintain Work Area:** Keep your work area clean and well-lit. Cluttered or dark areas invite accidents.
- **Avoid Dangerous Environments:** Do not use power tools in damp or wet locations, or expose them to rain.
- **Secure Workpiece:** Always clamp or otherwise secure the material being cut to prevent movement during operation.

- **Use Safety Lock Button:** The saw features a built-in lock button to prevent accidental activation. Engage this lock when the tool is not in use, during blade changes, or during transport.
- **Tool-Free Blade Change:** Utilize the tool-free blade change mechanism for safe and quick blade swaps. Ensure the tool is off and the battery is removed before changing blades.

3. COMPONENTS IDENTIFICATION

Understanding the different parts of your reciprocating saw is crucial for safe and effective operation.

- **Blade Clamp:** Secures the saw blade in place.
- **Shoe/Foot:** Provides stability and depth control during cutting.
- **Motor Housing:** Encloses the brushless motor.
- **Handle:** Ergonomically designed for comfortable grip.
- **Trigger Switch:** Activates the saw and controls variable speed.
- **Safety Lock Button:** Prevents accidental startup.
- **Battery Port:** Where the battery pack is inserted.
- **LED Work Light:** Illuminates the cutting area.

2x4000mAh Batteries



Long-Lasting Runtime



Figure 3.1: Key components of the reciprocating saw.

4. SETUP AND ASSEMBLY

4.1 Battery Charging and Installation

Your SEESII Reciprocating Saw comes with two 4.0Ah batteries and a fast charger to ensure extended usage and minimal downtime.

1. **Charging the Battery:** Connect the fast charger to a power outlet. Insert the battery pack into the charger. The indicator lights on the battery will show the charging status. A full charge typically takes approximately 1 hour for 30 minutes of working time.
2. **Installing the Battery:** Align the battery pack with the battery port on the saw handle. Slide the battery into place until it clicks securely.

3. **Removing the Battery:** Press the battery release button (usually located on the side of the battery) and slide the battery pack out of the tool.

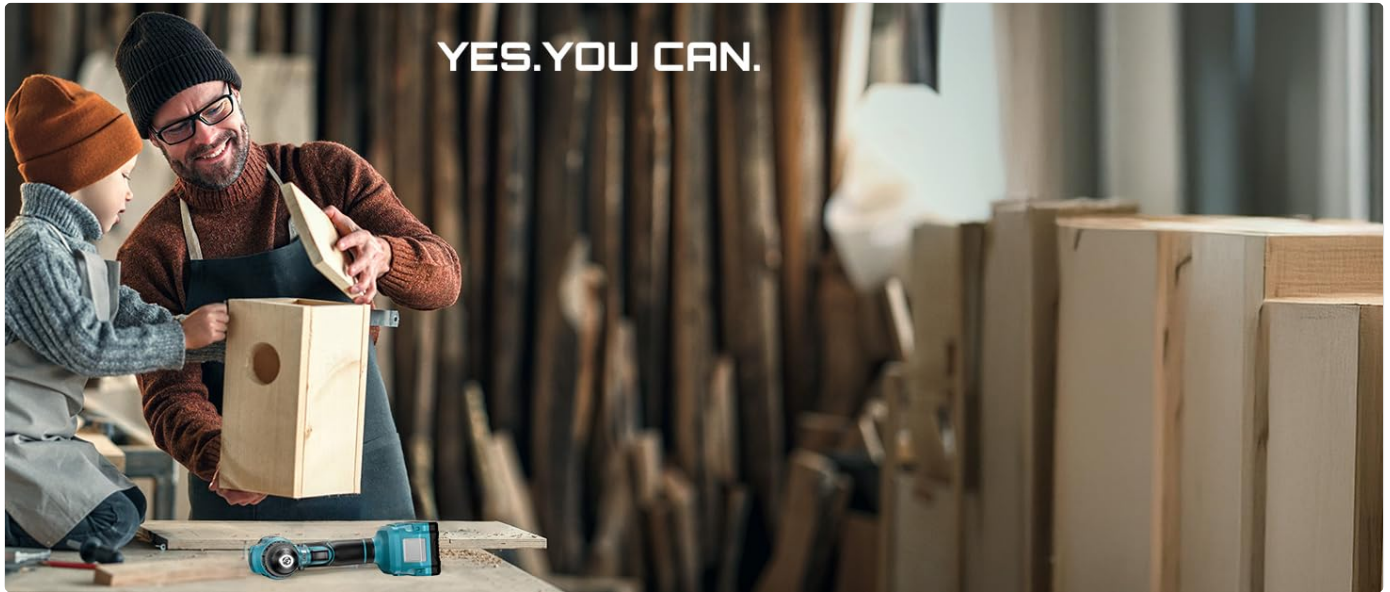


Figure 4.1: Battery installation and runtime indication.

4.2 Blade Installation and Removal (Tool-Free)

The tool-free blade change system allows for quick and easy blade swaps without additional tools.

1. **Ensure Safety:** Always remove the battery pack from the saw before installing or removing a blade.
2. **Open Blade Clamp:** Rotate the blade clamp lever (or mechanism) to the open position.
3. **Insert Blade:** Insert the shank of the saw blade fully into the blade clamp opening. Ensure the teeth are facing the correct direction for cutting.
4. **Secure Blade:** Release the blade clamp lever. The blade should be firmly locked in place. Gently pull on the blade to confirm it is secure.
5. **Remove Blade:** To remove, simply rotate the blade clamp lever to the open position and pull the blade out.

Portable Reciprocating Saw

Lightweight, carry with easy



Figure 4.2: Tool-free blade change in action.

5. OPERATING YOUR RECIPROCATING SAW

5.1 Power On/Off and Variable Speed Control

The saw features a variable speed trigger, allowing you to adjust the cutting speed based on the material and application.

1. **Starting the Saw:** Ensure the safety lock button is disengaged. Press the trigger switch to start the saw.
2. **Variable Speed:** The saw operates with a variable speed from 0 to 3500 RPM. Apply less pressure to the trigger for lower speeds (0-1800 RPM) and more pressure for higher speeds (1800-3500 RPM). This allows for precise control and optimal cutting performance for different materials.
3. **Stopping the Saw:** Release the trigger switch to stop the saw. Engage the safety lock button when finished with operation.

Adjustable Speed



Figure 5.1: Adjustable speed control for various tasks.

5.2 Cutting Techniques and Applications

The SEESII Reciprocating Saw is designed for versatile cutting across various materials.

- **Material Versatility:** With the included 8 saw blades, you can cut through wood (up to 50mm depth), plastic (up to 130mm depth), and metal (up to 20mm depth). Select the appropriate blade for the material you are cutting.
- **Stroke Length:** The 15mm stroke length ensures efficient material removal and precise cuts.
- **Lightweight Design:** Weighing only 2.0 LBS, this saw is engineered for comfortable one-handed operation, reducing fatigue during extended use.
- **Built-in LED Light:** The integrated LED work light illuminates dark work areas, enhancing visibility and precision, especially in low-light conditions such as under furniture or in basements.

Saw Blades

Meet All Your Cutting Needs



Metal

Max Cutting Depth

20 mm



Wood

Max Cutting Depth

50 mm



Plastic

Max Cutting Depth

130 mm



Figure 5.2: Versatile cutting capabilities for different materials.



Built-in LED Light



Figure 5.3: LED work light for improved visibility.

6. MAINTENANCE AND CARE

Proper maintenance ensures the longevity and optimal performance of your SEESII Reciprocating Saw.

- **Cleaning:** Regularly clean the saw's exterior with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners. Keep the ventilation openings free from dust and debris to prevent overheating.
- **Blade Care:** Inspect blades before each use for sharpness and damage. Replace dull or damaged blades immediately to ensure efficient and safe cutting.
- **Battery Care:** Store batteries in a cool, dry place away from direct sunlight and extreme temperatures. Do not store fully discharged batteries for extended periods.
- **Storage:** When not in use, store the saw and its accessories in the provided storage box in a dry, secure location, out of reach of children.

7. TROUBLESHOOTING

This section addresses common issues you might encounter with your reciprocating saw.

Problem	Possible Cause	Solution
Saw does not start	Battery not charged or improperly installed; Safety lock engaged; Faulty trigger switch	Ensure battery is fully charged and securely installed. Disengage the safety lock button. If problem persists, contact customer support.
Blade not cutting effectively	Dull or incorrect blade for material; Blade not securely installed; Insufficient power	Replace with a sharp, appropriate blade. Ensure blade is fully seated and locked. Check battery charge.
Excessive vibration	Loose blade; Damaged blade; Improper cutting technique	Ensure blade is securely installed. Replace damaged blade. Adjust cutting technique to reduce strain on the tool.
Battery not charging	Charger not plugged in; Faulty battery or charger; Poor connection	Verify charger is plugged into a working outlet. Ensure battery is correctly inserted into charger. Try another battery if available. Contact customer support if issue persists.

8. TECHNICAL SPECIFICATIONS

Feature	Specification
Brand	Seesii
Model Number	WFJ
Color	Blue
Power Source	Battery Powered
Voltage	21 Volts
Wattage	200 watts
Speed	0-3500 RPM (Variable)
Blade Length	8 Inches
Stroke Length	15mm

Feature	Specification
Max Cutting Depth (Wood)	50 mm
Max Cutting Depth (Plastic)	130 mm
Max Cutting Depth (Metal)	20 mm
Item Weight	2.0 LBS (Tool only), 7.98 pounds (Package)
Product Dimensions	13.77"L x 10.62"W x 3.54"H
Battery Type	Lithium Ion (2 x 4.0Ah included)
Special Features	8 Saw Blades, Brushless Motor, Ergonomic Handle, Keyless Blade Change, Lightweight, Built-in LED Light

9. WARRANTY AND CUSTOMER SUPPORT

SEESII is committed to providing high-quality products and excellent customer service.

- **Technical Support:** Enjoy 36 months of technical support for your product.
- **Fast Response:** Expect a fast response to your inquiries, typically within 24 hours.
- **Contact Information:** For any questions, concerns, or technical assistance, please refer to the contact details provided in the included user manual or visit the official Seesii Store online.



Figure 9.1: Dedicated customer support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DPW3VYX5>

More documents and user manuals: <https://manuals.plus/>