

[Manuals.plus](#) /

› [Salange](#) /

› Salange Projector Protective Case User Manual

Salange SHY320-Bag

Salange Projector Protective Case User Manual

Model: SHY320-Bag

1. INTRODUCTION

This user manual provides essential information for the proper use, setup, and maintenance of your Salange Projector Protective Case. Please read this manual thoroughly before using the product to ensure optimal performance and longevity.

2. PRODUCT OVERVIEW

The Salange Projector Protective Case is designed to safely store and transport your mini projector and its accessories. It features a durable construction with internal compartments for organized storage and enhanced protection.

Key Features:

- **Dimensions:** 4.92inch*5.11inch*9.44inch (whole bag). 3.93inch*4.72inch*7.87 (inter dimensions).
- **Compatibility:** Primarily designed for HY300, HY320, J9C, YG300, and other mini projectors.
- **High-quality Material:** Constructed from Oxford fabric and EVA material, ensuring friction-resistance and durability.
- **Separated Storage Section:** Features an upper compartment for HDMI and AV cables, remote controls, and other accessories. The bottom area includes a fixing belt to secure the projector.
- **Protective Design:** Thick padding throughout the bag reduces the risk of damage from drops or bumps.
- **Portability:** Equipped with a sturdy handle for easy carrying, suitable for business presentations, classrooms, or parties.
- **Water Repellent:** Effectively locks out water and steam.



Figure 2.1: Salange Projector Protective Case shown with a compatible mini projector, illustrating its primary function as a protective carrying solution.

3. SETUP AND USAGE

This section details how to properly set up and use your protective case for optimal storage and transport.

3.1 Placing Your Projector

1. Open the main zipper of the case to reveal the interior compartments.
2. Locate the bottom section designed for the projector. This section is equipped with a fixing belt.
3. Carefully place your mini projector (e.g., HY300, HY320) into this bottom section.
4. Secure the projector using the internal fixing belt to prevent movement during transport. Ensure it is snug but not overly tight.



Figure 3.1: The interior of the Salange case, showing a projector secured by the fixing belt and accessories stored in the upper mesh pocket.

3.2 Storing Accessories

1. Utilize the separated storage section located in the lid of the case. This typically includes a zippered mesh pocket.
2. Place smaller accessories such as HDMI cables, AV cables, remote controls, and USB drives into this pocket.
3. Ensure accessories are neatly arranged to avoid bulging or pressure on the projector when the case is closed.



Figure 3.2: An illustration of the case's dimensions and examples of compatible projector models (HY320PRO, YG300, HY300), highlighting the internal space for accessories.

4. CARRYING AND TRANSPORT

The Salange Projector Protective Case is designed for easy and secure transport of your projector and its accessories.

4.1 Using the Handle

- Once the projector and accessories are securely placed inside and the case is zipped closed, use the sturdy top handle for carrying.
- Ensure the zipper is fully closed to prevent items from falling out during transport.



Figure 4.1: Detailed view of the case showing external dimensions (24cm length, 13cm width, 12.5cm height) and internal dimensions (16cm length, 10cm width, 12cm height), indicating its compact and portable design.

5. CARE AND MAINTENANCE

Proper care will extend the life of your Salange Projector Protective Case and ensure continued protection for your device.

5.1 Cleaning Instructions

- For general cleaning, wipe the exterior of the case with a soft, damp cloth.
- For stubborn stains, a mild soap solution can be used. Avoid harsh chemicals or abrasive cleaners.
- Allow the case to air dry completely before storing or using it again.

5.2 Water Repellency


The case features water-repellent material. While it effectively locks out water and steam, it is not fully waterproof. Avoid

submerging the case in water or exposing it to heavy rain for extended periods.

SUPERIOR 360 PROTECTION.



Drop resistant

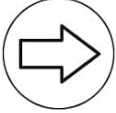

Collision Resistant



Reliable protection





WATER REPELLENT



effectively lock water and steam

Figure 5.1: A close-up view demonstrating the water-repellent properties of the case's fabric, showing water droplets beading on the surface.

6. TROUBLESHOOTING

This section addresses common concerns regarding the protective case.

Problem	Possible Cause	Solution
Projector does not fit or is too snug.	The projector model may exceed the case's internal dimensions.	Verify your projector's dimensions against the case's internal dimensions (3.93"x4.72"x7.87"). This case is mainly for mini projectors like HY300, HY320, J9C, YG300.

Problem	Possible Cause	Solution
Zipper is stiff or stuck.	Dirt or debris in the zipper teeth; zipper misalignment.	Clean the zipper teeth with a small brush. Apply a small amount of zipper lubricant (e.g., wax) if needed. Ensure the fabric is not caught in the zipper.
Case appears less protective after a drop.	Internal padding may be compressed or damaged.	Inspect the internal padding for any visible damage or permanent compression. While designed to absorb shocks, severe impacts can compromise protection. Consider replacement if significant damage is observed.

7. SPECIFICATIONS

Attribute	Detail
Brand	Salange
Model Number	SHY320-Bag
Product Dimensions (External)	13 x 12.5 x 24 cm (LxWxH)
Internal Dimensions	3.93 inch x 4.72 inch x 7.87 inch (approx. 10cm x 12cm x 20cm)
Item Weight	150 g
Material	Oxford fabric and EVA material
Compatibility	HY300, HY320, J9C, YG300, and most mini projectors
Features	Separated storage, fixing belt, thick padding, water repellent, portable handle

8. WARRANTY AND SUPPORT

For any product-related inquiries, support, or warranty information, please contact Salange customer service through the retailer where the product was purchased or visit the official Salange website.

Please retain your purchase receipt as proof of purchase for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DPW7NR9L>

More documents and user manuals: <https://manuals.plus/>