

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [AULCMEET](#) /

› [AULCMEET MR24GA Magic Remote Instruction Manual for LG 2024 OLED and QNED TVs](#)

AULCMEET MR24GA

AULCMEET MR24GA Magic Remote Instruction Manual

Model: MR24GA

INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your AULCMEET MR24GA Magic Remote. This remote is designed as a replacement for compatible LG 2024 OLED and QNED series televisions, offering voice control and pointer functionality.

Compatible LG TV Models (2024 Series):

- OLED TV G4, C4, B4 Series
- QNED TV 99T, 90T, 85T, 80T, UT80, UT75 Series
- Specific models include: OLED65C4PUA, OLED65G4SUB, OLED77B4AUA, OLED77B4PUA, OLED77C4AUA, OLED77C4PUA, OLED77G4WUA, OLED83C4AUA, OLED83C4PUA, 50QNED85TUA, 55QNED85TUA, 65QNED85TUA, 75QNED85TUA, 86QNED85TUA, 43UT8000AUA, 50UT8000AUA, 55UT8000AUA, 65UT8000AUA, 70UT8000AUA, 75UT8000AUA, 86UT8000AUA, 65QNED90TUA, 75QNED90TUA, 86QNED90TUA, OLED83G4WUA, OLED97G4WUA, OLED42C4AUA, OLED42C4PUA, OLED48B4AUA, OLED48B4PUA, OLED48C4AUA, OLED48C4PUA, OLED55B4AUA, OLED55B4PUA, OLED55C4AUA, OLED55C4PUA, OLED55G4SUB, OLED65B4AUA, OLED65B4PUA, OLED65C4AUA, OLED83B4PUA, OLED55B4EUA.

PRODUCT OVERVIEW

The AULCMEET MR24GA Magic Remote features an ergonomic design for comfortable handling and provides intuitive control over your compatible LG TV. Key functions include voice commands, a pointer for on-screen navigation, and dedicated buttons for various TV features and streaming services.







Figure 1: Front and Side View of MR24GA Magic Remote. This image displays the front face of the remote with all its buttons, including the power, number pad, navigation, volume, channel, voice, and dedicated streaming service buttons. A side profile view highlights the ergonomic curve. Dimensions are overlaid, showing a length of 19.2 cm (7.56 inches) and a width of 4.4 cm (1.73 inches).

19.2 cm / 7.56 in



Figure 2: Back View of MR24GA Magic Remote. This image shows the rear of the remote control, highlighting the smooth, contoured design and the location of the battery compartment cover at the bottom.

SETUP

1. Battery Installation

1. Locate the battery compartment on the back of the remote control (refer to Figure 2).
2. Slide the battery compartment cover downwards to open it.
3. Insert two (2) AA batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Close the battery compartment cover by sliding it upwards until it clicks into place.

Note: Always use new batteries and replace both batteries at the same time. Do not mix old and new batteries or different types of batteries.

2. Pairing with Your LG TV

The AULCMEET MR24GA Magic Remote typically pairs automatically with compatible LG 2024 TVs. If the remote does not respond after battery installation, follow these steps:

1. Point the remote control towards your LG TV.
2. Press the **Wheel (OK)** button (the center button of the directional pad) for approximately 5 seconds.
3. A message indicating successful pairing should appear on your TV screen.
4. If pairing fails, remove the batteries, wait 10 seconds, reinsert them, and repeat the pairing process.
5. If issues persist, try unpairing any previously connected Magic Remote from your TV's settings (usually under *Settings > All Settings > General > Devices > Magic Remote Control*) and then attempt to pair the new remote.

OPERATING INSTRUCTIONS

Basic Navigation

- **Pointer Function:** Move the remote to move the on-screen pointer. Press the **Wheel (OK)** button to select items.
- **Directional Pad:** Use the Up, Down, Left, and Right buttons around the Wheel (OK) button to navigate menus without the pointer.
- **Wheel (OK) Button:** Press to select an item. Rotate the wheel to scroll through lists or web pages.

Voice Control

- Press and hold the **Voice Recognition** button (microphone icon).
- Speak clearly into the remote's microphone.
- Release the button when you are finished speaking.
- The TV will process your command or search query.

Key Functions

Button	Function
Power (Red Circle with Line)	Turns the TV on or off.

Button	Function
Number Buttons (0-9)	Enters numbers for channel selection or data input.
GUIDE	Displays the electronic program guide.
QUICK ACCESS	Allows quick access to frequently used apps or functions.
AD/SAP	Activates Audio Description or Secondary Audio Program.
Volume Up/Down	Adjusts the TV volume.
Mute (Speaker with X)	Mutes or unmutes the TV sound.
Channel Up/Down	Changes the TV channel.
Home (House Icon)	Accesses the TV's Home screen.
Back (Arrow Icon)	Returns to the previous screen or menu.
Input (Rectangle with Arrow)	Selects the input source (HDMI, AV, etc.).
Settings (Gear Icon)	Accesses the TV's settings menu.
Netflix, Prime Video, Disney+, Movies, L channels, alea	Dedicated buttons for direct access to streaming services and specific functions.

MAINTENANCE

- Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- Battery Replacement:** Replace batteries when the remote's performance degrades or if the TV displays a low battery warning. Always replace both AA batteries simultaneously.
- Storage:** If the remote will not be used for an extended period, remove the batteries to prevent leakage and potential damage.
- Avoid Exposure:** Keep the remote away from direct sunlight, heat sources, and moisture.

TROUBLESHOOTING

Problem	Possible Cause / Solution
Remote not responding.	Check if batteries are inserted correctly and have sufficient charge. Replace batteries if necessary. Ensure there are no obstructions between the remote and the TV. Re-pair the remote with the TV (refer to "Pairing with Your LG TV" section).
Pointer not appearing or moving erratically.	Re-pair the remote with the TV. Ensure the remote is pointed directly at the TV. Calibrate the pointer if your TV settings allow (refer to your TV's user manual).

Problem	Possible Cause / Solution
Voice control not working.	<p>Ensure the Voice Recognition button is pressed and held while speaking.</p> <p>Speak clearly and at a normal volume.</p> <p>Check TV's internet connection, as voice recognition often requires online processing.</p> <p>Verify TV's voice recognition settings.</p>
Remote drains batteries quickly.	<p>Ensure you are using high-quality AA alkaline batteries.</p> <p>Avoid leaving the remote in direct sunlight or hot environments.</p> <p>If the issue persists, it may indicate a fault with the remote.</p>

SPECIFICATIONS

Feature	Detail
Model Number	MR24GA (AKB76045005)
Brand	AULCMEET
Compatibility	LG 2024 OLED TV G4, C4, B4 Series; QNED TV 99T, 90T, 85T, 80T, UT80, UT75 Series
Power Source	2 x AA Batteries
Dimensions (L x W x H)	5 x 1 x 0.5 inches (approximately 12.7 x 2.54 x 1.27 cm)
Item Weight	1.9 ounces (approximately 53.86 grams)
Special Feature	Voice Control, Pointer Function, Ergonomic Design
Color	Black

WARRANTY AND SUPPORT

For warranty information or technical support regarding your AULCMEET MR24GA Magic Remote, please refer to the documentation provided with your purchase or contact the seller directly. Keep your purchase receipt as proof of purchase.