

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [TAZATA](#) /

› [TAZATA BOOMBLAST PRO Portable Bluetooth Speaker User Manual](#)

TAZATA BLACK-80W RMS/120W Peak

TAZATA BOOMBLAST PRO Portable Bluetooth Speaker User Manual

Model: BLACK-80W RMS/120W Peak

INTRODUCTION

Thank you for choosing the TAZATA BOOMBLAST PRO Portable Bluetooth Speaker. This manual provides essential information for setting up, operating, and maintaining your speaker. Please read it thoroughly to ensure optimal performance and longevity of your device.

The TAZATA BOOMBLAST PRO delivers powerful 80W RMS (120W peak) stereo sound with deep bass, vibrant LED lights, and robust IPX7 waterproofing, making it ideal for various indoor and outdoor activities.

WHAT'S IN THE BOX

- 1x TAZATA BOOMBLAST PRO Bluetooth Speaker
- 1x USB-C Charging Cable (charger head not included)
- 1x USB-A to USB-C Charging Cable (charger head not included)
- 1x Portable Shoulder Strap
- 1x Quick Start Manual

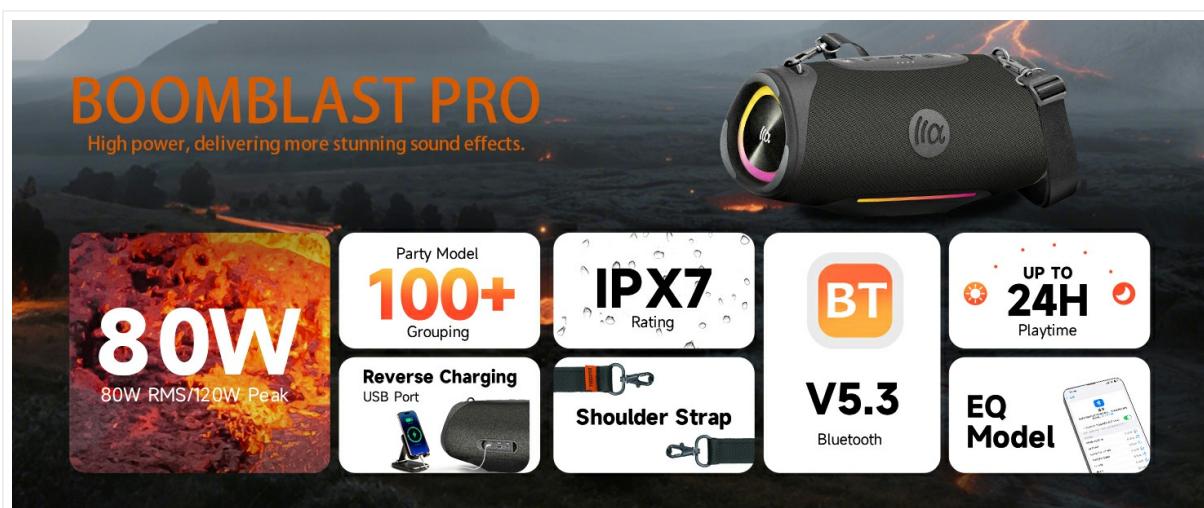


Image: All items included in the TAZATA BOOMBLAST PRO package.

PRODUCT OVERVIEW

Speaker Components



Image: Labeled diagram showing the control panel and ports of the speaker.

- M (Mode) Button:** Short press to switch between AUX, USB, and Bluetooth modes. Long press for 2 seconds to disconnect or reconnect to the last paired device.
- Play/Pause Button:** Short press for music play and pause. Long press for 5 seconds to clear pairing information and restore default volume. Double-click to call back the last call.
- Volume Down (-) Button:** Short press for volume down. Long press for previous song. Long press in AUX mode to reduce volume.
- Volume Up (+) Button:** Short press for volume up. Long press for next song. Long press in AUX mode to increase volume.
- RGB Light Button:** Short press to switch RGB lights/light effects. Double press to switch EQ modes.
- Power Button:** Long press for 2 seconds to power on/off. Short press to turn on/off broadcasting in powered on mode. Reset: long press and hold for 10 seconds to reset the speaker if it's crashed (it will shut down).
- Ports (under protective cover):** USB-C Charging Port, USB-A Port (for MP3 playback and charging), AUX-in (3.5mm jack).

Internal Structure



120W Peak

Unleash 120W Peak Powerful Booming Sound

Image: Cutaway view illustrating the internal speaker configuration with 2x30W woofers and 2x10W tweeters.

The TAZATA BOOMBLAST PRO features a robust audio architecture including 2x30W woofers and 2x10W tweeters, complemented by passive radiators for enhanced bass response, delivering a total of 80W RMS (120W peak) sound.

SETUP

Charging the Speaker

1. Open the protective rubber flap on the back of the speaker to access the charging port.
2. Connect the provided USB-C charging cable to the speaker's USB-C port.
3. Connect the other end of the cable to a compatible USB power adapter (not included).
4. The LED indicators on the control panel will show the charging status. A full charge takes approximately 3 hours.

Bluetooth Pairing

1. Long press the Power Button for 2 seconds to turn on the speaker. The LED on the 'M' button will flash, indicating it's ready to pair.
2. On your mobile device, enable Bluetooth and search for "TAZATA BOOMBLAST PRO" in the list of available devices.

3. Select "TAZATA BOOMBLAST PRO" to connect. A confirmation tone will sound upon successful pairing.
4. The LED on the 'M' button will remain lit once connected.

Your browser does not support the video tag.

Video: Demonstration of unboxing, powering on, and Bluetooth pairing the TAZATA BOOMBLAST PRO speaker.

OPERATING INSTRUCTIONS

Basic Controls

- **Power On/Off:** Long press the Power Button for 2 seconds.
- **Volume Adjustment:** Short press the '+' or '-' buttons.
- **Track Navigation:** Long press the '+' button for the next track, long press the '-' button for the previous track.
- **Play/Pause:** Short press the Play/Pause button.
- **Mode Switching:** Short press the 'M' button to cycle through Bluetooth, AUX, and USB modes.

LED Lights and EQ Modes

- **Change Light Effects:** Short press the RGB Light Button to cycle through various LED light modes.
- **Change EQ Modes:** Double press the RGB Light Button to switch between available equalizer settings.

Your browser does not support the video tag.

Video: Overview of the TAZATA BOOMBLAST PRO speaker's features, including LED lights and sound modes.

Wireless Stereo Pairing (TWS/Broadcast Mode)

For an immersive audio experience, you can connect two TAZATA BOOMBLAST PRO speakers for left/right stereo sound, or sync 100+ compatible speakers in Broadcast Mode.

1. Ensure both speakers are powered on and not connected to any other Bluetooth device.
2. On one speaker (this will be the primary speaker), long press the 'M' button until you hear a pairing tone.
3. The speakers will automatically connect to each other. Once connected, they will play audio in sync.
4. Connect your mobile device to the primary speaker via Bluetooth.



Image: Visual representation of multiple speakers linked for an expanded sound experience.

Power Bank Function

The speaker features a built-in 5000mAh power bank to charge your mobile devices.

1. Open the protective rubber flap on the back of the speaker.

2. Connect your device's charging cable to the speaker's USB-A output port.
3. Your device will begin charging.



Image: The speaker functioning as a power bank, charging a smartphone.

AUX/USB Playback

- **AUX Mode:** Connect an audio device using a 3.5mm AUX cable to the speaker's AUX-in port. The speaker will automatically switch to AUX mode.
- **USB Mode:** Insert a USB flash drive with MP3 audio files into the speaker's USB-A port. The speaker will automatically switch to USB mode and begin playback.

Hands-Free Calling

When connected via Bluetooth, the speaker's built-in noise-canceling microphone allows for clear hands-free calls. Double-click the Play/Pause button to call back the last dialed number.

FEATURES

IPX7 Waterproof Rating

The TAZATA BOOMBLAST PRO is IPX7 waterproof, meaning it can be submerged in water up to 1 meter deep for up to 30 minutes. This makes it suitable for use near pools, in the shower, or during outdoor activities where

splashes or rain may occur. Ensure the protective rubber flap covering the ports is securely closed for water resistance.



IPX7

Dustproof and Waterproof for Outdoor Adventures

Waterproof and Dustproof is effective only when the cap on the back is closed. Not guaranteed for all situations.

Image: The speaker in water, highlighting its waterproof design.

Your browser does not support the video tag.

Video: A short demonstration of the speaker's waterproof capabilities.

Long Playtime

Enjoy up to 8 hours of continuous playtime at 60% volume, thanks to the integrated 5000mAh rechargeable battery. Playtime may vary based on volume level, audio content, and light usage. Some tests indicate up to 24 hours of playtime under specific conditions (e.g., 50% volume, bass and lights off).

Portability

The speaker is designed for easy portability with a durable, detachable shoulder strap, allowing for hands-free carrying during activities like hiking, camping, or biking.



Hands-Free Carry Strap for Ultimate Convenience

Enjoy hands-free portability with a durable, adjustable strap, making the speaker easy to carry outdoors.

Image: The speaker being carried with its detachable strap, emphasizing portability.

MAINTENANCE

- Cleaning:** Use a soft, damp cloth to clean the speaker's exterior. Do not use harsh chemicals or abrasive cleaners.
- Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- Water Resistance:** Always ensure the rubber flap covering the ports is tightly sealed when using the speaker near water to maintain its IPX7 rating.
- Battery Care:** To prolong battery life, fully charge the speaker before first use and recharge it regularly, even if not in use. Avoid completely draining the battery frequently.

TROUBLESHOOTING

Problem	Possible Solution
Speaker does not power on.	Ensure the battery is charged. Connect to a power source and try again. If unresponsive, perform a hard reset by long pressing the Power Button for 10 seconds.

Problem	Possible Solution
Cannot pair via Bluetooth.	Ensure the speaker is in Bluetooth pairing mode (flashing 'M' LED). Make sure no other device is connected. Clear previous pairing records on your device and the speaker (long press Play/Pause for 5 seconds) and try again.
No sound or low volume.	Check volume levels on both the speaker and your connected device. Ensure the correct input mode (Bluetooth, AUX, USB) is selected.
Sound distortion.	Reduce the volume on both the speaker and your device. Ensure the audio source is of good quality. Try changing EQ modes.
Power bank not charging device.	Ensure the speaker has sufficient battery charge. Check the charging cable and connection.

SPECIFICATIONS

Feature	Detail
Model Name	TAZATA BOOMBLAST PRO
Model Number	BLACK-80W RMS/120W Peak
Speaker Type	Portable Bluetooth Speaker
Output Power	80W RMS (120W Peak)
Bluetooth Version	V5.3
Water Resistance	IPX7 Waterproof
Battery Capacity	5000mAh (5200 Amp Hours)
Playtime	Up to 8 hours (at 60% volume)
Charging Time	Approximately 3 hours
Connectivity	Bluetooth, Auxiliary (3.5mm), USB
Dimensions (L x W x H)	10.35"D x 4.53"W x 4.88"H
Item Weight	3.9 Pounds
Included Components	Speaker, USB-C Cable, USB-A to C Cable, Portable Strap, Manual

WARRANTY & SUPPORT

The TAZATA BOOMBLAST PRO comes with a Limited Warranty. For detailed warranty information, product support, or to contact customer service, please refer to the official TAZATA website or the contact information provided in your Quick Start Manual.

Visit the TAZATA Store for more products and support: [TAZATA Store](#)

