

INTETURE BP30

INTETURE Cordless Vacuum Cleaner User Manual

Model: BP30

1. INTRODUCTION

Thank you for choosing the INTETURE Cordless Vacuum Cleaner. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new vacuum cleaner. Please read this manual thoroughly before first use and keep it for future reference.

Your INTETURE BP30 Cordless Vacuum Cleaner features a powerful 550W brushless motor with 45KPA suction, an intelligent AUTO mode for various floor types, a long 60-minute runtime in ECO mode, and a unique LED green light for enhanced visibility of dust and debris.

2. SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or injury, always follow basic safety precautions when using your vacuum cleaner:

- Read all instructions before using the appliance.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.

- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not use without dust cup and/or filters in place.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- Unplug from outlet when not in use and before servicing.
- This appliance includes rechargeable Lithium-Ion batteries. Do not incinerate batteries or expose to high temperatures, as they may explode.
- Recharge only with the charger specified by the manufacturer. A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.

3. PACKAGE CONTENTS

Please check the box for the following items:

- 550W 45KPA Cordless Vacuum Main Body (Main Motor & Canister & HEPA Filter & Sponge Filter & Stainless Steel Filter & Handle)
- An Extra HEPA Filter
- Aromatherapy Tablets x 2
- 2-in-1 Brush
- Sofa Brush
- Mini Cleaning Tool
- A Battery & Charger
- Multi-Function Rolling Brush
- A Wall-mounted Charging Dock
- An Adjustable Tube
- A Quick User Manual



Figure 3.1: Included Components

4. PRODUCT OVERVIEW

Familiarize yourself with the main parts of your INTETURE Cordless Vacuum Cleaner:

- **Main Unit:** Contains the motor, dust cup, and control panel.
- **Adjustable Tube:** Connects the main unit to the floor brush, allowing for height adjustment.
- **Multi-Function Rolling Brush:** Designed for various floor types, featuring LED green lights.
- **Detachable Battery:** Provides power to the unit and can be charged separately.
- **Wall-mounted Charging Dock:** For convenient storage and charging.
- **Accessories:** 2-in-1 brush, sofa brush, and mini cleaning tool for specialized cleaning tasks.



Figure 4.1: Touch Screen Display and Controls

5. ASSEMBLY

Follow these steps to assemble your vacuum cleaner:

1. **Attach the Adjustable Tube:** Insert the adjustable tube into the main unit until it clicks securely into place.
2. **Attach the Floor Brush:** Connect the multi-function rolling brush to the other end of the adjustable tube,

ensuring it clicks into place.

3. **Install the Battery:** Slide the detachable battery into the slot on the main unit until it locks.
4. **Attach Accessories (Optional):** For handheld use, attach the desired accessory (2-in-1 brush, sofa brush, or mini cleaning tool) directly to the main unit or the adjustable tube.

6. CHARGING

Before first use, fully charge the vacuum cleaner for approximately 4 hours.

6.1 Wall-mounted Charging Dock

The wall-mounted charging dock provides a convenient way to store and charge your vacuum.

1. Mount the charging dock securely to a wall using the provided hardware, ensuring it is near a power outlet.
2. Connect the charger to the charging dock and plug it into a power outlet.
3. Place the main unit of the vacuum cleaner onto the charging dock. The battery indicator on the display will show charging status.
4. The charging dock also accommodates all accessories for organized storage.

Wall Mount Charging Station

Charging and storage 2 in1



Figure 6.1: Wall-mounted Charging and Storage

6.2 Detachable Battery Charging

The detachable battery can be charged independently:

1. Remove the battery from the main unit by pressing the release button.
2. Connect the charger directly to the battery pack.
3. Plug the charger into a power outlet. The battery indicator will show charging progress.



Figure 6.2: Detachable Battery for Extended Runtime

7. OPERATION

7.1 Powering On/Off and Mode Selection

The vacuum cleaner features an LED touchscreen for easy control:

1. **Power On:** Press the power button on the handle to turn on the vacuum.

2. **Mode Selection:** Use the '+' and '-' buttons on the touchscreen to cycle through the four cleaning modes:

- **ECO Mode:** For light cleaning and maximum runtime (up to 60 minutes).
 - **STANDARD Mode:** Balanced power for everyday cleaning.
 - **MAX Mode:** Highest suction power for stubborn dirt (approx. 15-20 minutes runtime).
 - **AUTO Mode:** The vacuum automatically adjusts suction power based on floor type, boosting suction on carpets for deep cleaning.
- **Power Off:** Press the power button again to turn off the vacuum.



Figure 7.1: Intelligent Auto Mode in Action

7.2 Using the LED Green Light

The multi-function rolling brush is equipped with unique LED green lights:

- The green lights illuminate dark areas, making hidden dust, pet hair, and debris more visible on various floor surfaces.
- This feature is particularly useful for cleaning under furniture, in corners, and other dimly lit spaces.

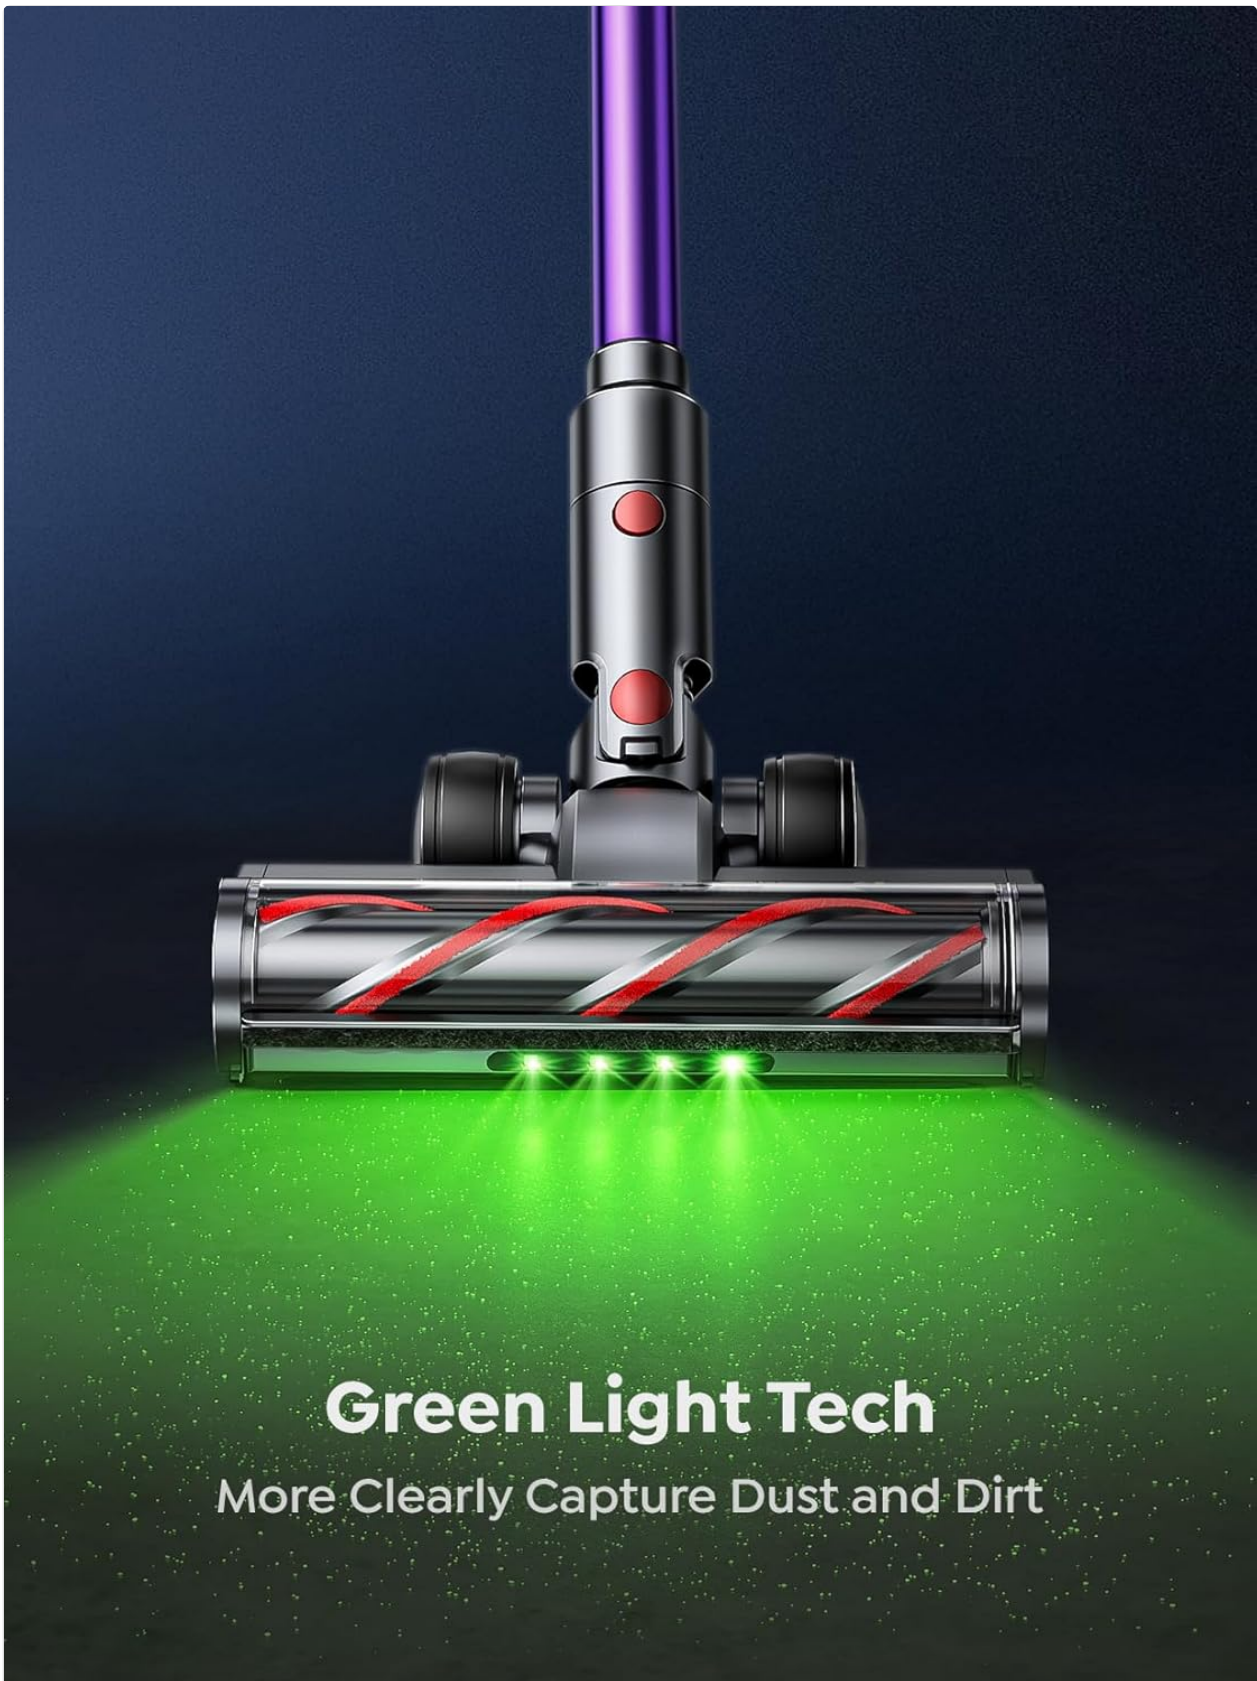


Figure 7.2: Enhanced Visibility with Green Light Technology

7.3 Recommended Uses

This vacuum cleaner is versatile and suitable for:

- Pet Hair Removal
- Hard Floors (wood, laminate, tile)
- Carpets (low to medium pile)
- General Home Cleaning

- Car Interiors



Figure 7.3: Powerful Suction for Various Debris

8. MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your vacuum cleaner.

8.1 Emptying the Dust Cup

Empty the dust cup regularly, especially when debris reaches the MAX fill line.

1. Hold the main unit over a trash bin.
2. Press the dust cup release button to open the bottom flap and empty the contents.
3. Close the flap securely until it clicks.

8.2 Cleaning Filters

The vacuum features a multi-layer high-density filtration system, including a washable HEPA filter. Clean filters regularly to maintain suction power.

1. Twist and pull to remove the dust cup from the main unit.
2. Remove the HEPA filter and other filter components from the dust cup.
3. Tap off loose dirt from the filters over a trash bin.
4. Rinse the HEPA filter and other washable filters under cold running water until the water runs clear.
5. Allow all filter parts to air dry completely for at least 24 hours before reassembling. Do not use a hairdryer or other heating methods.
6. Reassemble the filters and dust cup, then reattach to the main unit.

8.3 Cleaning the Brush Roll

Periodically check the brush roll for tangled hair or debris.

1. Turn off the vacuum and disconnect the floor brush from the tube.
2. Locate the brush roll access latch on the side of the floor brush and open it.
3. Remove the brush roll.
4. Use scissors or the mini cleaning tool to cut and remove any tangled hair or fibers.
5. Reinsert the brush roll and close the access latch securely.

9. TROUBLESHOOTING

If you encounter issues with your vacuum cleaner, refer to the following table for common problems and solutions:

Problem	Possible Cause	Solution
Vacuum does not turn on	Battery is not charged or not properly installed.	Ensure battery is fully charged and securely inserted.
Low suction power	Dust cup is full; Filters are clogged; Blockage in nozzle, tube, or hose.	Empty dust cup; Clean/wash filters; Check for and remove blockages.
Brush roll not spinning	Hair or debris tangled around brush roll; Brush roll access is not closed properly.	Clean brush roll; Ensure brush roll access is securely closed.
Short runtime	Using MAX mode frequently; Battery not fully charged.	Use ECO or STANDARD mode for longer runtime; Fully charge battery before use.

If the problem persists after trying these solutions, please contact customer support.

10. SPECIFICATIONS

Brand	INTETURE
Model Name	BP30
Wattage	550 watts
Suction Power	45KPA
Runtime	Up to 60 minutes (ECO mode)
Charging Time	4 Hours
Dust Cup Capacity	1.8 Liters
Noise Level	64 dB
Item Weight	6 pounds
Product Dimensions	13"L x 7"W x 17"H
Filter Type	Multi-layer High-density Filtration System (HEPA Washable)
Battery Type	Lithium-Ion
Number of Power Levels	4 (ECO, STANDARD, MAX, AUTO)

11. WARRANTY AND SUPPORT

INTETURE is committed to providing quality products and excellent customer service.

- **Protection Plan:** Your product comes with a 3-year free protection plan.
- **Returns/Exchanges:** Enjoy 30-day hassle-free returns and exchanges.
- **Customer Support:** Our 24/7 customer support team is available to assist you with any questions or concerns. Please reach out if you require assistance or if the product does not meet your expectations.