

[manuals.plus](#) /

› [Bomann](#) /

› [Bomann Mini Dishwasher TSG 7405 User Manual](#)

Bomann TSG 7405

Bomann Mini Dishwasher TSG 7405 User Manual

Model: TSG 7405

1. INTRODUCTION

Thank you for choosing the Bomann Mini Dishwasher TSG 7405. This compact and efficient appliance is designed to provide convenience and excellent cleaning results for your dishes. Please read this manual carefully before operating the dishwasher to ensure safe and optimal use. Keep this manual for future reference.



Image 1.1: Front view of the Bemann Mini Dishwasher TSG 7405. This image displays the compact design and control panel of the appliance.

2. SAFETY INFORMATION

Always adhere to basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury. This appliance is intended for household use only.

2.1 General Safety

- Do not allow children to operate or play with the dishwasher.
- Ensure the appliance is placed on a stable, level surface.
- Do not touch the heating element during or immediately after operation.
- Use only detergents and rinse aids specifically designed for automatic dishwashers.
- Do not open the door during operation, especially during the washing cycle, as hot water may spray out.
- The appliance features an anti-overflow safety system. If an overflow occurs, turn off the water supply and power immediately.

2.2 Electrical Safety

- Connect the dishwasher to a properly grounded electrical outlet.
- Do not use extension cords or adapters with this appliance.

- If the power cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.

2.3 Water Safety

- Ensure all water connections are secure to prevent leaks.
- The inlet and outlet hoses are approximately 155 cm long. Do not extend them without consulting a qualified technician.

3. PRODUCT OVERVIEW

The Bomann Mini Dishwasher TSG 7405 is a compact tabletop appliance designed for efficiency and convenience. It accommodates up to 6 standard place settings.

3.1 Key Components

- **Control Panel:** Features LED indicators for program status, salt, and rinse aid, along with buttons for power, program selection, and delayed start.
- **Interior:** Stainless steel inner door, silver-grey dish basket, separate cutlery basket, and cup holder.
- **Water System:** Equipped with an instantaneous water heater, water softening device, and rinse aid dosing device.
- **Safety Features:** Anti-overflow safety and a safety door lock.

DIE KLEINE ALTERNATIVE



BIS ZU
6 MAßGEDECKE



TÜR ÖFFNET
AUTOMATISCH
NACH
PROGRAMMENDE



Image 3.1: Interior view of the dishwasher, highlighting the capacity for 6 place settings and the automatic door opening function at the end of a program.



Image 3.2: A closer look at the dishwasher's interior, showing the dedicated cutlery basket and a rack for cups, designed for efficient loading.

TISCHGESCHIRRSPÜLER

bietet mehr Komfort



Image 3.3: The control panel with LED indicators for salt, rinse aid, and program status, along with buttons for power, program selection, and delayed start. The five wash programs are also illustrated.

4. SETUP

Proper setup is crucial for the safe and efficient operation of your dishwasher.

4.1 Placement

- Place the dishwasher on a flat, stable surface capable of supporting its weight (approximately 20 kg).
- Ensure there is adequate space around the appliance for ventilation and door opening. Its compact dimensions (43.8 cm H x 55.0 cm W x 50.0 cm D) make it suitable for small kitchens or camping environments.

4.2 Water Connection

- Connect the inlet hose to a cold water supply tap. Ensure the connection is tight to prevent leaks.
- Position the outlet hose into a drain or sink, ensuring it is securely fastened and allows for proper drainage.

Both hoses are approximately 155 cm in length.

4.3 Electrical Connection

- Plug the dishwasher into a grounded 220-240 V~ / 50 Hz electrical outlet.
- The power cable is approximately 150 cm long and features a Schuko plug.

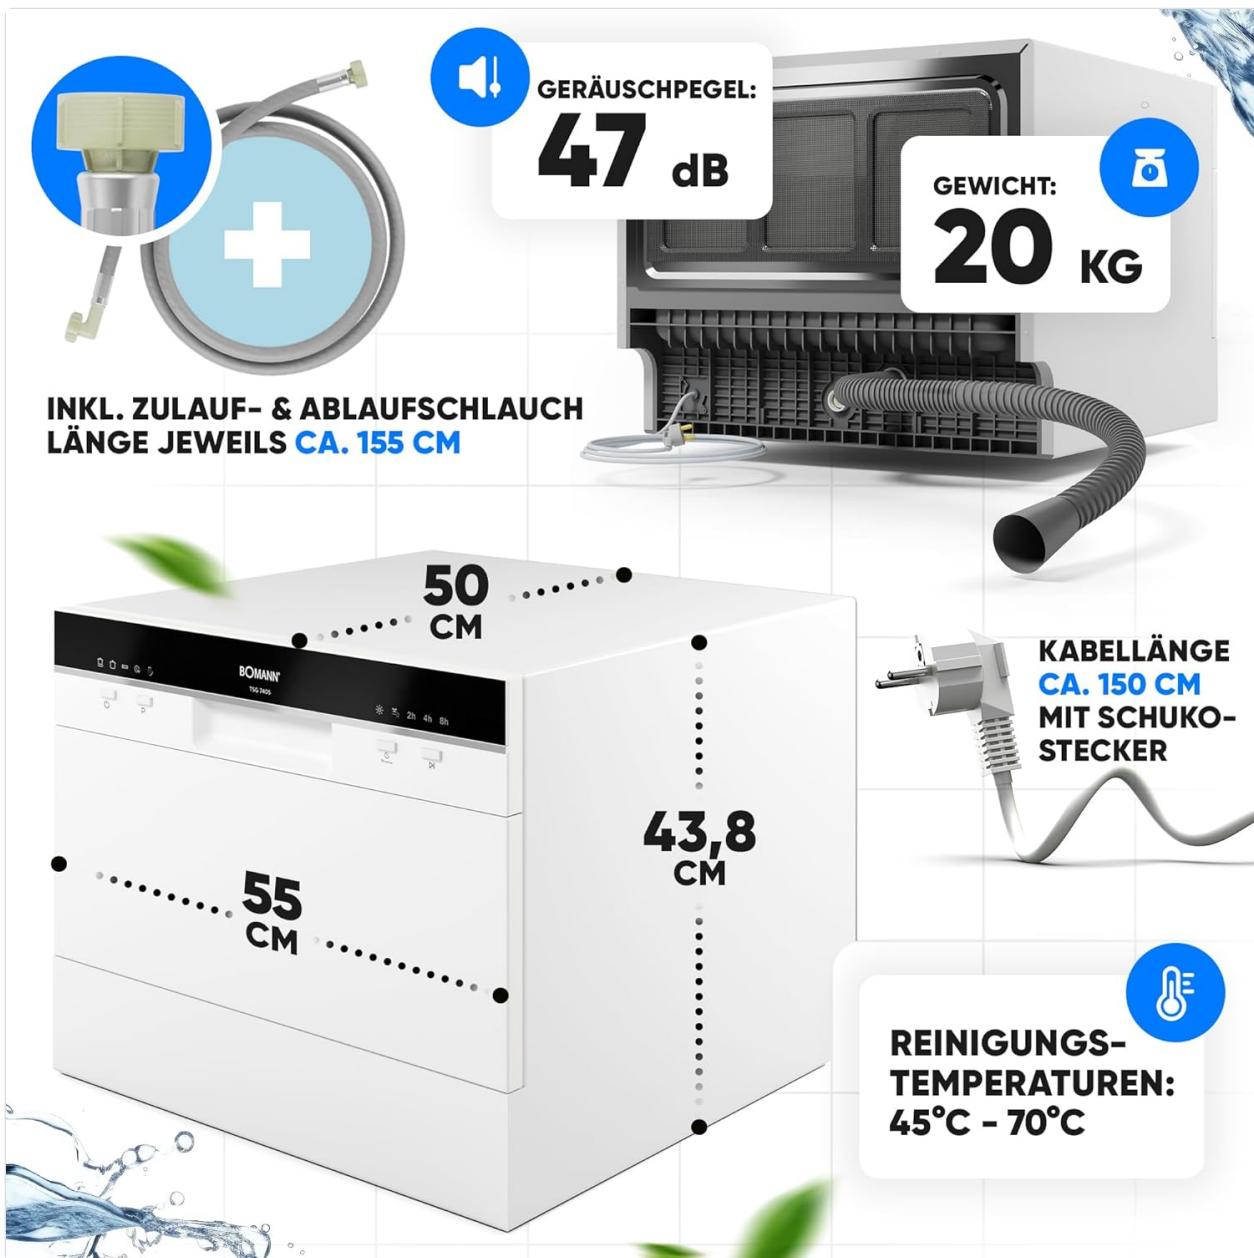


Image 4.1: This diagram illustrates the physical dimensions (43.8 x 55 x 50 cm), net weight (20 kg), operating noise level (47 dB), and the included inlet/outlet hoses (155 cm each) and power cable (150 cm) for installation planning.

5. OPERATING INSTRUCTIONS

Follow these steps for effective and efficient operation of your dishwasher.

5.1 Loading the Dishwasher

- Scrape off large food particles from dishes before loading.
- Place dishes in the silver-grey dish basket, ensuring they do not block the spray arm.

- Arrange cutlery in the dedicated cutlery basket with handles down for better cleaning.
- Place cups and small bowls in the cup holder.

5.2 Adding Detergent, Salt, and Rinse Aid

- **Detergent:** Add the appropriate amount of dishwasher detergent to the dispenser. The dishwasher supports both powder and tablet detergents.
- **Dishwasher Salt:** Fill the salt reservoir using the provided funnel. The salt indicator on the control panel will illuminate when refilling is needed. This appliance includes a water softening device.
- **Rinse Aid:** Fill the rinse aid dispenser. The rinse aid indicator will signal when it needs refilling. The rinse aid dosing device ensures optimal drying results.



Image 5.1: This image highlights key operational features including the salt filling funnel, the anti-overflow safety mechanism, and the delayed program start options (2, 4, or 6 hours).

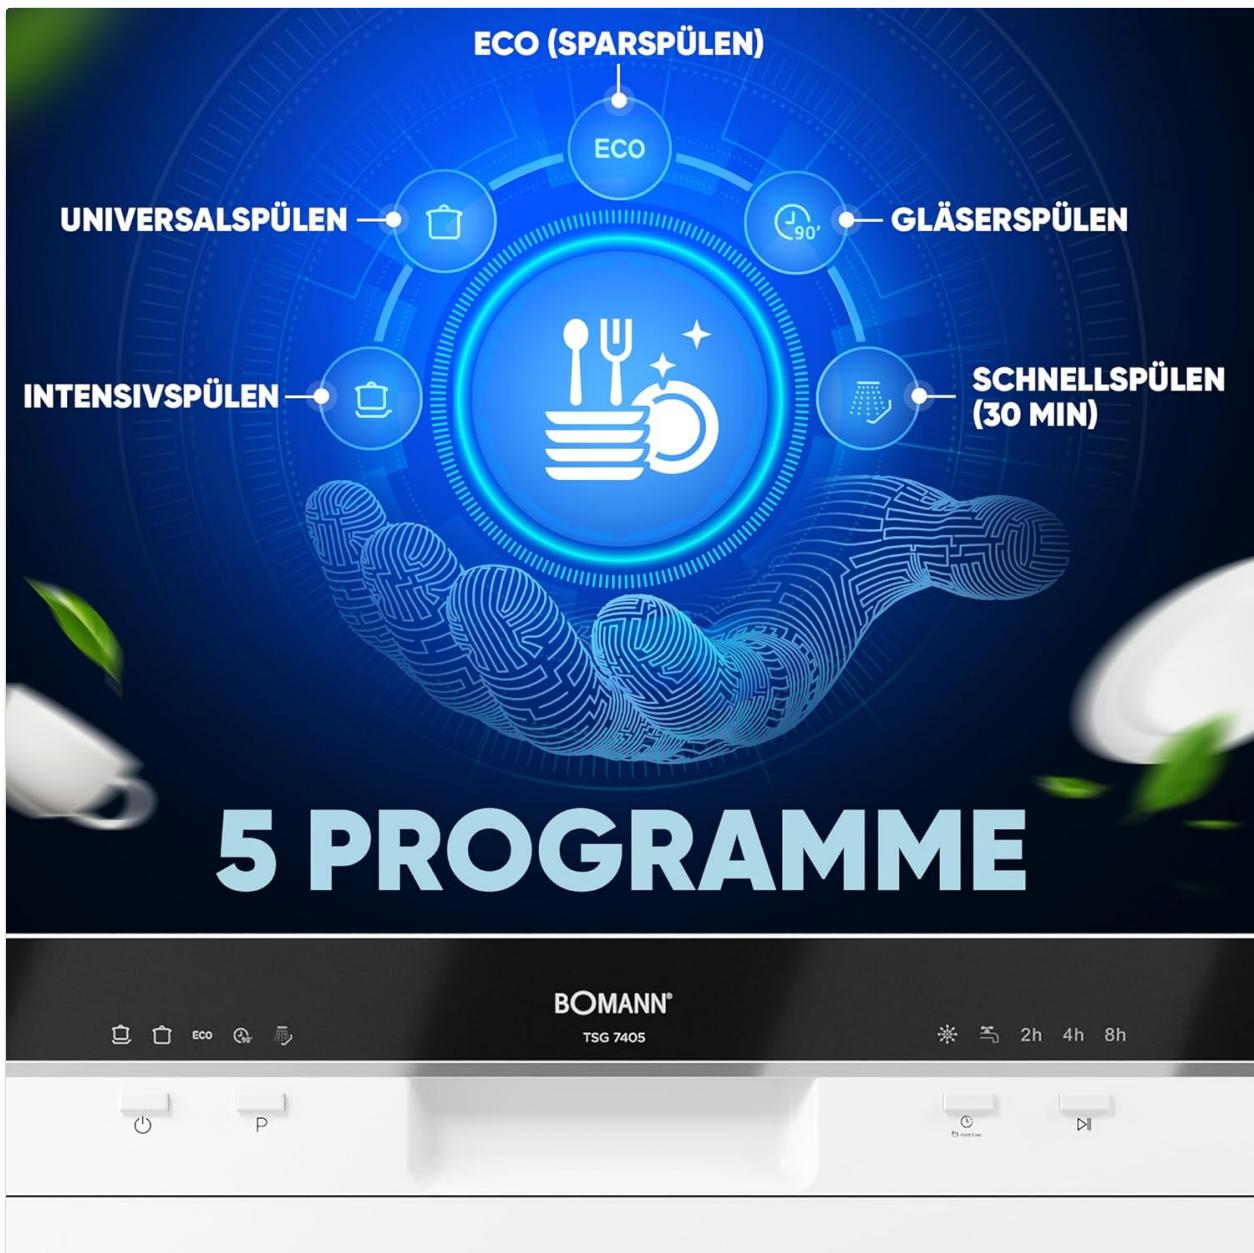


Image 5.2: The dishwasher positioned on a countertop, demonstrating its tabletop design. A close-up shows the detergent dispenser, indicating flexibility for powder or tablet use.

5.3 Program Selection and Start

- Close the dishwasher door securely.
- Press the Power button to turn on the appliance.
- Use the Program button to cycle through the 5 available wash programs (see Section 6 for details).
- To use the delayed start function, press the Delay button to select 2, 4, or 6 hours.
- Press the Start/Pause button to begin the selected program.
- At the end of the program, the door will automatically open to assist with drying.

6. WASH PROGRAMS

The Bemann Mini Dishwasher TSG 7405 offers 5 distinct wash programs to suit various cleaning needs. All programs operate with cleaning temperatures between 45°C and 70°C.

Program	Description	Typical Use
Intensive Rinse	For heavily soiled dishes, pots, and pans.	Baked-on food, dried-on residues.
Universal Rinse	Standard program for normally soiled dishes.	Everyday dishes and cutlery.
ECO (Economic Rinse)	Energy and water-efficient program for normally soiled dishes.	Everyday dishes with moderate soil.
Glass Rinse	Gentle program for delicate glassware.	Glasses, crystal, lightly soiled delicate items.
Quick Rinse (30 min.)	Short program for lightly soiled dishes without drying.	Lightly soiled dishes, pre-rinsing.

7. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your dishwasher.

7.1 Cleaning the Filters

- Regularly check and clean the filter system located at the bottom of the dishwasher tub.
- Remove any food particles or debris to prevent blockages and ensure efficient drainage.

7.2 Cleaning the Interior and Exterior

- Wipe the interior of the dishwasher, including the stainless steel inner door, with a damp cloth after each use to prevent odors and residue buildup.
- Clean the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents.

7.3 Water Softening System

- Ensure the dishwasher salt reservoir is always adequately filled, especially if you live in an area with hard water. The water softening device relies on this salt for effective operation.

8. TROUBLESHOOTING

If you encounter issues with your dishwasher, refer to the following common problems and solutions. For more complex issues, contact customer support.

Problem	Possible Cause	Solution
Dishwasher does not start	Power cord not plugged in; door not closed properly; program not selected.	Check power connection; ensure door is latched; select a program and press start.
Dishes are not clean	Improper loading; clogged spray arm; insufficient detergent; filter dirty.	Reload dishes correctly; clean spray arm holes; add more detergent; clean filters.

Problem	Possible Cause	Solution
Water not draining	Drain hose kinked or blocked; filter clogged.	Check and clear drain hose; clean filters.
Salt/Rinse Aid indicator on	Reservoir empty.	Refill dishwasher salt or rinse aid.
Excessive noise	Dishes rattling; foreign object in pump.	Rearrange dishes; inspect and remove any foreign objects.

9. SPECIFICATIONS

Detailed technical specifications for the Bomann Mini Dishwasher TSG 7405.

Specification	Value
Model	TSG 7405 (774042)
Place Settings	6 standard place settings
Power Supply	220-240 V~ / 50 Hz
Power Consumption	1180 - 1380 W
Rated Current	10 A
Operating Noise	47 dB
Energy Consumption (100 cycles)	49 kWh
Water Consumption (per cycle)	6.5 L
Power Consumption (Standby)	0.49 W
Power Consumption (Delayed Start)	1.00 W
Dimensions (H x W x D)	43.8 x 55.0 x 50.0 cm
Net Weight	20.0 kg
Inlet/Outlet Hose Length	Approx. 155 cm each
Power Cable Length	Approx. 150 cm
Energy Efficiency Class	D

Produktdatenblatt

DELEGIERTE VERORDNUNG (EU) 2019/2017 DER KOMMISSION zur Energieverbrauchskennzeichnung von Haushaltsgeschirrspülern

Name oder Handelsmarke des Lieferanten: Bomann

Anschrift des Lieferanten: Zentrale Bomann, Heinrich-Horten-Straße 17, 47906 Kempen, DE

Modellkennung: TSG 7405

Allgemeine Produktparameter:

Parameter	Wert	Parameter	Wert
Nennkapazität ^[a] (ps)	6	Abmessungen in cm	Höhe 44 Breite 55

			Tiefe	50
EE ^(a)	49,9	Energieeffizienzklasse ^(a)	D	
Reinigungsleistungsindex ^(a)	1,125	Trocknungsleistungsindex ^(a)	1,065	
Energieverbrauch in kWh [pro Betriebszyklus] im eco-Programm bei Kaltwasseranschluss. Der tatsächliche Energieverbrauch hängt von der jeweiligen Nutzung des Geräts ab.	0,494	Wasserverbrauch in Litern [pro Betriebszyklus] im eco-Programm. Der tatsächliche Wasserverbrauch hängt von der jeweiligen Nutzung des Geräts und vom Härtegrad des Wassers ab.		6,5
Programmdauer ^(a) (h:min)	3:35	Art	Freistehend	
Luftschallemissionen ^(a) (dB (A) re 1 pW)	47	Luftschallemissionsklasse ^(a)	C	
Aus-Zustand (W) (falls zutreffend)	-	Bereitschaftszustand (W) (falls zutreffend)	0,49	
Zeitzvorwahl (W) (falls zutreffend)	1,00	Vernetzter Betrieb (W) (falls zutreffend)	-	
Mindestlaufzeit der vom Lieferanten angebotenen Garantie: 24 Monate				
Weitere Angaben:				
Weblink zur Website des Lieferanten, auf der die Informationen gemäß Anhang II Nummer 6 der Verordnung (EU) 2019/2022 der Kommission zu finden sind: www.bomann-germany.de				

^(a) für das eco-Programm.

Seite 1 / 2

Das Modell wurde auf dem Unionsmarkt in Verkehr gebracht, und zwar ab dem 01.01.2021



EPREL-Eintragungsnummer 2089254

<https://eprel.ec.europa.eu/qr/2089254>

Lieferant: C. Bomann GmbH (Hersteller)

Website:

Kundenbetreuung:

Name: Zentrale Bomann

Website: www.bomann.de

E-Mail-Adresse: info@bomann.de


Telefonnummer: +49 2152 8998-0

Anschrift:

Heinrich-Horten-Straße 17
47906 Kempen
Deutschland

Seite 2 / 2

Image 9.1: The EU Energy Label for the Bomann TSG 7405, indicating an energy efficiency class of D, 49 kWh per 100 cycles, 6.5 L water per cycle, and 47 dB noise level. For more details, visit the [EPREL database](#).

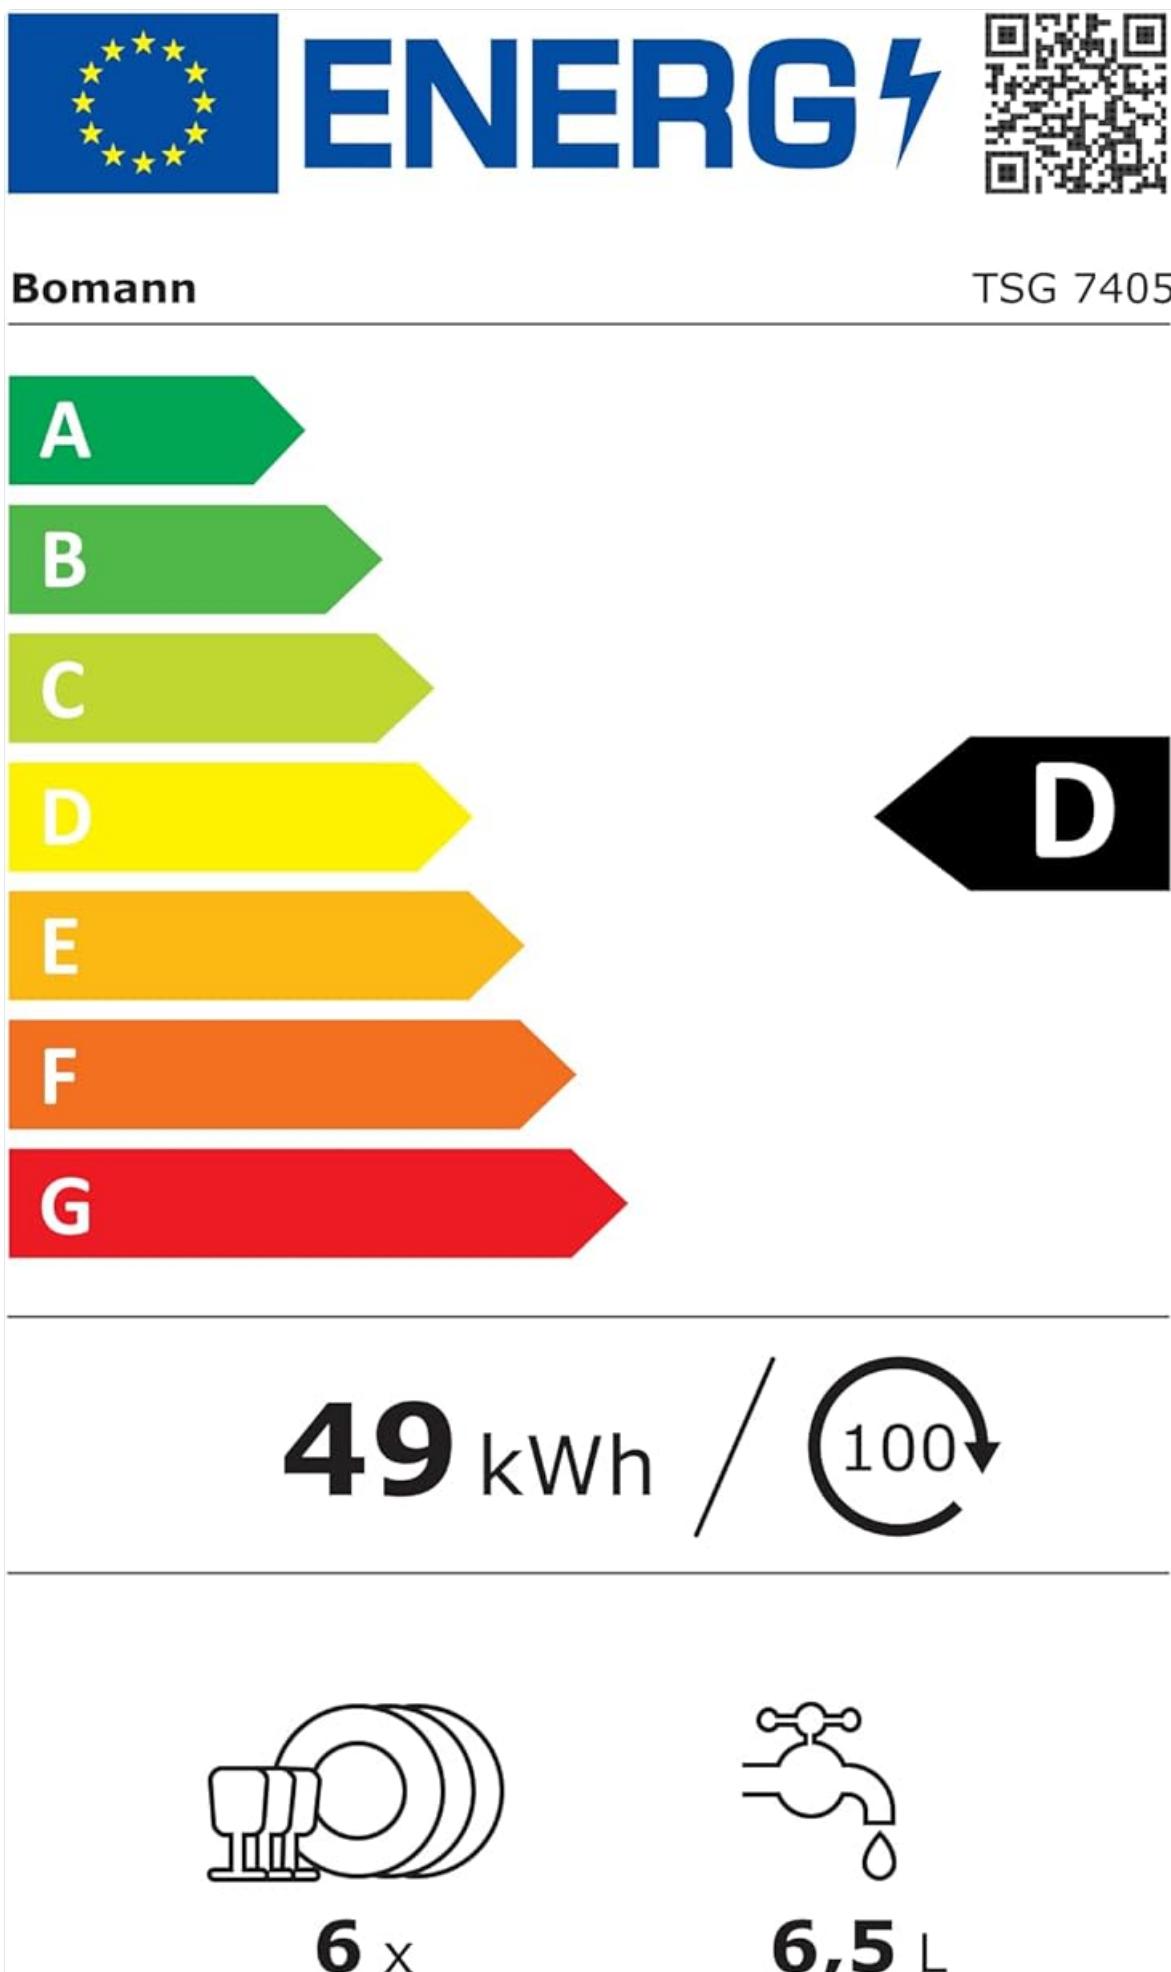

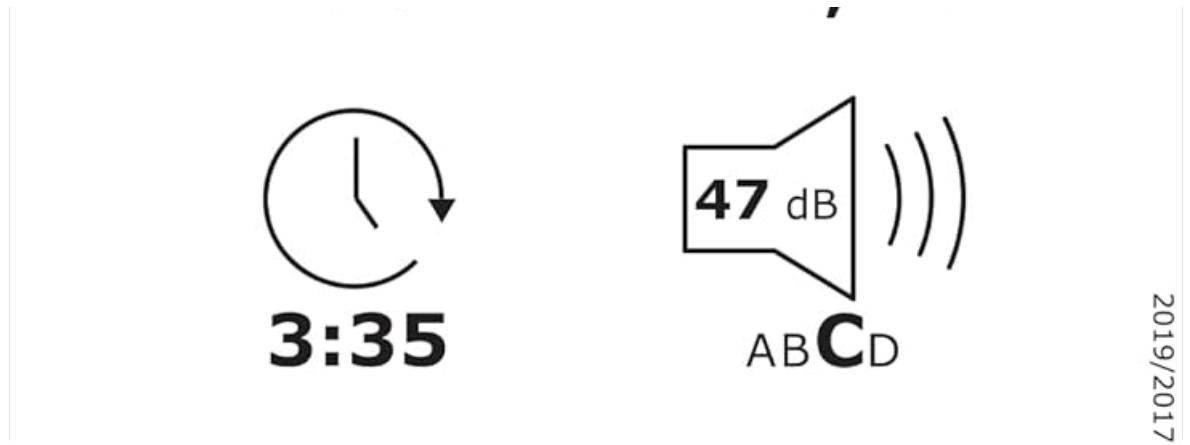


Image 9.2: A product data sheet providing detailed technical information and compliance details for the Bomann TSG 7405.
This document also contains a QR code linking to the [EPREL database](#).

10. WARRANTY AND SUPPORT

Bomann provides support and warranty services for its products.


- **Spare Parts Availability:** Spare parts for this appliance are available in the EU for a period of 2 years.
- **Manufacturer:** Bomann
- **Contact Information:**
Email: info@bomann.de
Phone: +49 2152 8998-0
Website: www.bomann.de

For warranty claims or technical assistance, please contact Bomann customer support using the provided contact details.

© 2024 Bomann. All rights reserved.

Related Documents - TSG 7405

	<p>Bomann TSG 708 Tabletop Dishwasher User Manual</p> <p>Comprehensive user manual for the Bomann TSG 708 tabletop dishwasher, covering installation, operation, cleaning, maintenance, and troubleshooting. Learn how to load the dishwasher, select programs, and ensure optimal performance.</p>
---	---

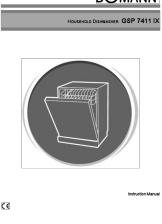 <p>CE</p>	<p>Bomann TSG 7404 Tisch-Geschirrspüler Bedienungsanleitung & Garantie</p> <p>Umfassende Bedienungsanleitung und Garantieinformationen für den Bomann TSG 7404 Tisch-Geschirrspüler. Erfahren Sie mehr über Installation, sicheren Betrieb, Wartung, Fehlerbehebung und technische Daten dieses Haushaltsgeräts.</p>
 <p>CE</p>	<p>Bomann TSG 708 Dishwasher User Manual</p> <p>Comprehensive guide for the Bomann TSG 708 household table dishwasher, covering installation, operation, cleaning, maintenance, troubleshooting, and technical specifications.</p>
 <p>CE</p>	<p>BOMANN TSG 5704 Mini Geschirrspüler Bedienungsanleitung</p> <p>Umfassende Bedienungsanleitung für den BOMANN TSG 5704 Mini-Geschirrspüler, inklusive Sicherheitshinweisen, Installationsanleitung, Bedienung, Wartung und Fehlerbehebung.</p>
 <p>CE</p>	<p>Bomann GSP 7411 IX Dishwasher: Instruction Manual and User Guide</p> <p>Comprehensive instruction manual for the Bomann GSP 7411 IX household dishwasher. Learn about installation, operation, maintenance, troubleshooting, and safety features.</p>
 <p>CE</p>	<p>Bomann GSP 7407 Household Dishwasher Instruction Manual</p> <p>Detailed instruction manual for the Bomann GSP 7407 household dishwasher. Provides comprehensive guidance on installation, operation, loading, cleaning, maintenance, troubleshooting, and technical specifications for optimal use.</p>