

DAYETTE SH002

DAYETTE 1500W Smart Electric Space Heater (Model SH002) User Manual

Your guide to safe and efficient operation

1. IMPORTANT SAFETY INSTRUCTIONS

Please read and understand all safety instructions before using this electric space heater. Failure to follow these instructions may result in electric shock, fire, property damage, or personal injury. Keep this manual for future reference.

- Always plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power tap (outlet/power strip).
- This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. Use handles when moving this heater.
- Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 feet (0.9 meters) from the front of the heater and keep them away from the sides and rear.
- Extreme caution is necessary when any heater is used by or near children or invalids and whenever the heater is left operating and unattended.
- Always unplug heater when not in use.
- Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner. Return heater to authorized service facility for examination, electrical or mechanical adjustment, or repair.
- Do not use outdoors.
- This heater is not intended for use in bathrooms, laundry areas, and similar indoor locations. Never locate heater where it may fall into a bathtub or other water container.
- Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Arrange cord away from traffic area and where it will not be tripped over.
- To disconnect heater, turn controls to OFF, then remove plug from outlet.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
- To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces,

like a bed, where openings may become blocked.

- A heater has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint, or flammable liquids are used or stored.
- Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
- This heater includes safety features such as **Tip-Over Protection**, **Overheat Protection**, and a **Child Lock**.

2. PRODUCT OVERVIEW

The DAYETTE 1500W Smart Electric Space Heater (Model SH002) is designed to provide efficient and convenient heating for indoor spaces. It features smart control options, multiple heating modes, and integrated safety mechanisms.



The DAYETTE 1500W Smart Electric Space Heater, showcasing its compact tower design, digital display, included remote control, and smartphone application interface for smart control.

Key Features:

- **1500W High Power:** Provides rapid and efficient heating.
- **Smart Control:** WiFi and App control via 'Smart Home Life App', compatible with Alexa and Google Assistant.
- **Remote Control:** Convenient operation from a distance.
- **24-Hour Timer:** Programmable auto-off timer.
- **5 Heating Modes:** Includes High, Low, ECO, Fan, and Anti-freeze modes.
- **90° Oscillation:** Wide-range heat distribution.
- **Digital Display:** Clear temperature and setting indicators.
- **Safety Features:** Tip-Over Protection, Overheat Protection, Child Lock, 24-hour Auto-off.
- **Quiet Operation:** Operates at approximately 22dB.

SAFEST OPTION FOR SPACE HEATER



An illustration of the DAYETTE Smart Space Heater emphasizing its integrated safety features, including child lock, tip-over

protection, overheat protection, and a 24-hour auto-off timer, alongside its CE, UL, and FCC certifications.

3. SETUP

3.1 Unpacking

1. Carefully remove the heater from its packaging.
2. Remove all packaging materials, including any protective films or covers.
3. Inspect the heater for any signs of damage. If damaged, do not use and contact customer support.

3.2 Placement

- Place the heater on a firm, level surface.
- Ensure the heater is at least 3 feet (0.9 meters) away from walls, furniture, curtains, and other combustible materials.
- Do not place the heater directly under a power outlet.
- Ensure the air intake and exhaust vents are not blocked.

3.3 Power Connection

- Plug the heater directly into a 120V AC, 60Hz wall outlet.
- Do not use extension cords, power strips, or surge protectors.

3.4 Remote Control Setup

- Insert the required batteries (not specified, typically AAA) into the remote control, observing polarity.

3.5 App and WiFi Connection

1. Download the 'Smart Home Life App' from your smartphone's app store (iOS or Android).
2. Register or log in to your account.
3. Ensure your heater is plugged in and powered on.
4. Follow the in-app instructions to add a new device. This typically involves selecting the device type (heater), putting the heater into pairing mode (refer to heater display or manual for specific button presses), and connecting to your home 2.4GHz WiFi network.
5. Once connected, you can control the heater via the app.

INTELLIGENT APP CONTROL

Control warmth anytime, anywhere



A person using a smartphone application to remotely control the DAYETTE Smart Space Heater, illustrating the convenience of adjusting settings from anywhere.

4. OPERATING INSTRUCTIONS

4.1 Control Panel and Remote Control

The heater can be operated using the touch controls on the top panel or the included remote control. The remote control mirrors most functions available on the control panel.

4.2 Power On/Off

- Press the Power button (O/I) on the control panel or remote to turn the heater on or off.

4.3 Mode Selection

Press the Mode button (M) to cycle through the available modes:

- **High Heat (HI):** Provides maximum heating power (1500W).
- **Low Heat (LO):** Provides reduced heating power (e.g., 750W).
- **ECO Mode:** Maintains a set temperature (41°F to 95°F / 5°C to 35°C) by automatically adjusting heating power to save energy.
- **Fan Mode:** Operates as a fan without heat, useful for air circulation.
- **Anti-freeze Mode:** Automatically turns on if the room temperature drops below a certain threshold (e.g., 41°F / 5°C) to prevent freezing.

4.4 Temperature Adjustment

- In High, Low, or ECO mode, use the '+' and '-' buttons to set your desired temperature. The digital display will show the set temperature.
- The heater will work to reach and maintain this temperature.



A close-up view of the DAYETTE Smart Space Heater's digital display, indicating its 3-second rapid heating capability for quick warmth.

4.5 Oscillation Function

- Press the Oscillation button (~) to activate or deactivate the 90° oscillation feature, which helps distribute heat more widely.



The DAYETTE Smart Space Heater demonstrating its 90-degree oscillation feature, designed to distribute warmth evenly across a wider area in a room.

4.6 Timer Function


- Press the Timer button (**Clock icon**) to set the auto-off timer. Each press typically increases the timer by one hour, up to 24 hours.
- The heater will automatically turn off once the set time has elapsed.

4.7 Child Lock

- Press and hold the Child Lock button (**Lock icon**) for a few seconds to activate or deactivate the child lock.
- When activated, the control panel buttons will be disabled to prevent accidental changes.

4.8 Smart App and Voice Control

- Once connected to the 'Smart Home Life App', you can control all heater functions remotely from your smartphone.
- Integrate with Alexa or Google Assistant for voice control. Use commands like "Alexa, turn on the heater" or "Hey Google, set heater to 72 degrees."

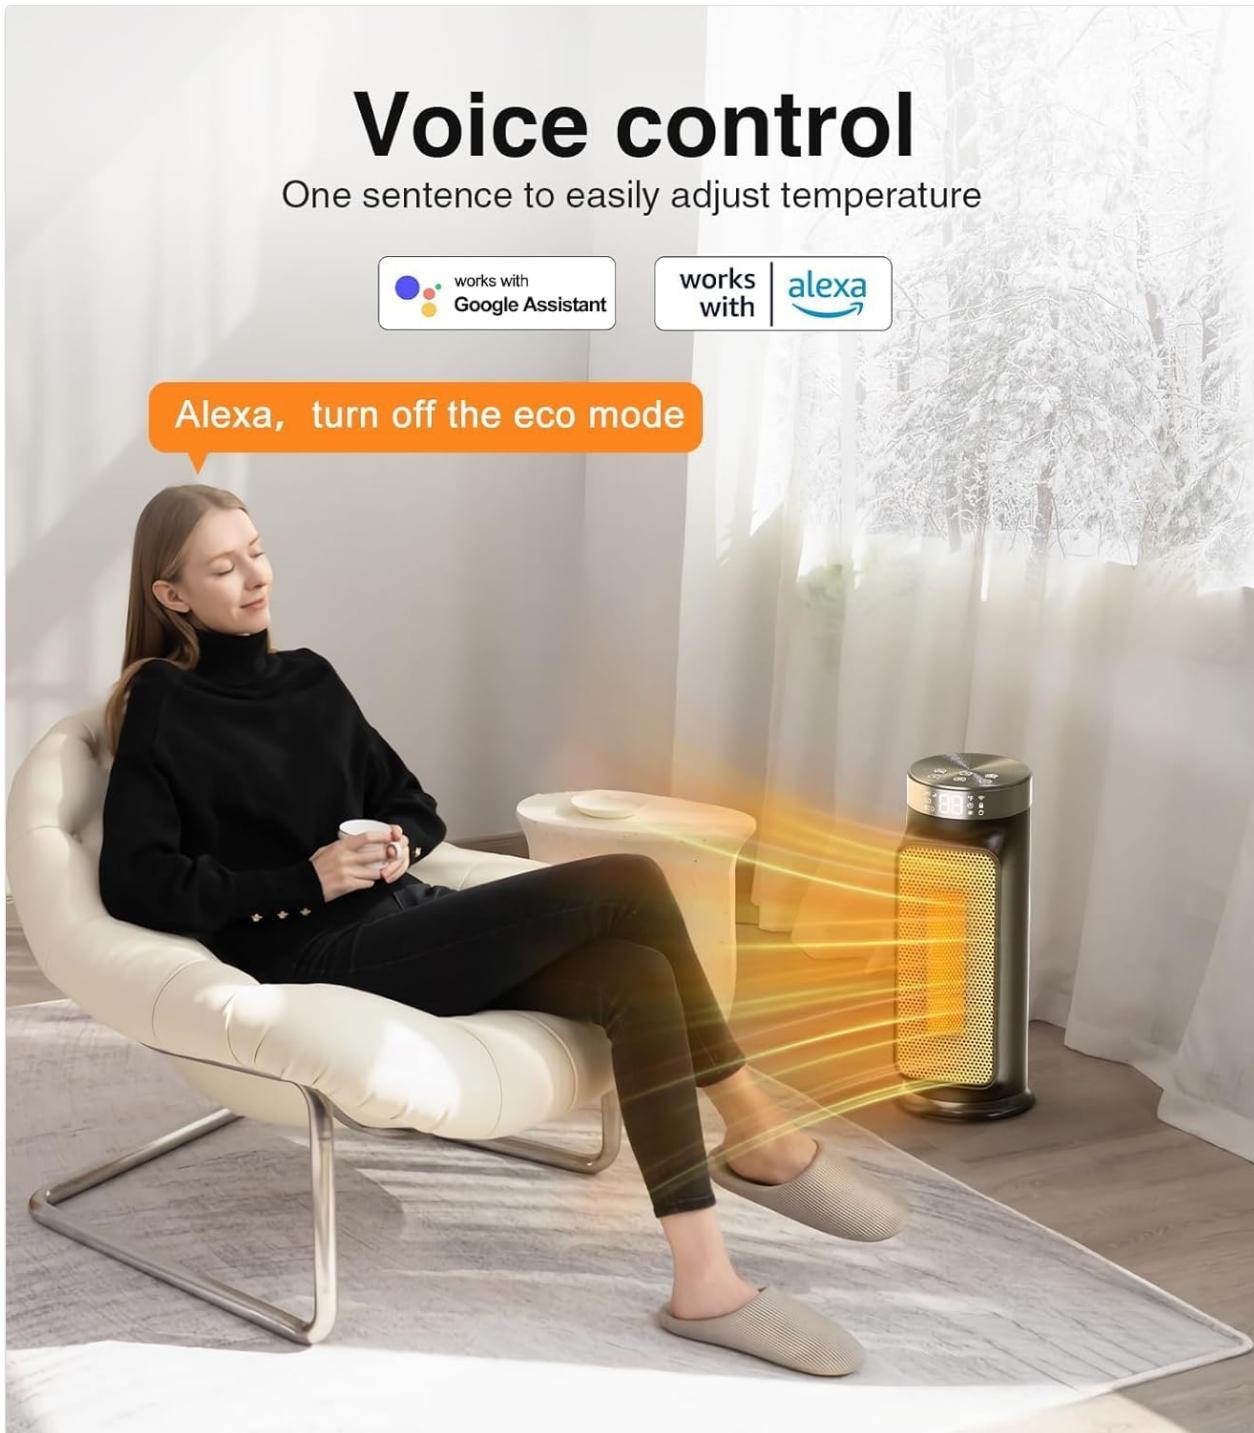

A user demonstrating voice control functionality with the DAYETTE Smart Space Heater, compatible with Alexa and Google Assistant, allowing for hands-free temperature adjustments.

5. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your heater.

5.1 Cleaning

1. Always turn off the heater and unplug it from the power outlet before cleaning.
2. Allow the heater to cool down completely.
3. Use a soft, damp cloth to wipe the exterior surfaces of the heater. Do not use abrasive cleaners or solvents.
4. Gently vacuum the air intake and exhaust vents to remove dust and debris. Do not immerse the heater in water.
5. Ensure the heater is completely dry before plugging it back in.

5.2 Storage

- If storing the heater for an extended period, clean it thoroughly as described above.
- Store the heater in its original packaging, if possible, in a cool, dry place.
- Avoid placing heavy objects on top of the heater during storage.

6. TROUBLESHOOTING

If you encounter issues with your DAYETTE Smart Electric Space Heater, refer to the following troubleshooting guide:

Problem	Possible Cause	Solution
Heater does not turn on.	No power supply; Tip-over switch activated; Overheat protection activated; Power button not pressed.	Ensure heater is plugged into a working outlet. Place heater on a flat, stable surface. Unplug, wait 10 minutes, then plug back in. Press the Power button.
No heat output.	Heater is in Fan mode; Temperature setting is too low; Overheat protection activated.	Switch to High, Low, or ECO mode. Increase the set temperature. Unplug, wait 10 minutes, then plug back in.
App connectivity issues.	Incorrect WiFi password; Router too far; 5GHz WiFi network used; App glitch.	Ensure correct 2.4GHz WiFi password. Move heater closer to router. Ensure router supports 2.4GHz. Restart app and heater. Re-pair device if necessary.
Inconsistent temperature or heater cycles on/off frequently.	ECO mode operation; Ambient temperature sensor reading.	This is normal behavior for ECO mode to maintain the set temperature. Ensure the heater's sensor is not blocked. If behavior is erratic, contact support.
Heater makes unusual noises.	Dust/debris inside; Internal component issue.	Unplug and clean the heater. If noise persists, discontinue use and contact customer support.

If the problem persists after attempting these solutions, please contact customer support.

7. SPECIFICATIONS

Feature	Specification
Brand	DAYETTE
Model Number	SH002
Power Output	1500W
Voltage	120 Volts
Product Dimensions	7.5"D x 7.5"W x 17"H
Item Weight	5.5 pounds
Color	Phantom Black
Form Factor	Tower
Indoor/Outdoor Usage	Indoor
Room Type	Bathroom, Bedroom, Home Office, Living Room
Min Temperature Setting	41°F (5°C)
Max Temperature Setting	95°F (35°C)
Special Features	2S Heating, 24H Timer, 5 Modes, Adjustable Temperature, Child Lock, Digital Display, Fast Heating, Overheat Protection, Remote Control, For Alexa & Google Voice Control, Tip-Over Protection, Wi Fi Enabled
UPC	850070845069

8. WARRANTY AND SUPPORT

8.1 Warranty Information

Specific warranty details for the DAYETTE 1500W Smart Electric Space Heater are typically provided at the point of purchase or within the product packaging. Please refer to your purchase documentation or contact the seller for information regarding warranty coverage and duration. The product is designed with high-quality materials and advanced technology for an extended lifespan.

8.2 Customer Support

For technical assistance, troubleshooting not covered in this manual, or warranty claims, please contact the seller or manufacturer directly. Contact information can usually be found on the product packaging, the seller's website, or your purchase invoice.

DAYETTE 1500W Smart Electric Space Heater User Manual - Model SH002

© 2024 DAYETTE. All rights reserved.

Related Documents - SH002



[Dayette True HEPA Air Purifier User Manual](#)

Comprehensive user manual for the Dayette True HEPA Air Purifier, covering safety information, package contents, specifications, operation, filter replacement, maintenance, troubleshooting, and tips for optimal use.



[Dayette True HEPA Air Purifier User Manual](#)

User manual for the Dayette True HEPA Air Purifier, detailing safety information, specifications, operation, filter replacement, maintenance, and troubleshooting.