

Nonbliep Controller

Nonbliep Wired Controller Instruction Manual

For PlayStation 5, PlayStation 4, and PC

1. INTRODUCTION

Thank you for choosing the Nonbliep Wired Controller. This manual provides essential information for setting up, operating, and maintaining your new gaming controller. Please read these instructions carefully before use to ensure optimal performance and longevity of your device.

2. PRODUCT OVERVIEW

The Nonbliep Wired Controller is designed for an immersive gaming experience across multiple platforms. Key features include:

- **Wide Compatibility:** Supports PlayStation 5, PlayStation 4, PC (Windows/Steam), iOS, and Android devices.
- **Wired Connection:** Features a 6.5ft USB cable for stable and fast connectivity, eliminating the need for batteries.
- **Dual Vibration:** Provides tactile feedback for enhanced realism during gameplay.
- **6-Axis Gyroscope:** Offers precise motion control for compatible games.
- **Turbo Function:** Enables rapid-fire mode for quick and efficient gameplay.
- **Macro Programming:** Customizable PL/PR buttons for advanced game operations.
- **Multi-Touch Pad:** A dual-point capacitive touchpad for interactive control.
- **3.5mm Audio Jack:** Supports connecting headphones and microphones (TRRS stereo jack).
- **LED RGB Lighting:** Customizable lighting with "Breathing" or "Solid" modes and 8 color options.
- **Ergonomic Design:** Shaped to fit comfortably in hand for extended gaming sessions.



Figure 2.1: Front view of the Nonbliep Wired Controller with illuminated buttons.

3. SETUP INSTRUCTIONS

3.1 Connecting to PlayStation 5

1. Ensure your PS5 console is powered on.
2. Connect the USB cable from the controller to an available USB port on your PS5 console.
3. Navigate to the PS5 system settings: **Settings > Accessories > Controller (General) > Communication Method > Use USB Cable.**
4. The controller should now be recognized and ready for use.

Note: The 3.5mm headphone jack is not compatible with Apple wired headphones.

3.2 Connecting to PlayStation 4, PC, iOS, and Android

The controller connects via its 6.5ft USB cable to compatible devices. For PC, ensure necessary drivers are installed if not automatically detected. For iOS and Android, ensure your device supports wired controller input via USB OTG (On-The-Go) if required.



Figure 3.1: Multi-platform compatibility of the wired controller.

4. OPERATING INSTRUCTIONS

4.1 Basic Controls

The controller features standard gaming buttons, analog sticks, a D-pad, and triggers. The central 'P' button indicates power and connection status.

Sensitive Touch Control Panel

One-click Quick Sharing

Provides a novel way to interact and support sliding touch to make players enjoy the game



Figure 4.1: Sensitive touch control panel for interactive gameplay.

4.2 Turbo Function

The Turbo function allows for high-frequency automatic button presses, ideal for games requiring rapid input.

1. Press and hold the **TURBO** button.
2. While holding **TURBO**, press any other function button (e.g., X, O, Square, Triangle, R1, L1, etc.) on the controller. This function button will now be set as a burst button.
3. Release both buttons. Now, simply pressing the defined function button will activate the high-frequency auto-combo effect.



Figure 4.2: Turbo function activation and rate options.

4.3 Programmable Buttons (PL/PR)

The controller features mappable advanced game buttons (PL/PR) on the rear, allowing you to program them to replicate other button inputs for personalized control.

1. Press the **SET** button located on the back of the controller. The LED indicator will change to programming mode.
2. Press the **PL** or **PR** button you wish to program.
3. Press the desired function button (e.g., R2, X, etc.) that you want the PL/PR button to emulate.
4. Press the **SET** button again to save the setting and exit programming mode.

4.4 LED RGB Lighting

Customize the controller's LED lighting to match your gaming setup.

- Press the dedicated RGB button (often labeled 'SET' or a specific light icon) to cycle through different lighting modes (e.g., Breathing, Solid) and 8 color options.

RGB MODE+8 COLORS TO SWITCH FREELY



Figure 4.3: Available RGB lighting colors.

4.5 Immersive Feedback

The controller integrates a 6-axis gyro sensor and 4-level dual vibration motors to provide responsive and immersive physical feedback during gameplay.



Figure 4.4: Visual representation of 6-Axis Gyro Sensor and 4-Level Vibration.

4.6 Official Product Video

Watch this video for a demonstration of the controller's features and in-game performance.

Video 4.1: A user demonstrating the Nonbliep Wired Controller, highlighting its wired connection, button layout, programmable back buttons, and responsive gameplay in a Spider-Man game. The video shows the controller being plugged into a PS5 and then used for web-swinging, emphasizing its comfortable fit and lack of input lag.

5. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the controller. Avoid using harsh chemicals or abrasive materials.
- **Storage:** Store the controller in a cool, dry place away from direct sunlight and extreme temperatures.
- **Cable Care:** Avoid sharp bends or excessive pulling on the USB cable to prevent damage.



Figure 5.1: The controller's non-slip grip and durable braided cable.

6. TROUBLESHOOTING

- **Controller Not Responding:** Ensure the USB cable is securely connected to both the controller and the gaming console/PC. Try a different USB port.
- **Input Lag:** As a wired controller, input lag should be minimal. If experienced, ensure the connection is secure and try restarting your console/PC.
- **Buttons Not Working:** Verify that the buttons are not stuck. If programmable buttons (PL/PR) are not functioning as expected, re-program them following the instructions in Section 4.3.
- **Vibration Not Working:** Check in-game settings to ensure vibration feedback is enabled.
- **Audio Jack Issues:** Ensure your headphones/microphone are fully inserted and compatible (TRRS stereo jack). Adjust audio settings on your console/PC.

If issues persist, please refer to the manufacturer's support channels for further assistance.

7. SPECIFICATIONS

Feature	Detail
Model Number	Controller
Product Dimensions	1 x 1 x 1 inches
Item Weight	12.35 ounces
Manufacturer	Nonbliep
Connectivity	Wired USB (6.5ft cable)
Compatibility	PlayStation 5, PlayStation 4, PC (Windows/Steam), iOS, Android
Special Features	Dual Vibration, 6-Axis Gyroscope, Turbo Function, Programmable Buttons, Multi-Touch Pad, 3.5mm Audio Jack, RGB Lighting

8. WARRANTY AND SUPPORT

Specific warranty details for the Nonbliep Wired Controller are not provided in this manual. For warranty information, technical support, or further inquiries, please contact Nonbliep customer service directly or visit their official website. Keep your purchase receipt as proof of purchase.