

## MiOYOOW HM31558-2

# MiOYOOW Pomodoro Timer Cube User Manual

Model: HM31558-2

## 1. INTRODUCTION

Thank you for choosing the MiOYOOW Pomodoro Timer Cube. This device is designed to enhance your productivity and time management for various tasks, including work, study, cooking, and exercise. This manual provides detailed instructions on how to set up, operate, and maintain your timer cube to ensure optimal performance.

## 2. PRODUCT OVERVIEW

### Key Features:

- **Gravity Sensing Design:** Easily switch between preset timers by flipping the cube.
- **10 Preset Timers:** Includes 1, 2, 3, 5, 10, 15, 20, 25, 30, and 55 minutes.
- **Adjustable Volume:** Three volume levels (High, Medium, Low) suitable for different environments.
- **Portable Design:** Compact and lightweight for easy carrying.
- **Rechargeable Battery:** Built-in 450mAh lithium battery, charged via Type-C USB.

### Components:

The Pomodoro Timer Cube features a simple, intuitive design. Key components include:

- **Numbered Faces:** Each face displays a preset time (e.g., 1, 2, 3, 5, 10, 15, 20, 25, 30, 55 minutes).
- **Power/Reset Button:** Located on the top surface.
- **Volume Button:** Located on the side, used to cycle through volume levels.

- **Type-C Charging Port:** For recharging the internal battery.
- **LED Indicator:** Blinks when the timer is active.



Figure 2.1: MiOYOOW Pomodoro Timer Cube with dimensions (7.3cm/2.9" x 4.1cm/1.6").

**One click start**



**Rotate numbers**



**Gravity induction**



Figure 2.2: Top view of the timer cube, highlighting the power button and Type-C charging port.

## 3. SETUP

### 3.1 Initial Charging

Before first use, it is recommended to fully charge your Pomodoro Timer Cube.

1. Locate the Type-C charging port on the side of the timer cube.
2. Connect the provided data cable to the timer cube and a 5V power adapter (not included), computer USB port, or power bank.
3. The LED indicator will illuminate during charging and turn off when fully charged.

# 3-speed Volume

Suitable for different scenarios according to needs

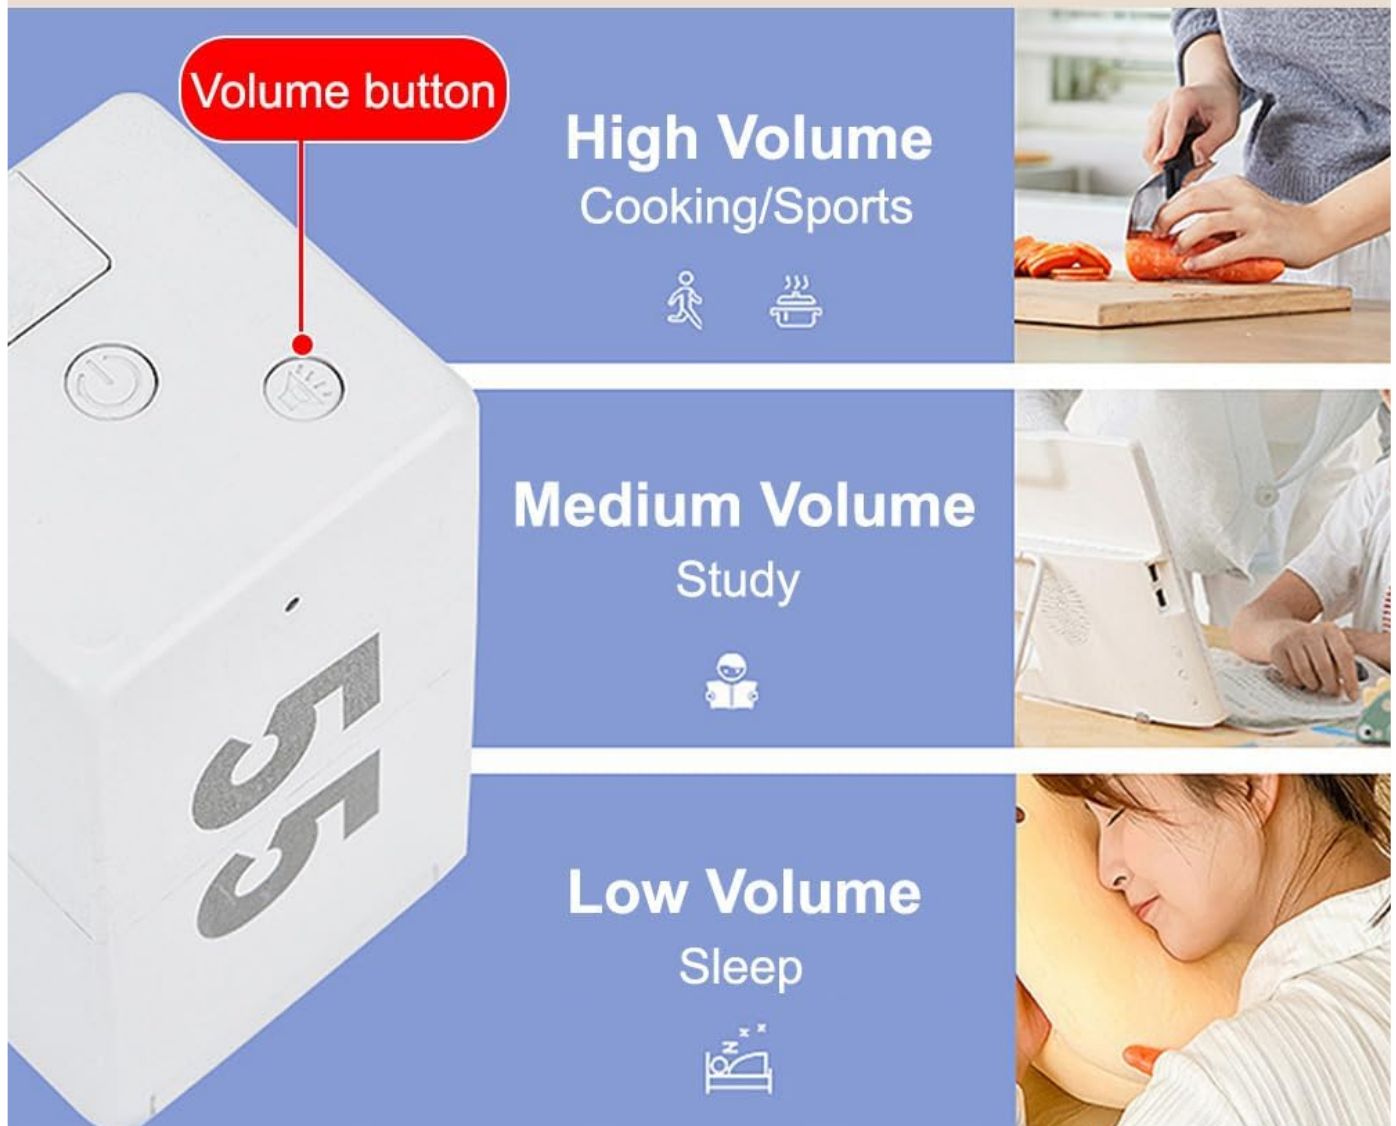


Figure 3.1: Connecting the Type-C charging cable to the timer cube.

## 3.2 Power On/Off

The timer cube does not have a traditional power on/off switch. It enters a low-power standby mode when not actively timing. To activate or reset, simply flip it.

## 4. OPERATING INSTRUCTIONS

### 4.1 Starting a Timer

The MiOYOOW Pomodoro Timer Cube uses gravity sensing for operation. To start a timer:

1. Identify the desired preset time (e.g., 25 minutes) on one of the cube's faces.
2. Place the timer cube with the desired time facing upwards. The timer will automatically start counting down.
3. The LED indicator will blink to show that the timer is active.

# Gravity Induction

Convenient and fast start timing



Figure 4.1: Flipping the cube to start a timer (e.g., 25 minutes facing up).

## 4.2 Available Preset Times

The timer cube offers 10 preset countdown durations:

- 1 minute
- 2 minutes
- 3 minutes
- 5 minutes
- 10 minutes
- 15 minutes
- 20 minutes
- 25 minutes
- 30 minutes

- 55 minutes

## 10 Types Countdown

10 sets of preset times can be transformed through different rotations

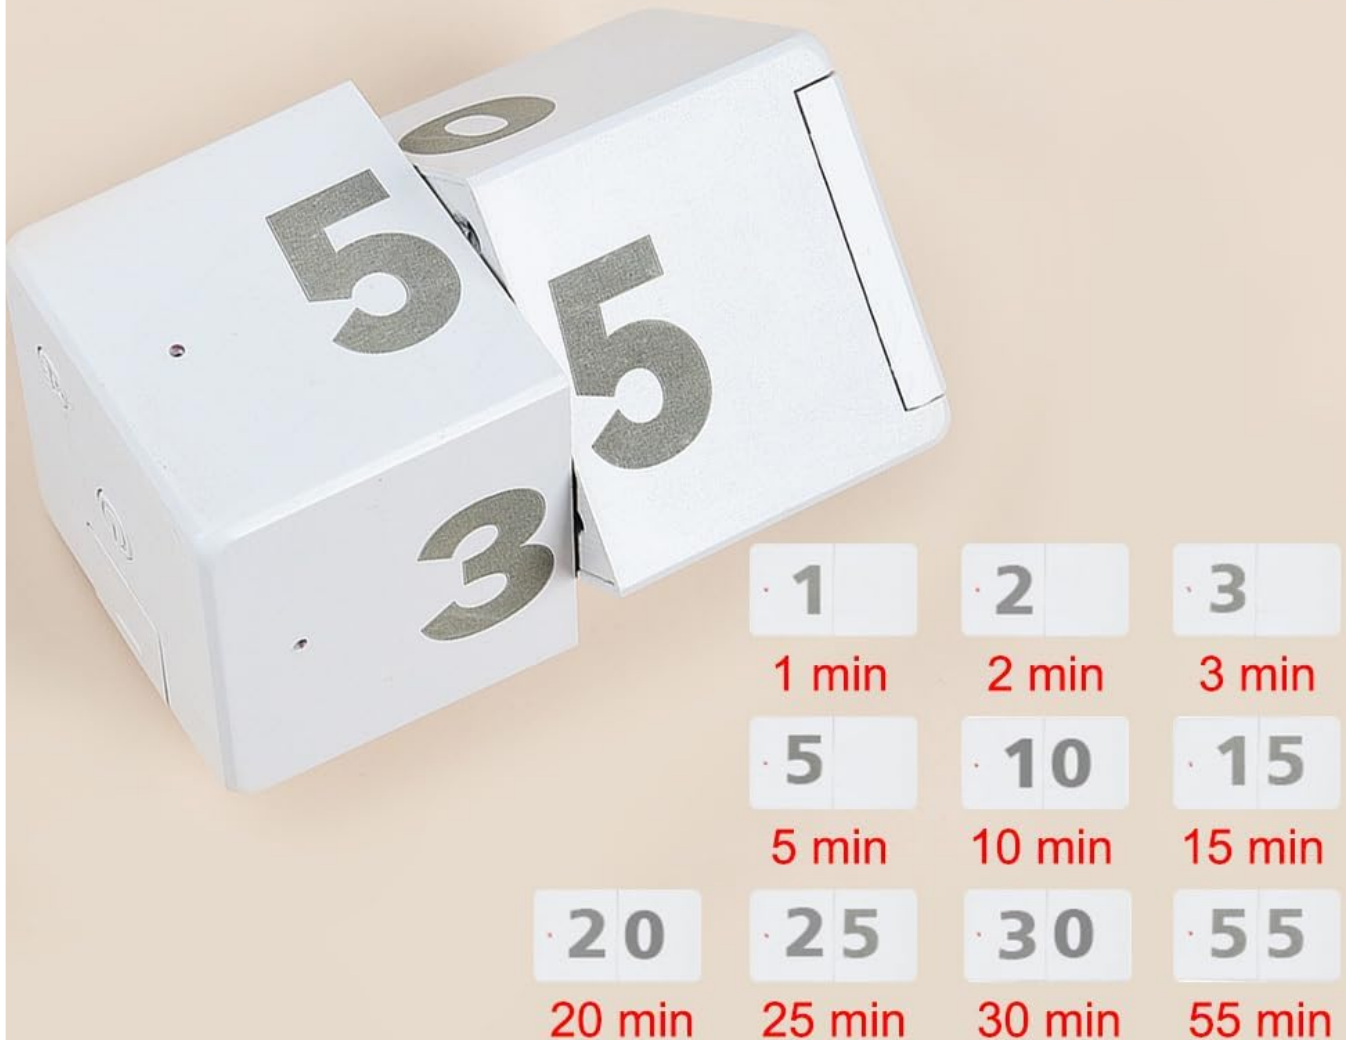


Figure 4.2: The 10 available preset countdown times.

### 4.3 Stopping or Pausing the Timer

To stop or pause an active timer:

1. Flip the cube so that the blank side (or any side not displaying a time) is facing upwards.
2. The timer will stop, and the LED indicator will cease blinking.
3. To resume, flip the cube back to the desired time face up. The timer will continue from where it left off.

### 4.4 Adjusting Volume

The timer cube offers three volume levels: High, Medium, and Low.

1. Locate the volume button on the side of the cube.

2. Press the volume button repeatedly to cycle through the volume settings.
3. The current volume level will be indicated by a sound or visual cue (if available).



Figure 4.3: Volume adjustment button and suggested uses for each level.

## 5. MAINTENANCE

### 5.1 Cleaning

To clean your timer cube, gently wipe the surface with a soft, dry, or slightly damp cloth. Do not use abrasive cleaners, solvents, or immerse the device in water.

### 5.2 Battery Care

The timer cube contains a built-in rechargeable lithium battery. To prolong battery life:

- Avoid fully discharging the battery frequently.
- Charge the device regularly, even if not in constant use.
- Store the device in a cool, dry place when not in use for extended periods.

## 6. TROUBLESHOOTING

### Timer Not Starting:

- Ensure the cube is placed on a flat, stable surface with the desired time facing directly upwards.
- Check if the battery is charged. Connect to a power source and try again.

### No Sound/Low Sound:

- Press the volume button to cycle through the volume levels. Ensure it is not set to the lowest (silent) setting.

### LED Indicator Not Blinking:

- This indicates the timer is not active. Ensure a time face is correctly positioned upwards.
- If the issue persists, try charging the device.

### Device Unresponsive:

- Try connecting the device to a charger. A low battery can cause unresponsiveness.
- If unresponsive after charging, allow it to sit for a few minutes and try again.

## 7. SPECIFICATIONS

| Feature                | Specification                              |
|------------------------|--------------------------------------------|
| Brand                  | MiOYOOW                                    |
| Model Number           | HM31558-2                                  |
| Material               | ABS + Electronic Components                |
| Color                  | White                                      |
| Power                  | 3W                                         |
| Battery                | Built-in 450 mAh Lithium Battery           |
| Charging               | Type-C USB, 5V Adapter Charging            |
| Dimensions (L x W x H) | 7.3cm x 4.1cm x 4.1cm (2.9" x 1.6" x 1.6") |
| Item Weight            | 0.1 Kilograms (approx. 91g)                |
| UPC                    | 760606683365                               |

## 8. WARRANTY AND SUPPORT

This product is covered by a standard manufacturer's warranty. For specific warranty details, returns, or technical support, please refer to the retailer's policy where the product was purchased or contact MiOYOOW customer service directly. Please retain your proof of purchase for any warranty claims.

© 2023 MiOYOOW. All rights reserved.

### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

**Name**

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question