

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Jectse](#) /

› [C U0007 Receiver User Manual](#)

Jectse Jectse21tk3dgwzc

C U0007 Receiver User Manual

Model: Jectse21tk3dgwzc

PRODUCT OVERVIEW

The Jectse C U0007 Receiver is designed for seamless connectivity with compatible wireless mice and keyboards. Utilizing advanced 2.4GHz technology, it provides a strong and stable connection without delays or dropouts, ensuring optimal performance for your devices.

This compact USB receiver supports multiple device connectivity, allowing you to connect up to 7 compatible mice and keyboards simultaneously, offering versatility for various setups. Its plug-and-play design ensures quick and convenient setup.

Key Features:

- Specific Compatibility: Compatible with mouse models M505, M905, and keyboard models K340, K350, among others.
- Advanced 2.4GHz Technology: Ensures a strong, reliable connection with minimal interference.
- USB Interface: Plug-and-play functionality for immediate use.
- Multi-Device Support: Connects up to 7 compatible mice and keyboards simultaneously.
- Compact and Portable: Easy to store and carry.

SETUP GUIDE

Setting up your C U0007 Receiver is a straightforward process due to its plug-and-play design. Follow these simple steps to begin using your wireless devices.

1. Unpacking the Receiver

Carefully remove the C U0007 Receiver from its packaging. Ensure no damage occurred during transit.



Image: Front view of the C U0007 USB receiver, showing its compact size and USB connector.

2. Connecting the Receiver

Locate an available USB port on your computer or laptop. Insert the C U0007 Receiver firmly into the USB port. The system should automatically detect and install the necessary drivers.



Image: The C U0007 USB receiver shown plugged into a laptop's USB port, demonstrating its low-profile design when connected.

No additional software or drivers are typically required for basic functionality. The receiver is designed for immediate use upon connection.

OPERATING INSTRUCTIONS

Once the C U0007 Receiver is connected, you can begin pairing and using your compatible wireless mice and keyboards.

1. Pairing Devices

The C U0007 receiver is designed to work with specific Unifying-compatible devices. For initial pairing or re-pairing, refer to the instructions provided with your specific mouse or keyboard. Typically, this involves pressing a connect button on the device and/or using a software utility if provided by the device manufacturer.

Model: C U0007

Interface: USB



Image: A close-up view of the C U0007 receiver, highlighting its model number and USB interface, indicating its identity for pairing.

2. Multi-Device Connectivity

This receiver supports connecting up to 7 compatible wireless devices simultaneously. This allows for a streamlined setup where multiple peripherals can share a single USB port, reducing clutter and freeing up other ports.



Image: A desktop environment with a computer, monitor, wireless keyboard, and mouse, demonstrating the 2.4GHz wireless technology in action with the receiver plugged into the PC tower.

Ensure all devices you wish to connect are compatible with the C U0007 Unifying receiver for optimal performance.

MAINTENANCE

The C U0007 Receiver requires minimal maintenance to ensure its longevity and optimal performance.

- **Cleaning:** Use a soft, dry cloth to gently wipe the exterior of the receiver. Avoid using liquid cleaners or abrasive materials, as these can damage the device.
- **Storage:** When not in use, especially during travel, store the receiver in a clean, dry place. Its compact size makes it easy to store in a laptop bag or accessory pouch.
- **Handling:** Avoid dropping the receiver or exposing it to extreme temperatures or humidity. Handle the USB connector carefully to prevent bending or damage to the pins.

TROUBLESHOOTING

If you encounter issues with your C U0007 Receiver, try the following troubleshooting steps:

1. Device Not Responding:

- Ensure the receiver is fully inserted into a working USB port. Try a different USB port.
- Check the batteries in your wireless mouse or keyboard. Replace them if necessary.
- Re-pair your device with the receiver. Refer to your device's manual for specific pairing instructions.

2. Intermittent Connection:

- Ensure there are no large metallic objects or other wireless devices (like Wi-Fi routers, cordless phones) too close to the receiver or your wireless devices, as these can cause interference.
- Try moving the receiver closer to your wireless devices, perhaps using a USB extension cable if needed.

3. Devices Not Recognized:

- Verify that your mouse and keyboard models (e.g., M505, M905, K340, K350) are indeed compatible with the C U0007 Unifying receiver.
- Restart your computer.

If problems persist after attempting these steps, contact customer support for further assistance.

SPECIFICATIONS

Feature	Detail
Model	C U0007
Item Model Number	Jectse21tk3dgwzc
Brand	Jectse
Interface	USB
Connection Technology	2.4GHz Wireless
Compatibility	Unifying Devices (e.g., M505, M905 mice; K340, K350 keyboards)
Material	ABS
Item Weight	0.952 ounces
Package Dimensions	4.72 x 3.94 x 1.18 inches
Color	#011 (Black)

WARRANTY AND SUPPORT

Specific warranty details for the Jectse C U0007 Receiver are not provided in this manual. Please refer to the product packaging or the manufacturer's official website for warranty information.

For technical support or further inquiries, please contact Jectse customer service through their official channels. Information regarding support contacts can typically be found on the product packaging or the Jectse brand website.

You can visit the Jectse Store for more information:[Jectse Official Store](#)

