

## Lavazza Classy Mini

# Lavazza Classy Mini Coffee Maker User Manual

Model: Classy Mini | Brand: Lavazza

## 1. INTRODUCTION

This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your Lavazza Classy Mini Coffee Maker. Please read this manual thoroughly before using the appliance and retain it for future reference.

The Lavazza Classy Mini is a compact and stylish single-serve espresso machine designed for use with Lavazza Expert capsules, offering quick and easy brewing of espresso and lungo.

## 2. IMPORTANT SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons.

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and injury to persons, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for

examination, repair, or adjustment.

- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Use only Lavazza Expert capsules with this machine.
- Ensure the water tank is filled before brewing to prevent damage to the pump.

### 3. PRODUCT COMPONENTS

Familiarize yourself with the parts of your Lavazza Classy Mini Coffee Maker.



Image: The Lavazza Classy Mini Coffee Maker, a compact black machine, shown alongside two boxes of Lavazza Expert Classico capsules. This image provides an overview of the product and its compatible capsules.

- **Water Tank:** Removable reservoir for water. Capacity: 1 Liter (23 Fl. Oz).
- **Capsule Compartment:** Area where the Lavazza Expert capsule is inserted.

- **Brewing Buttons:** Two programmable buttons for Espresso and Lungo.
- **Coffee Dispenser:** Spout from which coffee is dispensed.
- **Cup Support Grid:** Adjustable grid to accommodate different cup sizes.
- **Used Capsule Drawer:** Collects used capsules.
- **Drip Tray:** Collects excess liquid.

# WHY CLASSY MINI?

---



## Compact coffee machine

The sleek design makes it easy on the eyes. Only the best for your coffee corner.



## Small & Large cup rack

Adjustable to two heights to savour your favourite Espresso or a Lungo.



## 2 coffee selections

Automatic and programmable, for an authentic Italian Espresso or a Lungo

Image: A visual breakdown highlighting key features of the Lavazza Classy Mini. It illustrates the compact design, the adjustable cup rack for small and large cups, and the two programmable coffee selection buttons for espresso and lungo.

# IDEAL FOR SMALL SPACES

The best accessory for your kitchen or small office.



Image: This graphic displays the physical dimensions and technical specifications of the Lavazza Classy Mini. It shows the height (10 inches), width (5.3 inches), depth (13.3 inches), water tank capacity (23 Fl. Oz or 0.7L), voltage (220-240V), and weight (3.5 kg).

## 4. SETUP AND FIRST USE

1. **Unpacking:** Carefully remove the coffee maker from its packaging. Retain packaging for future transport or storage.
2. **Placement:** Place the machine on a stable, flat, and dry surface, away from heat sources and water splashes.
3. **Cleaning:** Before first use, wash the water tank, cup support grid, used capsule drawer, and drip tray with warm water and mild detergent. Rinse thoroughly.
4. **Fill Water Tank:** Fill the water tank with fresh, potable water up to the MAX level. Place the tank back onto the machine securely.
5. **Power Connection:** Plug the power cord into a grounded electrical outlet.

## 6. Initial Rinse Cycle:

- Place a large container (at least 20 oz) under the coffee dispenser.
  - Press either the Espresso or Lungo button. The machine will start heating up. The buttons will flash during heating and become steady when ready.
  - Once ready, press the Lungo button (larger cup icon) to run a full water cycle without a capsule. This primes the system and cleans internal components.
  - Repeat this process 2-3 times until clear water flows out.
7. The machine is now ready for use.

## 5. OPERATING INSTRUCTIONS

---

### 5.1 Brewing Coffee

1. Ensure the water tank is filled with fresh water.
2. Turn on the machine by pressing any button. Wait for the buttons to stop flashing and become steady, indicating the machine is heated and ready.
3. Lift the lever to open the capsule compartment.
4. Insert one Lavazza Expert capsule into the compartment. Close the lever firmly.
5. Place your cup on the cup support grid. Adjust the grid height if necessary.
6. Press the desired brewing button:
  - **Espresso Button:** For a short, concentrated coffee (approx. 1.35 oz / 40 ml).
  - **Lungo Button:** For a longer coffee (approx. 3.7 oz / 110 ml).
7. The machine will automatically stop when the selected volume is dispensed.
8. After brewing, lift the lever again to automatically eject the used capsule into the used capsule drawer. Close the lever.

### 5.2 Programming Coffee Volume

You can customize the volume for each button:

1. Ensure the machine is on and ready (buttons steady).
2. Insert a capsule and place a cup under the dispenser.
3. Press and hold the button you wish to program (Espresso or Lungo).
4. Release the button when the desired coffee volume has been dispensed into your cup. The new volume is now saved for that button.

## 6. CLEANING AND MAINTENANCE

---

Regular cleaning ensures optimal performance and extends the life of your coffee maker.

## 6.1 Daily Cleaning

- **Drip Tray and Used Capsule Drawer:** Empty and rinse daily. Wash with warm, soapy water and dry thoroughly.
- **Water Tank:** Rinse daily and refill with fresh water. Wash with warm, soapy water weekly.
- **Exterior:** Wipe the exterior of the machine with a soft, damp cloth. Do not use abrasive cleaners or solvents.

## 6.2 Descaling

Descaling is crucial to remove mineral buildup and maintain machine efficiency. The frequency depends on water hardness and usage, but generally every 3-6 months.

1. Empty the water tank, drip tray, and used capsule drawer.
2. Fill the water tank with a descaling solution (e.g., a mixture of water and white vinegar, or a commercial descaler, following product instructions).
3. Place a large container (at least 20 oz) under the coffee dispenser.
4. Turn on the machine. Once heated, press the Lungo button and let the entire descaling solution run through.
5. Repeat the process with clean water 2-3 times to rinse the machine thoroughly and remove any descaling solution residue.

**Note:** Always refer to the descaling product's instructions for specific ratios and procedures.

## 7. TROUBLESHOOTING

This section addresses common issues you might encounter with your Lavazza Classy Mini Coffee Maker.

Problem	Possible Cause	Solution
Machine does not turn on.	No power supply.	Check if the power cord is securely plugged into the outlet and the machine. Check the circuit breaker.
No coffee is dispensed or only a few drops.	Water tank empty; Machine not primed; Clogged nozzle; Machine needs descaling.	Fill water tank. Perform initial rinse cycle. Clean the coffee dispenser. Descale the machine.
Coffee is not hot enough.	Machine not fully heated; Cups are cold.	Wait for the machine to fully heat up (buttons steady). Preheat cups with hot water.
Water leaks from the machine.	Water tank not properly seated; Drip tray full.	Ensure the water tank is correctly positioned. Empty the drip tray.
Used capsule not ejecting.	Lever not fully lifted; Capsule stuck.	Lift the lever completely and firmly. If stuck, gently remove the capsule.

If the problem persists after attempting these solutions, please contact Lavazza customer support.

## 8. TECHNICAL SPECIFICATIONS

Feature	Specification
Brand	Lavazza
Model Name	Classy Mini
Coffee Maker Type	Espresso Machine
Capacity	1 Liters (23 Fl. Oz)
Color	Black
Product Dimensions (D x W x H)	7"D x 4"W x 6"H
Item Weight	4.08 pounds (1.85 kg)
Special Feature	Auto Shut-Off
Filter Type	Reusable (internal, not user-replaceable filter)
Specific Uses For Product	Espresso
UPC	860013184407
ASIN	B0DPXHLTGZ
Country of Origin	Italy

## 9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or visit the official Lavazza website. Keep your proof of purchase for warranty claims.

**Lavazza Official Website:** [www.lavazza.com](http://www.lavazza.com)

For specific product support or troubleshooting beyond this manual, please contact Lavazza customer service.

© 2025 Lavazza. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.