

Gaabor RC-S60E02AS

Gaabor Electric Pressure Cooker User Manual

MODEL: RC-S60E02AS

1. Introduction

Welcome to the Gaabor Electric Pressure Cooker user manual. This guide provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance. Please read this manual thoroughly before first use and keep it for future reference.

The Gaabor RC-S60E02AS is a versatile 6-liter electric pressure cooker designed to simplify your cooking process with its 1000W power, automatic shutdown, LED display, and six pre-defined menu programs.

2. Important Safety Instructions

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions carefully before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse the cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not use outdoors.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- This appliance cooks under pressure. Improper use may result in scalding injury. Make certain unit is properly closed before operating.
- Never force open the pressure cooker. Do not open until the unit has cooled and internal pressure has been released.



Image: Front view of the Gaabor Electric Pressure Cooker, illustrating the main unit.

3. Product Overview

3.1 Components

Your Gaabor Electric Pressure Cooker package includes the following items:

- 1 x Electric Pressure Cooker Main Unit
- 1 x Inner Pot
- 1 x Lid Assembly
- 1 x Spoon
- 1 x Measuring Cup
- 1 x Instruction Manual (this document)

3.2 Key Features

The Gaabor Electric Pressure Cooker is equipped with features designed for convenience and safety:

- **Safety Lock:** Ensures the lid is securely closed before pressure cooking begins.
- **6-Liter Capacity:** Ideal for family-sized meals.
- **Time/Flavor Adjustment:** Allows customization of cooking time and intensity.
- **Pre-programmed Temperature:** Optimized settings for various dishes.
- **Automatic Shutdown:** Enhances safety by turning off the appliance after cooking is complete or in case of

malfunction.

- **LED Display:** Provides clear information on cooking status and settings.
- **6 Pre-defined Menu Programs:** Simplifies cooking for common dishes like Rice, Meat/Chicken, Beans, Soup, Cakes, and Porridge.



Image: Side view of the Gaabor Electric Pressure Cooker, highlighting its compact design.

4. Setup

4.1 Before First Use

1. Unpack all components and remove any packaging materials.
2. Wash the inner pot, sealing ring, and lid thoroughly with warm, soapy water. Rinse well and dry completely.
3. Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in water.
4. Ensure all parts are dry before assembly.

4.2 Assembly

1. Place the inner pot into the main unit, ensuring it sits flat and securely.

2. Insert the sealing ring into the lid, ensuring it is properly seated around the lid rack.
3. Align the lid with the main unit, ensuring the arrow on the lid points to the unlock symbol on the cooker body.
4. Rotate the lid clockwise until it locks into place, with the arrow on the lid aligning with the lock symbol.
5. Ensure the pressure release valve is in the correct position (usually sealed for cooking).

5. Operating Instructions

5.1 Basic Operation

1. Add ingredients and the required amount of liquid to the inner pot. Do not exceed the MAX fill line.
2. Place the inner pot into the main unit.
3. Close and lock the lid securely. Ensure the pressure release valve is set to the 'Sealing' position.
4. Plug the power cord into a 127V electrical outlet. The LED display will illuminate.
5. Select your desired cooking program using the control panel buttons.
6. The cooker will automatically begin the preheating and pressure building process.
7. Once cooking is complete, the cooker will beep and may switch to a 'Keep Warm' mode.

5.2 Pre-set Programs

The Gaabor Electric Pressure Cooker features six pre-defined programs for common dishes:

Program	Typical Use	Notes
Rice	Cooking various types of rice.	Adjust water ratio as per rice type.
Meat/Chicken	Tenderizing meats and poultry.	Cooking time varies by cut and quantity.
Beans	Cooking dried beans and legumes.	Soaking may reduce cooking time.
Soup	Preparing broths and soups.	Allows for rich flavor development.
Cakes	Baking cakes and desserts.	Use a suitable baking pan inside.
Porridge	Making oatmeal or other porridges.	Ensures creamy texture.

5.3 Timer and Pressure Release

- **Delay Start Timer:** Use the 'Timer' button to set a delayed start time for your cooking program, up to 24 hours.
- **Natural Pressure Release:** Allow the cooker to cool down naturally after cooking. The pressure indicator will drop, and the lid can be opened safely.
- **Quick Pressure Release:** For faster release, carefully turn the pressure release valve to the 'Venting' position. Keep hands and face away from the steam vent. Only use quick release for recipes that specify it.

CARACTERÍSTICAS

- ☆ Trava de segurança
- ☒ Capacidade de **6L**
- 🕒 Ajuste de Tempo/Sabor
- 🌡️ Temperatura pré-programada
- 🔌 Desligamento Automático



Image: Close-up view of the control panel with LED display and program buttons.



Image: A hand demonstrating the operation of the pressure release valve on the lid.

Gaabor

Panela de Pressão Elétrica

Mais segurança para sua família com a Panela de Pressão Elétrica da Gaabor. Prepare diversos tipos de receita com mais facilidade e agilidade, numa capacidade de 6L.

SEGURA · PRÁTICA · TAMANHO FAMÍLIA



Image: The electric pressure cooker in a kitchen setting, illustrating the 24-hour timer function on its display.

6. Maintenance and Cleaning

Regular cleaning ensures the longevity and optimal performance of your pressure cooker.

6.1 Cleaning the Inner Pot

- After each use, allow the inner pot to cool completely.
- Wash with warm, soapy water and a non-abrasive sponge.
- Rinse thoroughly and dry completely before storing. The inner pot is dishwasher safe.

6.2 Cleaning the Lid and Sealing Ring

- Remove the sealing ring from the lid. Wash both the lid and sealing ring with warm, soapy water.
- Pay attention to cleaning the steam release valve and anti-block shield to prevent food residue buildup.
- Rinse and dry all parts thoroughly. Ensure the sealing ring is properly re-inserted before next use.

6.3 Exterior Cleaning

- Wipe the exterior of the main unit with a damp cloth.
- Never immerse the main unit in water or any other liquid.
- Do not use harsh chemicals or abrasive cleaning pads.



Image: A hand demonstrating the removal of the inner lid plate for thorough cleaning.



Image: Illustrates water being poured into the lid, demonstrating the ease of cleaning its components.

7. Troubleshooting

If you encounter any issues with your Gaabor Electric Pressure Cooker, please refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
Cooker not turning on	No power supply; loose plug.	Check power outlet; ensure plug is fully inserted.
Lid not closing/locking	Inner pot not seated correctly; sealing ring misplaced.	Ensure inner pot is flat; adjust sealing ring.
Steam leaking from lid	Sealing ring damaged/dirty; lid not closed properly; food residue on rim.	Clean/replace sealing ring; re-close lid; clean rim.
Pressure not building	Pressure release valve in 'Venting' position; insufficient liquid.	Turn valve to 'Sealing'; add more liquid.
Food undercooked	Insufficient cooking time; too much food.	Increase cooking time; reduce food quantity.

If the problem persists after attempting these solutions, please contact customer support.

8. Specifications

Technical details for the Gaabor RC-S60E02AS Electric Pressure Cooker:

Attribute	Detail
Model	RC-S60E02AS
Brand	Gaabor
Voltage	127 Volts
Power	1000 Watts
Capacity	6 Liters
Material	Plastic (exterior), Stainless Steel (inner pot)
Color	Orion
Dimensions (Packaging)	39.37 x 35.31 x 35.31 cm
Weight (Packaging)	5.12 kg

9. Warranty and Support

9.1 Warranty Information

Your Gaabor Electric Pressure Cooker comes with a manufacturer's warranty against defects in materials and workmanship. Please refer to the warranty card included in your packaging for specific terms, conditions, and duration. Keep your purchase receipt as proof of purchase for warranty claims.

9.2 Customer Support

For any questions, technical assistance, or warranty claims, please contact Gaabor customer support. Contact information can typically be found on the product packaging or the official Gaabor website.

Thank you for choosing Gaabor. Enjoy your cooking!