

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Gaabor](#) /

› [Gaabor RC-S60E01AS Electric Pressure Cooker User Manual](#)

Gaabor RC-S60E01AS

Gaabor RC-S60E01AS Electric Pressure Cooker

USER MANUAL

1. Introduction

Thank you for choosing the Gaabor RC-S60E01AS Electric Pressure Cooker. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your appliance. Please read it thoroughly before first use and keep it for future reference.

2. Important Safety Instructions

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions carefully before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.

- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- This appliance cooks under pressure. Improper use may result in scalding injury. Make certain unit is properly closed before operating.
- Never force open the pressure cooker. Make sure pressure has been completely released before opening.
- Do not fill the unit over 2/3 full. When cooking foods that expand during cooking, such as rice or dried vegetables, do not fill the unit over 1/2 full.
- The automatic shutdown feature is a safety mechanism; do not attempt to bypass it.

3. Product Components

Familiarize yourself with the parts of your Gaabor Electric Pressure Cooker:

- **Main Unit:** Houses the heating element and control panel.
- **Inner Pot:** Non-stick cooking pot.
- **Lid:** With safety lock mechanism and steam release valve.
- **Steam Release Valve:** Controls pressure release.
- **Control Panel:** Digital display and function buttons.
- **Handles:** For safe transport of the unit.



Figure 3.1: Front view of the Gaabor Electric Pressure Cooker, showing the main unit, control panel, and lid.



Figure 3.2: Detail of the steam release valve on the lid, demonstrating how to operate it.

4. Setup and First Use

1. **Unpacking:** Carefully remove all packaging materials and accessories. Retain packaging for future storage or transport if needed.
2. **Initial Cleaning:** Before first use, wash the inner pot, sealing ring, and steam release valve thoroughly with warm, soapy water. Rinse and dry completely. Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in water.
3. **Placement:** Place the pressure cooker on a stable, level, heat-resistant surface, away from direct sunlight and heat sources. Ensure adequate ventilation around the unit.
4. **Power Connection:** Ensure the voltage of your power outlet matches the appliance's requirements (127V for this model). Plug the power cord into a grounded electrical outlet.

5. Operating Instructions

Your Gaabor Electric Pressure Cooker features pre-programmed functions for various dishes and manual time adjustment.

5.1. Control Panel Overview

The control panel includes a digital display and several function buttons:

- **AJUSTAR TEMPO (Adjust Time):** Used to manually set or adjust cooking time.
- **TIMER:** Sets a delayed start time for cooking.
- **ARROZ (Rice):** Pre-programmed setting for cooking rice (with options for short, standard, long grain).
- **CARNE FRANGO (Meat/Chicken):** Pre-programmed setting for meat and poultry.
- **FEIJÃO (Beans):** Pre-programmed setting for cooking beans.
- **SOPA (Soup):** Pre-programmed setting for soups.
- **BOLOS (Cakes):** Pre-programmed setting for baking cakes.
- **MINGAU (Porridge):** Pre-programmed setting for cooking porridge.
- **MANTER AQUECIDO CANCELAR (Keep Warm/Cancel):** Press once to keep warm after cooking, press and hold to cancel current operation.

5.2. Basic Cooking Steps

1. **Prepare Ingredients:** Place your ingredients and liquid into the inner pot. Do not exceed the MAX fill line (2/3 full, or 1/2 full for expanding foods).
2. **Place Inner Pot:** Insert the inner pot into the main unit.
3. **Close Lid:** Place the lid on the pressure cooker, aligning the arrow on the lid with the arrow on the main unit. Rotate the lid clockwise until it locks into place. Ensure the safety lock is engaged.
4. **Set Steam Release Valve:** Turn the steam release valve to the "Sealing" position (usually pointing away from the vent).
5. **Select Program:** Plug in the appliance. Press the desired pre-programmed function button (e.g., ARROZ, CARNE FRANGO). The display will show the default cooking time.
6. **Adjust Time (Optional):** If needed, press "AJUSTAR TEMPO" to modify the cooking duration.

7. **Start Cooking:** The cooker will automatically begin the preheating process, then start cooking. The display will count down the cooking time.
8. **Pressure Release:** Once cooking is complete, the cooker will beep and automatically switch to "Keep Warm" mode. To release pressure, carefully turn the steam release valve to the "Venting" position.
WARNING: Hot steam will be released. Keep hands and face away from the valve.
9. **Open Lid:** Once all pressure has been released (the float valve drops down), rotate the lid counter-clockwise and lift to open.



Figure 5.1: The Gaabor Electric Pressure Cooker in a kitchen setting, demonstrating its use for preparing various meals.

6. Cleaning and Maintenance

Regular cleaning ensures the longevity and optimal performance of your pressure cooker.

6.1. Daily Cleaning

- Always unplug the appliance and allow it to cool completely before cleaning.
- **Inner Pot:** Wash the non-stick inner pot with warm, soapy water and a soft sponge. Rinse thoroughly and dry. It is dishwasher safe.
- **Lid:** Wash the lid, including the sealing ring and steam release valve, with warm, soapy water. Pay attention to food residue around the sealing ring and valve. Rinse well and air dry.
- **Main Unit:** Wipe the exterior of the main unit with a damp cloth. Do not use abrasive cleaners or immerse the unit in water.

6.2. Periodic Maintenance

- **Sealing Ring:** Inspect the silicone sealing ring regularly for cracks, deformation, or damage. Replace if necessary, as a damaged ring can affect pressure sealing.
- **Steam Release Valve:** Ensure the steam release valve is clear of any food debris. It can be detached for deeper cleaning if needed.

Storage: Store the pressure cooker in a dry place. You may place the lid upside down on the inner pot to prevent odors and allow air circulation.

7. Troubleshooting

If you encounter issues with your Gaabor Electric Pressure Cooker, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Cooker not building pressure.	Lid not properly closed; Sealing ring damaged or not in place; Steam release valve in "Venting" position.	Ensure lid is locked correctly; Check and reposition/replace sealing ring; Turn steam release valve to "Sealing" position.
Food not cooking properly.	Insufficient liquid; Incorrect cooking time/setting; Pressure not maintained.	Add adequate liquid; Adjust cooking time or select appropriate program; Refer to pressure building solutions above.
Error code on display.	Specific internal malfunction.	Unplug the unit, wait a few minutes, then plug it back in. If the error persists, contact customer support.
Steam leaking from lid edges.	Sealing ring not seated correctly or damaged; Food debris on rim.	Open lid, check and clean sealing ring and lid rim. Ensure ring is properly installed. Replace if damaged.

If the problem persists after attempting these solutions, please contact Gaabor customer support.

8. Specifications

- **Brand:** Gaabor
- **Model:** RC-S60E01AS
- **Capacity:** 6 Liters
- **Voltage:** 127.0 Volts
- **Power:** 1000 Watts
- **Material:** Plastic (exterior), Metallic finish
- **Color:** Marinus

9. Warranty and Support

Your Gaabor Electric Pressure Cooker is covered by a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions, including the warranty period and coverage details.

For technical support, service, or warranty claims, please contact Gaabor customer service through the official website or the contact information provided in your product packaging. When contacting support, please have your model number (RC-S60E01AS) and proof of purchase ready.

Note on Videos: No official product videos from the seller are available for this model at this time.