

Iceman RJ56-PB-V2

Iceman Compact Pebble Ice Machine User Manual

Model: RJ56-PB-V2

1. INTRODUCTION

Thank you for choosing the Iceman Compact Pebble Ice Machine. This countertop nugget ice maker is designed to produce chewable pellet ice quickly and efficiently, ensuring you always have a steady supply for your beverages. This manual provides essential information for the safe and effective use of your new appliance.



Figure 1: Iceman Compact Pebble Ice Machine

2. SAFETY INFORMATION

- Read all instructions before operating the appliance.
- Ensure the power outlet matches the voltage requirements (120V/140W).
- Do not immerse the appliance, power cord, or plug in water or other liquids.
- Place the ice maker on a stable, level surface with adequate ventilation.
- Keep away from heat sources and direct sunlight.
- Use only potable water in the water reservoir.
- Unplug the appliance before cleaning or when not in use.

3. PACKAGE CONTENTS

- Iceman Compact Pebble Ice Machine
- Removable Ice Basket

- Ice Scoop
- User Manual

4. PRODUCT OVERVIEW

Familiarize yourself with the components of your ice machine:

- **Control Panel:** Features LED indicators for Ice, Clean, Refill, and Full, along with Start/Stop and Hold to Clean buttons.
- **Ice Basket:** Removable basket for collecting and serving ice.
- **Water Reservoir:** Located beneath the ice basket, where water is stored for ice production.
- **Drain Plug:** Located at the bottom for easy draining of water during cleaning.

Sleek, Compact Design

Perfect for your bar cart or kitchen counter



Figure 2: Control Panel and Indicators

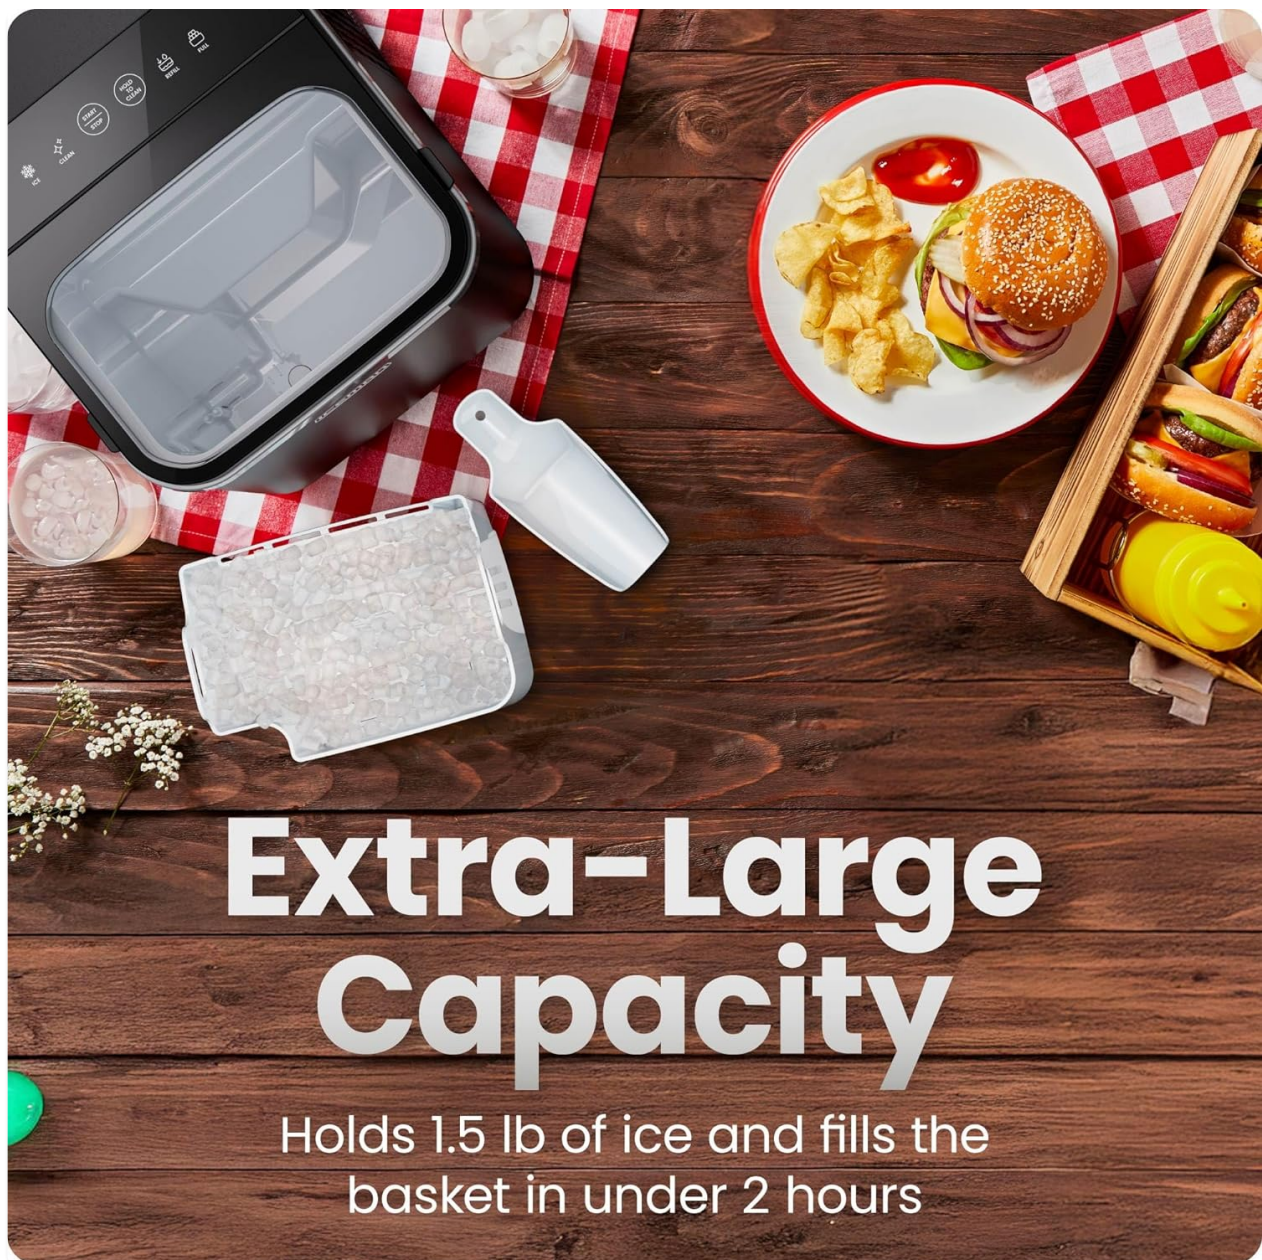


Figure 3: Ice Basket and Scoop

5. SPECIFICATIONS

Feature	Specification
Brand	Iceman
Model Name	The Chewable Pebble
Product Dimensions	12"D x 8.9"W x 12.1"H
Capacity	21.2 Pounds (Water)
Wattage	140 watts
Voltage	120 Volts
Refrigerant	R600a
Ice Production per Day	26 Pounds

Material	Plastic
Item Weight	19.81 pounds
Item Model Number	RJ56-PB-V2



Figure 4: Product Dimensions

6. SETUP

1. **Unpack:** Carefully remove the ice maker from its packaging. Remove all packing materials, tape, and labels.
2. **Placement:** Place the unit on a flat, stable surface away from direct sunlight and heat sources. Ensure there is at least 5 inches of space around the unit for proper ventilation.
3. **Initial Cleaning:** Before first use, it is recommended to clean the unit. Refer to the 'Maintenance & Cleaning' section for instructions on using the self-clean function.
4. **Fill Water Reservoir:** Open the top lid and remove the ice basket. Fill the water reservoir with potable water up to the 'MAX' fill line. Do not overfill.

Video 1: Initial setup and water filling demonstration.

7. OPERATING INSTRUCTIONS

1. **Power On:** Plug the ice maker into a grounded electrical outlet. The 'ICE' indicator light will flash.
2. **Select Ice Making Mode:** The control panel features 'LARGE' and 'SMALL' buttons. Press the 'SELECT' button to toggle between these modes. While this model produces pebble ice, these options may adjust the ice-making cycle for slight variations in ice consistency.
3. **Start Ice Production:** Press the 'START/STOP' button to begin the ice-making cycle. The 'ICE' indicator light will illuminate steadily. The first batch of pebble ice can be produced in as little as 8 minutes.
4. **Ice Collection:** As ice is produced, it will drop into the removable ice basket. The 'FULL' indicator light will illuminate when the ice basket is full.
5. **Refill Water:** If the water level in the reservoir is low, the 'REFILL' indicator light will illuminate. Add more potable water to continue ice production.



Chewable Pebble Ice

Produces ice quickly and cools drink
faster than larger ice cubes

Figure 5: Chewable Pebble Ice

Your browser does not support the video tag.

Video 2: Demonstration of scooping ice from the machine.

8. MAINTENANCE & CLEANING

Regular cleaning ensures optimal performance and ice quality.

1. **Self-Cleaning Function:** The ice maker features a built-in self-clean function. To activate, press and hold the 'HOLD TO CLEAN' button for 3 seconds. The 'CLEAN' indicator light will illuminate, and the machine will run a cleaning cycle for approximately 5 minutes.
2. **Draining Water:** After the self-cleaning cycle or when performing manual cleaning, unplug the unit. Locate the drain plug at the bottom of the unit and remove it to drain the water.
3. **Manual Cleaning:** For thorough cleaning, remove the ice basket and clean it with mild soap and water. Wipe down the interior of the water reservoir and ice-making components with a soft cloth and a diluted solution of vinegar or a mild cleaning agent. Rinse thoroughly.
4. **Exterior Cleaning:** Wipe the exterior with a soft, damp cloth. Avoid abrasive cleaners.



Figure 6: Built-in Cleaning Function

Your browser does not support the video tag.

Video 3: Demonstration of the self-cleaning cycle.

9. TROUBLESHOOTING

Problem	Possible Cause	Solution
Ice maker not producing ice.	No water in reservoir.	Fill water reservoir to 'MAX' line.
	Unit not plugged in or power outage.	Ensure unit is properly plugged in and power is available.
	Ice basket is full.	Empty the ice basket.
Ice tastes unusual.	Unit needs cleaning.	Perform a self-cleaning cycle or manual cleaning. Use purified water.
Unit is noisy.	Normal operation sounds.	Some operational noise is normal for ice makers. Ensure unit is on a stable surface.

10. WARRANTY & SUPPORT

The Iceman Compact Pebble Ice Machine comes with a 1-year assurance provided by Iceman. For any support or warranty claims, please refer to the contact information provided with your purchase documentation or visit the official Iceman website.