

[Manuals.plus](#) /

› [Sekey](#) /

› Sekey 220L Foldable All-Terrain Wagon Instruction Manual

Sekey FW158

Sekey 220L Foldable All-Terrain Wagon Instruction Manual

Model: FW158 | Brand: Sekey

INTRODUCTION

This manual provides instructions for the safe and efficient use of your Sekey 220L Foldable All-Terrain Wagon. Please read all instructions carefully before assembly and operation. This wagon is designed for transporting items in various outdoor environments, including beaches, gardens, and sports events.



Figure 1: Sekey 220L Foldable All-Terrain Wagon (Black)

SAFETY INFORMATION

- Do not exceed the maximum weight capacity of **330 pounds (150 kg)**. Overloading can cause damage to the wagon and potential injury.
- Ensure all locking mechanisms are engaged before loading or moving the wagon.
- Always use the brakes when parking the wagon, especially on inclines.
- Keep hands and feet clear of moving parts, especially during folding and unfolding.
- This wagon is not intended for transporting people, especially children, unless specifically designed for such use.
- Distribute weight evenly within the wagon to maintain stability.
- Avoid sharp objects that could puncture the fabric.

SETUP INSTRUCTIONS

The Sekey 220L wagon requires no assembly and is designed for quick setup.

1. **Unfolding the Wagon:** Place the folded wagon on a flat, stable surface. Gently pull the sides of the wagon outwards until it fully expands.
2. **Securing the Base:** Once unfolded, press down firmly on the center of the wagon's base until it lies flat and is securely in place. This provides a stable bottom for carrying items.
3. **Adjusting the Handle:** The handle is adjustable. Pull the handle upwards to extend it to a comfortable height. Ensure the handle locks into position. The anti-drop feature helps keep the handle upright when not in use.

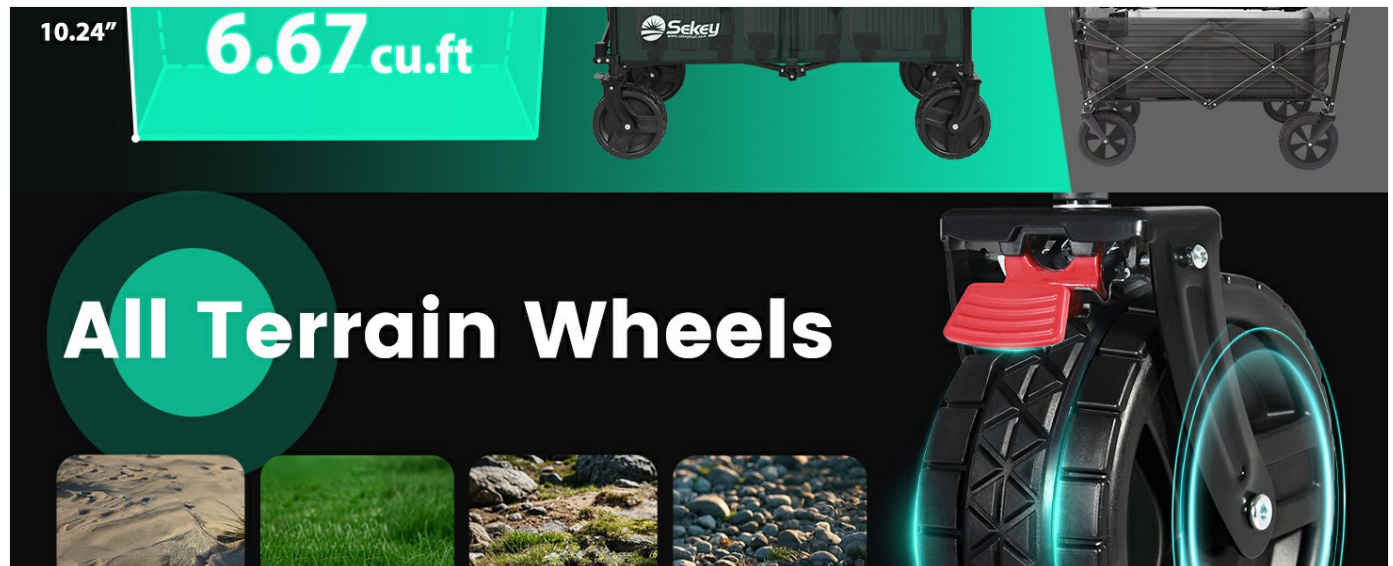


Figure 2: Wagon unfolding process

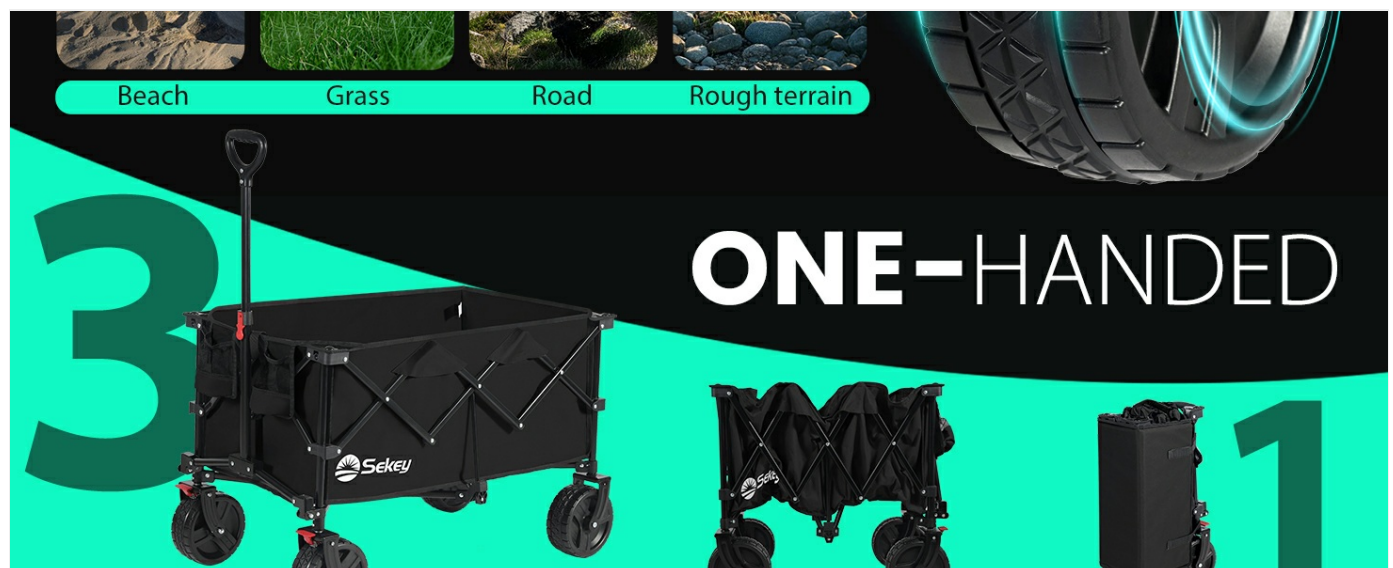


Figure 3: Anti-Drop Handle mechanism

OPERATING INSTRUCTIONS

- **Loading:** Place items evenly inside the wagon, ensuring not to exceed the 330 lbs weight limit. The internal dimensions are approximately 36.2" L x 22.4" W x 14.2" H. Utilize the two mesh cup holders for beverages.
- **Maneuvering:** The wagon features 360° swivel wheels and an adjustable handle, allowing for easy steering and tight turns. Pull or push the wagon as needed.
- **Using Brakes:** The wagon is equipped with built-in brakes on the wheels. To engage the brakes, press down on the red levers located near the wheels. To release, lift the levers. Always engage brakes when stationary.
- **All-Terrain Use:** The 8-inch diameter, 3-inch wide wheels with anti-slip rubber treads are designed to handle various

surfaces, including sand, grass, and rough terrain.



Heavy Duty & Ultra-stable structure

Figure 4: Wagon demonstrating heavy-duty capacity

WHY CHOOSE US?

OTHERS

	MAX-WIDTH TREAD 7.5CM	BARELY-THERE 2CM	
	NON-SLIP STRIP	SLIPPING	
	BRAKED FOR CONTROL	NO STOPPING	

Figure 5: All-terrain wheel with brake engaged

Anti-Drop Handle

The lock design is for better holding the handle when not in use so it won't drop.

Figure 6: Wagon maneuverability with 360-degree swivel wheels

FOLDING FOR STORAGE

To fold the wagon for compact storage:

1. Empty the wagon of all contents.
2. Lift the center pull tab located in the middle of the wagon's base.
3. As you lift the tab, the wagon will begin to collapse inwards. Continue to pull upwards until the wagon is fully folded.
4. Secure the folded wagon with any integrated straps or clips to prevent it from unfolding during transport or storage.

The folded dimensions are significantly reduced, allowing for convenient storage in a car boot, garage, or closet.



Figure 7: Folded wagon stored in a car trunk

MAINTENANCE

- **Cleaning:** The Oxford fabric can be spot cleaned with mild soap and water. Allow to air dry completely before folding and storing. Do not machine wash or tumble dry.

- **Wheels:** Periodically check the wheels for debris or wear. Clean as needed. The solid tires do not require inflation.
- **Frame:** Wipe the carbon steel frame with a damp cloth to remove dirt. Ensure the frame is dry to prevent rust.
- **Storage:** Store the wagon in a dry, cool place away from direct sunlight when not in use to prolong its lifespan.

TROUBLESHOOTING

- **Wagon not unfolding/folding smoothly:** Ensure the central pull tab is fully engaged/disengaged. Check for any obstructions in the folding mechanism.
- **Wheels not turning freely:** Inspect wheels for trapped debris (sand, small stones). Clean the wheel axles if necessary.
- **Wagon unstable:** Verify that the base is fully flattened and secured. Ensure weight is distributed evenly and not exceeding the maximum capacity.
- **Handle not staying upright:** Check if the handle's locking mechanism is properly engaged.

SPECIFICATIONS

Product Dimensions (Open)	38.97" D x 22.83" W x 42.52" H
Internal Storage Dimensions	36.2" L x 22.4" W x 14.2" H
Weight Capacity	330 pounds (150 kg)
Item Weight	11.73 kg
Materials	Oxford Fabric, Polyvinyl Chloride (PVC)
Frame Material	Carbon Steel
Handle Material	Carbon Steel
Number of Wheels	4
Tire Type	Solid

WARRANTY AND SUPPORT

Specific warranty details are not provided within this manual. For warranty information, product support, or to purchase replacement parts, please refer to the official Sekey website or contact their customer service directly. Keep your purchase receipt for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question