

DOMO DO1122FR

DOMO DO1122FR 4L Hot Air Fryer Instruction Manual

Model: DO1122FR | Brand: DOMO

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your DOMO DO1122FR 4L Hot Air Fryer. This appliance uses hot air circulation to cook food, offering a healthier alternative to traditional deep frying with up to 80% less fat. Please read these instructions carefully before first use and retain them for future reference.

2. IMPORTANT SAFETY INSTRUCTIONS

- Always ensure the appliance is placed on a stable, heat-resistant surface, away from walls or other appliances to allow adequate air circulation.
- Do not immerse the appliance, cord, or plug in water or any other liquid.
- Keep the appliance out of reach of children.
- Do not block the air inlet or outlet openings during operation.
- Unplug the appliance from the power outlet when not in use and before cleaning.
- Do not operate the appliance if the cord or plug is damaged, or if the appliance malfunctions or has been damaged in any manner.
- The exterior surfaces may become hot during use. Use oven mitts when handling hot components. The cool-touch handle is designed for safe handling of the basket.
- This appliance is equipped with overheat protection. If the internal temperature exceeds a safe limit, the appliance will automatically shut off.

3. PRODUCT OVERVIEW

Familiarize yourself with the components of your DOMO DO1122FR Hot Air Fryer:

1. Main Unit
2. Control Panel with Touch Screen
3. Frying Basket (with non-stick coating)
4. Basket Handle (cool-touch)

5. Air Inlet
6. Air Outlet Vents
7. Power Cord



Figure 1: Front view of the DOMO DO1122FR 4L Hot Air Fryer, showing the main unit, control panel, and the transparent window of the frying basket.

4. SETUP

1. **Unpacking:** Carefully remove all packaging materials and stickers from the appliance.
2. **Initial Cleaning:** Wipe the exterior of the appliance with a damp cloth. Wash the frying basket and pan with hot

water, dish soap, and a non-abrasive sponge. Rinse thoroughly and dry completely.

3. **Placement:** Place the air fryer on a stable, level, and heat-resistant surface. Ensure there is at least 10 cm (4 inches) of free space around the back and sides of the appliance for proper ventilation.
4. **First Use:** It is recommended to run the air fryer empty for about 10-15 minutes at 180°C (356°F) before first use to eliminate any manufacturing odors. A slight smell or smoke may occur, which is normal. Ensure good ventilation during this process.

5. OPERATING INSTRUCTIONS

5.1 Control Panel Overview



Figure 2: Close-up of the touch screen control panel, showing icons for pre-set programs, time/temperature adjustments, and start/stop button.

The DOMO DO1122FR features an intuitive touch screen control panel for easy operation:

- **Power Button:** Turns the appliance on/off.

- **Pre-set Program Icons:** Select from 6 pre-programmed cooking modes (e.g., fries, chicken, meat).
- **Temperature Control (+/-):** Adjust cooking temperature from 80°C to 220°C.
- **Time Control (+/-):** Adjust cooking time (up to 60 minutes).
- **Start/Stop Button:** Initiates or pauses the cooking process.
- **Shake Reminder:** An icon may illuminate to remind you to shake the basket for even cooking.
- **Interior Light:** Allows you to monitor cooking progress without opening the basket.

5.2 General Operation Steps

1. **Prepare Food:** Place your ingredients into the frying basket. Do not overfill the basket to ensure proper air circulation.
2. **Insert Basket:** Slide the frying basket firmly back into the main unit.
3. **Power On:** Plug the appliance into a grounded wall outlet. The display will light up.
4. **Set Time and Temperature:**
 - **Manual Setting:** Use the Temperature (+/-) and Time (+/-) buttons to set your desired cooking parameters.
 - **Pre-set Program:** Select one of the 6 pre-set program icons. The appliance will automatically set the recommended time and temperature for that food type. You can adjust these settings manually if needed.
5. **Start Cooking:** Press the Start/Stop button to begin the cooking process. The fan and heating element will activate.
6. **Monitor Cooking:** Use the interior light to check on your food without interrupting the cooking cycle.
7. **Shake Reminder:** For some foods, the appliance may beep and display a "SHAKE" icon to remind you to shake the basket for even cooking. Carefully pull out the basket, shake the contents, and reinsert it. The cooking will resume automatically.
8. **End of Cooking:** The appliance will beep when the set cooking time has elapsed and automatically shut off.
9. **Remove Food:** Carefully pull out the basket using the cool-touch handle. Place the basket on a heat-resistant surface. Empty the cooked food into a serving dish.
10. **Cool Down:** Allow the appliance to cool down completely before cleaning or storing.

6. COOKING PROGRAMS

The DOMO DO1122FR offers 6 pre-set programs for common dishes. These programs provide recommended time and temperature settings, which can be adjusted manually.

- **Fries:** Ideal for crispy French fries and potato wedges.
- **Chicken:** Suitable for chicken pieces, wings, or small whole chickens.
- **Meat:** For various cuts of meat, such as steaks or pork chops.
- **Fish:** Perfect for cooking fish fillets or smaller whole fish.
- **Quiche/Cake:** For baking small quiches, muffins, or cakes.
- **Snacks:** For quick preparation of snacks like spring rolls, chicken nuggets, or onion rings.



Figure 3: The air fryer in use, cooking crispy fries.



Figure 4: The air fryer preparing chicken drumsticks, demonstrating its versatility.

7. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your air fryer.

1. **Before Cleaning:** Always unplug the appliance and allow it to cool down completely before cleaning.
2. **Frying Basket and Pan:** The non-stick frying basket and pan are dishwasher safe, but hand washing with hot water, dish soap, and a non-abrasive sponge is recommended to preserve the non-stick coating. Do not use metal utensils or abrasive cleaning materials.
3. **Interior:** Wipe the interior with a damp cloth. For stubborn food residues, a soft brush can be used after soaking.
4. **Exterior:** Wipe the exterior of the appliance with a damp cloth. Do not use harsh chemicals or abrasive cleaners.
5. **Storage:** Ensure all parts are clean and dry before storing the appliance in a cool, dry place.

8. TROUBLESHOOTING

If you encounter issues with your air fryer, consult the following table before contacting support.

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet malfunction.	Ensure the power cord is securely plugged into a working outlet.
Food not cooked evenly.	Basket overloaded; food not shaken.	Do not overload the basket. Shake the basket halfway through cooking.
White smoke coming from appliance.	Grease residue from previous use; fatty food.	Clean the basket and pan thoroughly after each use. For fatty foods, ensure excess oil is drained.

Problem	Possible Cause	Solution
Food not crispy.	Too much moisture; insufficient cooking time/temperature.	Pat food dry before cooking. Increase cooking time or temperature slightly.

9. SPECIFICATIONS

Feature	Detail
Model Number	DO1122FR
Capacity	4 Liters
Power	1350 Watts
Voltage	220 Volts
Temperature Range	80°C - 220°C
Timer	Up to 60 minutes
Dimensions (L x W x H)	34.5 x 27 x 25.8 cm
Weight	4.8 Kilograms
Material	Plastic and Metal
Special Features	Touch screen, Interior light, Cool-touch handle, Overheat protection, 6 Pre-set programs







10. WARRANTY AND SUPPORT

This DOMO DO1122FR Hot Air Fryer comes with a 2-year availability of spare parts, as indicated by the manufacturer. For warranty claims, technical support, or spare parts inquiries, please contact your retailer or the manufacturer directly.

Manufacturer: Domo-elektro

For more information, you may visit the manufacturer's website:www.domo-elektro.be



<div data-bbox="118 91 311 353">  <p>DOMO</p> <p>DOMO534FR</p> <table border="0"> <tr><td>Handleiding</td><td>Deli-Fryer</td></tr> <tr><td>Quick-Guide</td><td>Deli-Fryer</td></tr> <tr><td>Gebruiksaanwijzing</td><td>Deli-Fryer</td></tr> <tr><td>Instructiesboekjelet</td><td>Deli-Fryer</td></tr> <tr><td>How and when to use</td><td>Deli-Fryer</td></tr> <tr><td>Manuale per l'uso</td><td>Deli-Fryer</td></tr> <tr><td>Manual para el uso</td><td>Manual de instrucciones de uso</td></tr> <tr><td>Manual en polski</td><td>Manual de instrucciones de uso</td></tr> </table> <p>PRODUCT OF LINEA I</p> </div>	Handleiding	Deli-Fryer	Quick-Guide	Deli-Fryer	Gebruiksaanwijzing	Deli-Fryer	Instructiesboekjelet	Deli-Fryer	How and when to use	Deli-Fryer	Manuale per l'uso	Deli-Fryer	Manual para el uso	Manual de instrucciones de uso	Manual en polski	Manual de instrucciones de uso	<p>DOMO DO534FR Deli-fryer Handleiding: Gebruik en Veiligheid</p> <p>Complete handleiding voor de DOMO DO534FR Deli-fryer. Leer hoe u dit veelzijdige keukenapparaat veilig en efficiënt gebruikt voor het bereiden van heerlijke maaltijden met behulp van de heteluchtfriteuse.</p>
Handleiding	Deli-Fryer																
Quick-Guide	Deli-Fryer																
Gebruiksaanwijzing	Deli-Fryer																
Instructiesboekjelet	Deli-Fryer																
How and when to use	Deli-Fryer																
Manuale per l'uso	Deli-Fryer																
Manual para el uso	Manual de instrucciones de uso																
Manual en polski	Manual de instrucciones de uso																
<div data-bbox="118 627 311 889">  <p>DOMO</p> <p>HANDLEIDING MODE D'EMPLOI GEBRUIKSAANWIJZING INSTRUCTION BOOKLET MANUAL DE INSTRUCCIONES MANUAL DE USO</p> <p>DELI FRYER HOT AIR FRYER TOP LIFT COOKING FRYER</p> <p>DO509FR</p> <p>PRODUCT OF LINEA I</p> </div>	<p>DOMO DO509FR Deli-Fryer Handleiding</p> <p>Ontdek de functies en het gebruik van de DOMO DO509FR Deli-Fryer. Deze handleiding biedt essentiële informatie over bediening, veiligheid, reiniging en kooktips voor optimale resultaten.</p>																
<div data-bbox="118 940 311 1202">  <p>DOMO</p> <p>DOMO534FR</p> <table border="0"> <tr><td>Handleiding</td><td>Deli-Fryer</td></tr> <tr><td>Quick-Guide</td><td>Deli-Fryer</td></tr> <tr><td>Gebruiksaanwijzing</td><td>Deli-Fryer</td></tr> <tr><td>Instructiesboekjelet</td><td>Deli-Fryer</td></tr> <tr><td>How and when to use</td><td>Deli-Fryer</td></tr> <tr><td>Manuale per l'uso</td><td>Deli-Fryer</td></tr> <tr><td>Manual para el uso</td><td>Manual de instrucciones de uso</td></tr> <tr><td>Manual en polski</td><td>Manual de instrucciones de uso</td></tr> </table> <p>PRODUCT OF LINEA I</p> </div>	Handleiding	Deli-Fryer	Quick-Guide	Deli-Fryer	Gebruiksaanwijzing	Deli-Fryer	Instructiesboekjelet	Deli-Fryer	How and when to use	Deli-Fryer	Manuale per l'uso	Deli-Fryer	Manual para el uso	Manual de instrucciones de uso	Manual en polski	Manual de instrucciones de uso	<p>DOMO DO534FR Deli-fryer Handleiding</p> <p>Gebruiksaanwijzing voor de DOMO DO534FR Deli-fryer. Bevat instructies voor veilig gebruik, onderhoud en de diverse functies van dit keukenapparaat.</p>
Handleiding	Deli-Fryer																
Quick-Guide	Deli-Fryer																
Gebruiksaanwijzing	Deli-Fryer																
Instructiesboekjelet	Deli-Fryer																
How and when to use	Deli-Fryer																
Manuale per l'uso	Deli-Fryer																
Manual para el uso	Manual de instrucciones de uso																
Manual en polski	Manual de instrucciones de uso																
<div data-bbox="118 1254 311 1516">  <p>DOMO</p> <p>DOMO1014FR</p> <table border="0"> <tr><td>Handleiding</td><td>Friteuse</td></tr> <tr><td>Quick-Guide</td><td>Friteuse</td></tr> <tr><td>Gebruiksaanwijzing</td><td>Friteuse</td></tr> <tr><td>Instructiesboekjelet</td><td>Friteuse</td></tr> <tr><td>How and when to use</td><td>Friteuse</td></tr> <tr><td>Manuale per l'uso</td><td>Friteuse</td></tr> <tr><td>Manual para el uso</td><td>Manual de instrucciones de uso</td></tr> <tr><td>Manual en polski</td><td>Manual de instrucciones de uso</td></tr> </table> <p>PRODUCT OF LINEA I</p> </div>	Handleiding	Friteuse	Quick-Guide	Friteuse	Gebruiksaanwijzing	Friteuse	Instructiesboekjelet	Friteuse	How and when to use	Friteuse	Manuale per l'uso	Friteuse	Manual para el uso	Manual de instrucciones de uso	Manual en polski	Manual de instrucciones de uso	<p>DOMO DO1014FR Friteuse: Gebruiks- en Veiligheidsinstructies</p> <p>Deze handleiding biedt uitgebreide instructies voor de veilige en effectieve bediening van de DOMO DO1014FR friteuse. Ontdek essentiële informatie over installatie, gebruik, onderhoud en veiligheidsrichtlijnen voor optimale prestaties.</p>
Handleiding	Friteuse																
Quick-Guide	Friteuse																
Gebruiksaanwijzing	Friteuse																
Instructiesboekjelet	Friteuse																
How and when to use	Friteuse																
Manuale per l'uso	Friteuse																
Manual para el uso	Manual de instrucciones de uso																
Manual en polski	Manual de instrucciones de uso																
<div data-bbox="118 1568 311 1816">  <p>DOMO</p> <p>DOMO1014FR</p> <p>Bowman Farm's Turkey Breast Cooking Instructions</p> </div>	<p>Bowman Farm's Turkey Breast Cooking Instructions Domo at Home</p> <p>Detailed instructions from Domo at Home for preparing Bowman Farm's Turkey Breast, including temperature, cooking time, resting, and basting tips for a delicious meal.</p>																
<div data-bbox="118 1865 311 2128">  <p>DOMO</p> <p>DOMO973T</p> <p>Broodrooster</p> <p>www.domo-elektro.nl</p> <p>PRODUCT OF LINEA I</p> </div>	<p>DOMO DO973T Broodrooster Handleiding: Gebruikersgids en Veiligheidsinstructies</p> <p>Vind gedetailleerde instructies en veiligheidstips voor de DOMO DO973T broodrooster. Leer hoe u dit keukenapparaat optimaal gebruikt en onderhoudt voor perfect geroosterd brood.</p>																

