

WENPZERAY D219-B

WENPZERAY D219-B Portable AM/FM/SW Radio with Bluetooth Speaker
User Manual

INTRODUCTION

Welcome to your new WENPZERAY D219-B portable radio. This manual provides essential information for the safe and efficient operation of your device. Please read it thoroughly before use and retain it for future reference.

SAFETY INFORMATION

- Do not expose the device to rain, moisture, or extreme temperatures.
- Avoid disassembling or modifying the radio, as this may void the warranty and pose safety risks.
- Keep the device away from strong magnetic fields.
- Use only the specified charging cable and power sources.
- Clean the device with a soft, dry cloth. Do not use liquid cleaners.

PACKAGE CONTENTS

Verify that all items are present in the package:

- WENPZERAY D219-B Portable Radio
- Type-C Charging Cable
- English User Manual (this document)

PRODUCT OVERVIEW

Familiarize yourself with the components and controls of your WENPZERAY D219-B radio.

Front and Side View



Image: Front view of the WENZERAY D219-B portable radio, showing the speaker grille, tuning dial, and band selector.



Image: Detailed view of the radio's side and top controls, including the FM/AM/SW/Bluetooth/MP3 switch, previous/pause/next buttons, 3.5mm headphone jack, and Type-C charging port.

- **Telescopic Antenna:** Extend for improved radio reception.
- **Speaker:** Audio output.
- **Tuning Dial:** Adjusts radio frequency.
- **Volume Control:** Adjusts audio output level.
- **Band Selector Switch:** Toggles between FM, AM, SW, Bluetooth, and MP3 modes.
- **Playback Controls:** Previous track, Play/Pause, Next track (for Bluetooth/MP3 modes).
- **3.5mm Headphone Jack:** For private listening.
- **Type-C Charging Port:** For charging the built-in battery.
- **USB Port:** For USB flash drive MP3 playback.
- **TF Card Slot:** For TF card MP3 playback.
- **Battery Compartment:** For optional UM-2 batteries.

SETUP

Powering the Device

The WENPZERAY D219-B offers flexible power options:

1. **Built-in Rechargeable Battery:** The radio has a built-in 1200mAh lithium-ion battery. Charge it using the provided Type-C USB cable connected to a 5V DC power adapter (not included) or a computer USB port. The charging indicator will illuminate during charging.
2. **DC 5V USB Power:** The radio can operate directly from a 5V DC USB power source using the Type-C cable.
3. **UM-2 Batteries (Not Included):** For extended portable use or in situations without access to USB power, insert two UM-2 (C cell) batteries into the battery compartment on the back of the radio. Ensure correct polarity.

Faster Bluetooth Connected Speakers

Play your favorite audio all the time



Image: Illustration of the radio's power options, showing the Type-C charging port and the compartment for two C-cell batteries.

Antenna Adjustment

For optimal FM and Shortwave (SW) reception, fully extend the telescopic antenna. Rotate the antenna 360 degrees and adjust its angle to achieve the clearest signal.

OPERATING INSTRUCTIONS

Radio Mode (AM/FM/SW)

1. **Power On:** Turn the volume knob clockwise to power on the radio.
2. **Select Band:** Use the band selector switch to choose between FM, AM, or SW.
3. **Tune to Station:** Rotate the tuning dial to scan for radio stations. The frequency scale will indicate the current band.
4. **Adjust Volume:** Use the volume knob to set your desired listening level.

FM AM SW 3 Band Retro Radio

There are always radio shows you like



Image: The WENPZERAY D219-B radio in use, illustrating its capability to receive various radio programs like music, talk shows, news, and baseball games.

Bluetooth Mode

1. **Switch to Bluetooth:** Move the band selector switch to the 'Bluetooth' position. The radio will indicate it is in pairing mode.
2. **Pairing:** On your mobile device, enable Bluetooth and search for available devices. Select 'WENPZERAY D219-B' to connect.
3. **Playback:** Once connected, you can play audio from your device through the radio's speaker. Use the playback control buttons on the radio or your connected device to manage music.

MP3 Playback (TF Card/USB)

1. **Insert Media:** Insert a TF card into the TF card slot or a USB flash drive into the USB port.
2. **Switch to MP3 Mode:** Move the band selector switch to the 'MP3' position. The radio will automatically detect and begin playing audio files from the inserted media.

3. **Playback Controls:** Use the previous, play/pause, and next buttons to control playback.

3.5mm Headphone Jack

Enjoy the happiness of radio programs alone



Image: The WENZERAY D219-B radio demonstrating MP3 playback capability via USB flash drive and TF card.

Headphone Use

For private listening, insert standard 3.5mm headphones into the headphone jack located on the side of the radio. The speaker output will automatically mute when headphones are connected.



Image: A person using the WENZPERAY D219-B radio with headphones, highlighting the 3.5mm headphone jack.

MAINTENANCE

Cleaning

Wipe the exterior of the radio with a soft, dry, lint-free cloth. Do not use abrasive cleaners, solvents, or chemical sprays, as these can damage the finish or internal components.

Storage

When not in use for extended periods, store the radio in a cool, dry place, away from direct sunlight and extreme temperatures. If using UM-2 batteries, remove them to prevent leakage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Battery depleted; UM-2 batteries inserted incorrectly or depleted.	Charge the built-in battery; check UM-2 battery polarity or replace them.
Poor radio reception	Antenna not extended; weak signal area; interference.	Fully extend and rotate the telescopic antenna; move to an area with better signal; avoid sources of electronic interference.
Bluetooth not connecting	Radio not in Bluetooth mode; device not in pairing mode; too far from radio.	Ensure radio is in Bluetooth mode; enable Bluetooth on your device and search for 'WENPZERAY D219-B'; move device closer to the radio.
MP3 playback not working	Incorrect mode selected; TF card/USB drive not inserted correctly or corrupted; unsupported file format.	Switch to MP3 mode; reinsert TF card/USB drive; ensure media contains MP3 files; try different media.

SPECIFICATIONS

Feature	Detail
Model Number	D219-B
Radio Bands	FM: 88-108MHz, AM: 530-1710KHz, SW: 5.6-22MHz
Connectivity	Bluetooth 5.0, USB, TF Card
Power Source	Built-in Rechargeable Lithium-Ion Battery (1200mAh), DC 5V USB, 2 x UM-2 (C cell) batteries (not included)
Audio Output	Integrated Speaker, 3.5mm Headphone Jack
Product Dimensions	6.69 x 2.08 x 3.85 inches (17 x 5.3 x 9.8 cm)
Item Weight	13.4 ounces (0.38 kg)
Included Components	English User Manual, Type-C Charging Cable

WARRANTY AND SUPPORT

WENPZERAY products are designed for reliability and performance. For any questions, technical assistance, or warranty claims, please contact your retailer or the manufacturer's customer support. Please refer to your purchase documentation for specific warranty terms and contact information.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DPZMJVS8>

More documents and user manuals: <https://manuals.plus/>