

Featou V8

Featou V8 9000A Jump Starter with Air Compressor User Manual

Model: V8 | Brand: Featou

1. INTRODUCTION

This manual provides detailed instructions for the safe and effective use of your Featou V8 9000A Jump Starter with Air Compressor. This multi-functional device is designed to jump-start vehicles, inflate tires and other inflatables, and serve as a portable power bank and emergency light source. Please read this manual thoroughly before operation and retain it for future reference.

2. SAFETY INFORMATION

Always observe the following safety precautions to prevent injury or damage to the device and vehicle:

- Ensure proper ventilation when operating the jump starter.
- Do not connect the positive and negative clamps together.
- Avoid contact with battery acid. Wear protective eyewear and gloves.
- Keep the device away from children.
- Do not expose the device to extreme temperatures or moisture.
- Disconnect the jump starter from the vehicle battery immediately after starting the engine.
- Limit continuous use of the air compressor to 10 minutes to prevent overheating.

3. PACKAGE CONTENTS

Verify that all items are present in your package:

- 1 x Featou V8 Portable Jump Starter
- 1 x Smart Jump Start Cable
- 1 x Tire Inflator Air Compressor with 4 Nozzles
- 1 x Air Blower/Deflator Pump with 4 Nozzles
- 1 x EVA Storage Bag for Jumper Box

MULTI-SCENE TIRE INFLATOR

WITH TPMS & AUTO-STOP & INFLATE HASSLE-FREE



Car

Adjustable Range:
0 - 3.5 BAR



Bicycle

Adjustable Range:
30 - 65 PSI



Ball

Adjustable Range:
4 - 16 PSI



Air Pad

Adjustable Range:
3 - 150 PSI

Image: All components of the Featou V8 Jump Starter kit, including the main unit, jumper cables, air hoses, nozzles, and EVA storage case.

4. PRODUCT OVERVIEW

The Featou V8 combines multiple essential automotive and outdoor tools into one compact device. It features a large digital display for easy monitoring and control.

EVERYTHING YOU GET, ON THE GO



Image: The 3.3-inch smart display showing real-time voltage monitoring, intuitive battery level, and multiple inflation modes.

5. SETUP

Before first use, fully charge the Featou V8 unit.

5.1 Charging the Device

1. Connect the provided USB-C charging cable to the USB-C IN port on the device.
2. Connect the other end of the cable to a suitable USB power adapter (not included).
3. The display will indicate charging status. Charge until the battery indicator shows full.

6. OPERATING INSTRUCTIONS

6.1 Jump Starting a Vehicle

The Featou V8 can jump-start 12V vehicles (All Gas/14L Diesel) with a 9000A peak output. It includes a 'FORCE

START' function for extreme low temperatures or faulty power situations.

1. Ensure the jump starter is sufficiently charged.
2. Insert the smart jumper cable into the jump starter's dedicated port.
3. Connect the red clamp to the vehicle's positive (+) battery terminal.
4. Connect the black clamp to the vehicle's negative (-) battery terminal or a solid ground point on the engine block.
5. The indicator light on the smart cable will turn green when connected correctly. If it's red, check connections.
6. Start your vehicle's engine within 30 seconds.
7. Once the engine starts, immediately remove the clamps from the vehicle battery, then disconnect the smart cable from the jump starter.



Image: Visual steps for connecting the jump starter to a car battery and starting the engine.

6.2 Tire Inflation (Air Compressor)

The 150PSI cordless air compressor can inflate tires rapidly and features auto-shutoff.

1. Connect the air hose to the inflation port on the device.
2. Attach the air hose nozzle securely to the tire valve stem.
3. Turn on the device. Use the 'M' mode button to select the desired vehicle type (car, motorcycle, bicycle) or a custom pressure setting.
4. Adjust the target pressure using the '+' and '-' buttons. The 3.3" LCD screen will display the current and target pressure.
5. Press the power button to begin inflation. The compressor will automatically stop when the target pressure is reached.
6. Disconnect the air hose from the tire valve and the device.

Smart-Select 4 Pressure Presets - More Precise Than Standard Inflators



Image: The Featou V8 unit connected to a car tire, displaying real-time pressure during inflation.

6.3 Air Blower/Deflator Function

This unique function allows for inflation and deflation of air mattresses, boats, pools, and vacuum storage bags.

1. Identify the appropriate blower nozzle from the included set.
2. For inflation, connect the large diameter hose to the 'Inflate' port on the device and attach the nozzle to the inflatable item.
3. For deflation, connect the large diameter hose to the 'Deflate' port on the device and attach the nozzle to the inflatable item.
4. Turn on the device and activate the blower function.

74WH PORTABLE POWER BANK

PD30W Quickly Charge Your Devices in Less Time



USB-C IN (18W)
5V/2A 9V/2A

USB-C OUT (PD 30W MAX)
5V/3A 9V/3A 12V/2.5A

USB OUT (22.5W)
5V/3A 9V/2.5A 12V/1.5A

Image: The Featou V8 unit connected with its large hose to an air mattress for inflation, demonstrating its blower function.

Video: Demonstration of the Featou V8's air inflator and deflator compressor functions for various items.

6.4 Portable Power Bank

The device features a 20000mAh high-capacity battery with 30W PD output for charging electronic devices.

1. Open the protective cover on the side of the device to access the USB ports.
2. Connect your electronic device (phone, tablet, etc.) to the USB-C OUT (PD 30W MAX) or USB OUT (22.5W) port using an appropriate charging cable.
3. The device will automatically begin charging.

HIGH-LUMEN LED LIGHT

- FOR WORK, RELAX & DAILY USE



Image: The Featou V8 unit acting as a power bank, charging a smartphone and earbuds simultaneously.

6.5 LED Light Functions

The integrated high-lumen LED light offers three modes for emergency and general use.

1. Press the light button once for constant lighting mode.
2. Press again for flashing mode (strobe).
3. Press a third time for SOS mode.
4. Press and hold the button to turn off the light.

USER-FRIENDLY

- 3.3-INCH SMART DISPLAY



Image: The Featou V8 unit with its LED light active, illustrating the different lighting modes available.

7. MAINTENANCE

- Store the device in its EVA storage case in a cool, dry place when not in use.
- Recharge the device every 3-6 months to maintain battery health, even if not used.
- Clean the exterior with a soft, damp cloth. Do not use harsh chemicals or abrasives.
- Inspect cables and connectors for damage before each use.

8. TROUBLESHOOTING

8.1 Vehicle Not Starting

- Ensure the jump starter is fully charged.
- Check that the smart cable clamps are securely connected to the correct battery terminals (red to positive, black to negative/ground).

- Verify the smart cable indicator light is green. If red, check for reverse polarity or short circuit.
- If the battery is deeply discharged, use the 'FORCE START' function (refer to device instructions for specific activation).

8.2 Air Compressor Not Inflating

- Ensure the air hose is securely connected to both the device and the tire valve.
- Check that the desired pressure is set correctly and the device is powered on.
- Verify the device battery level.
- If the compressor runs but no air is delivered, check for blockages in the hose or nozzle.

9. SPECIFICATIONS

Feature	Specification
Brand	Featou
Model	V8
Peak Output Current	9000 Amps
Amperage	9000 Amps
Product Dimensions	2.28"D x 4.4"W x 9.29"H
Item Weight	2.47 Pounds
Battery Type	4 Lithium Ion batteries (included)
Max Air Compressor Pressure	150 PSI
USB-C Output	PD 30W Max (5V/3A, 9V/3A, 12V/2.5A)
USB Output	22.5W (5V/3A, 9V/2.5A, 12V/1.5A)

10. WARRANTY AND SUPPORT

Your Featou V8 Jump Starter comes with a 30-day money-back guarantee and dedicated after-sales support. The product is also backed by solutions for quality problems for up to 24 months from the date of purchase. For technical assistance or warranty claims, please contact Featou customer service.