

[manuals.plus](#) /

› [DreamSky](#) /

› [DreamSky Wooden Digital Alarm Clock \(Model DS2208\) User Manual](#)

## DreamSky DS2208

# DreamSky Wooden Digital Alarm Clock (Model DS2208) User Manual

Your guide to setting up and operating your new DreamSky alarm clock.

## 1. INTRODUCTION

---

Thank you for choosing the DreamSky Wooden Digital Alarm Clock, Model DS2208. This clock combines modern design with essential features to enhance your daily routine. With its large, easy-to-read display, adjustable brightness, and customizable alarm volume, it is designed for convenience and reliability. Please read this manual carefully to ensure proper setup and operation.



Figure 1: DreamSky Wooden Digital Alarm Clock (Red)

## 2. PRODUCT FEATURES

---

- **Large Digital Display:** Features 1.8-inch bold numbers for easy readability across the room.
- **6 Dimmable Brightness Levels:** Adjust the display brightness from off to bright, suitable for day and night use.
- **5 Adjustable Alarm Volume Levels:** Customize alarm volume from 70dB to 105dB, catering to both light and heavy sleepers.
- **Snooze Function:** Provides an extra 9 minutes of rest after the alarm sounds.
- **Plug-in Power with Battery Backup:** Primarily powered by an included adapter, with battery backup (batteries not included) to maintain time settings and trigger alarms during power outages.
- **DST and 12/24 Hour Format:** Easy one-click switching for Daylight Saving Time and between 12-hour and 24-hour time formats.
- **Modern Wooden Design:** An elegant and space-saving design that complements various home and office decors.

## 3. PACKAGE CONTENTS

Please check the package for the following items:

- DreamSky Wooden Digital Alarm Clock (Model DS2208)
- 5V/1.2A Power Adapter
- User Manual (this document)

## 4. SETUP INSTRUCTIONS

### 4.1 Powering the Clock

The DreamSky alarm clock is designed to be continuously powered by the included 5V/1.2A power adapter. For stable operation and continuous display, always keep the clock plugged into a power outlet.



Figure 2: Clock powered by electricity.

### 4.2 Battery Backup

For backup during power outages, insert 2 AAA batteries (not supplied) into the battery compartment located on the back of the clock. The battery backup ensures that alarm settings are saved and the alarm will still function, though the display will not be lit to conserve power.



Figure 3: Battery backup functionality.

### 4.3 Controls Overview

The control buttons are located on the back panel of the clock. Familiarize yourself with these buttons for easy operation:



Figure 4: Rear panel controls and power input.

## 4.4 Setting the Time

1. Press and hold the **TIME SET** button for 2 seconds to enter time setting mode. The hour digits will flash.
2. Use the + or - buttons to adjust the hour.
3. Press **TIME SET** again to confirm the hour and move to minute setting. The minute digits will flash.
4. Use the + or - buttons to adjust the minutes.
5. Press **TIME SET** to save the time and exit setting mode.

## 4.5 Setting the Alarm

1. Press and hold the **ALARM SET** button for 2 seconds. The alarm hour digits will flash.
2. Use the + or - buttons to adjust the alarm hour.
3. Press **ALARM SET** again to confirm the alarm hour and move to alarm minute setting. The minute digits will flash.
4. Use the + or - buttons to adjust the alarm minutes.
5. Press **ALARM SET** to save the alarm time. The alarm icon will appear on the display, indicating the alarm is active.

## 4.6 12/24 Hour Format

To switch between 12-hour (AM/PM) and 24-hour (military) time formats, simply press the **12/24HR** button.



Figure 5: Manual DST and 12/24 Hour Time Switch.

#### 4.7 Daylight Saving Time (DST)

To activate or deactivate Daylight Saving Time, press the **DST ON/OFF** button. The display will adjust by one hour forward or backward, and a 'DST' indicator will appear or disappear.

#### 4.8 Adjusting Display Brightness

The clock offers 6 levels of display brightness (L1 to L5, plus OFF). Press the **DIMMER** button repeatedly to cycle through the brightness levels. Select a level that is comfortable for your environment, from bright during the day to dim or off at night.

# Adjustable Display Brightness

Sleep well at night and see clear at day.

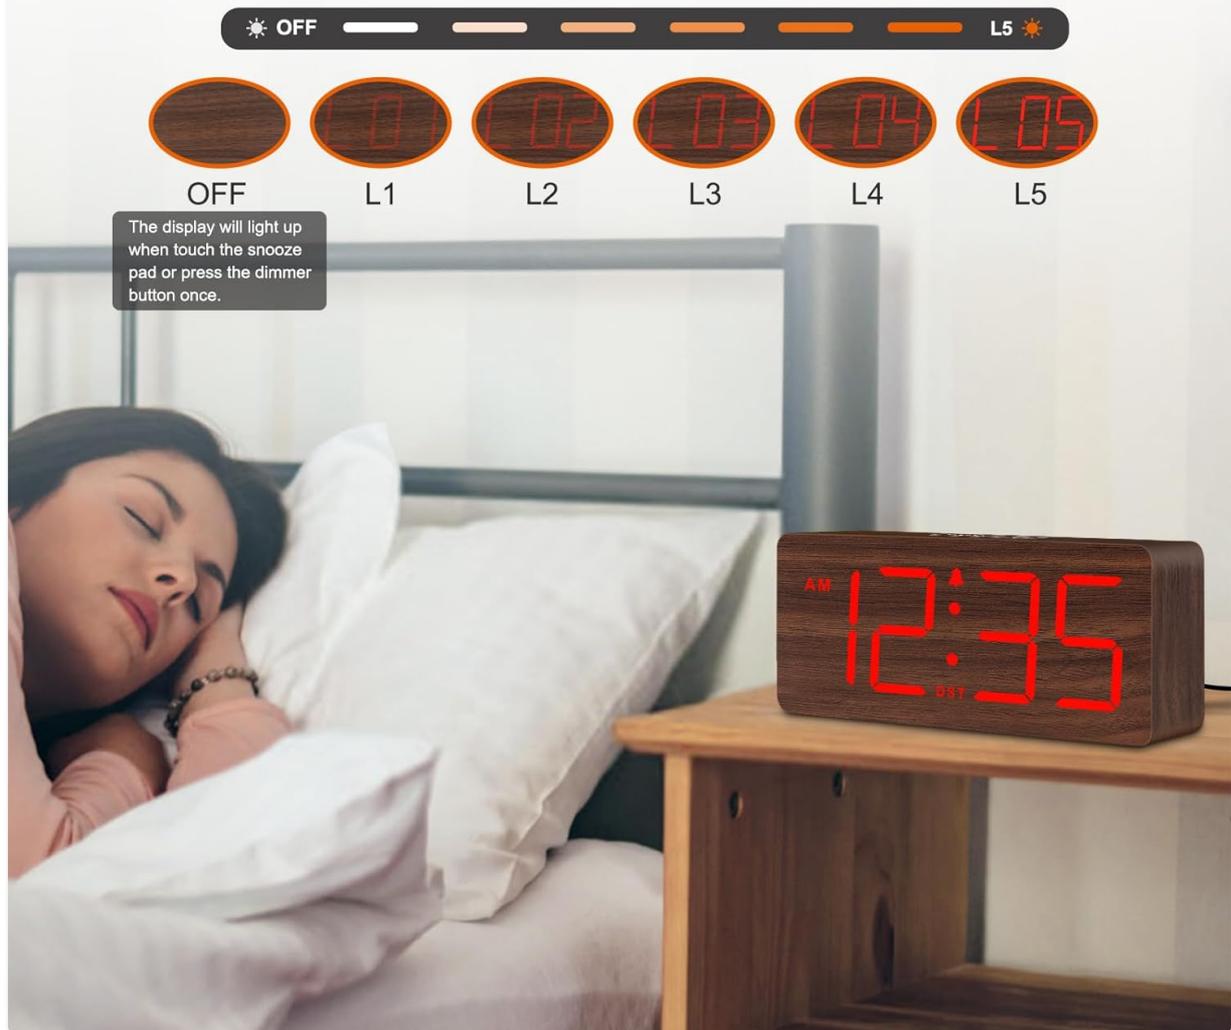


Figure 6: Adjustable Display Brightness Levels.

## 4.9 Adjusting Alarm Volume

The alarm volume can be adjusted to 5 different levels (V1 to V5). Use the **VOL+** and **VOL-** buttons to set your preferred alarm volume. This feature is ideal for heavy sleepers who need a louder alarm or for light sleepers who prefer a softer tone.

# 5 Level Alarm Volume

No worry to be shocked by the loud alarm or sound too low to hear.



Figure 7: 5 Adjustable Alarm Volume Levels.

## 5. OPERATING INSTRUCTIONS

### 5.1 Snooze Function

When the alarm sounds, press the large **SNOOZE** button on the top of the clock to temporarily silence the alarm for 9 minutes. The alarm will sound again after the snooze period ends.

### 5.2 Turning Alarm On/Off

To turn the alarm on or off, press the **ON/OFF** button. The alarm icon on the display will indicate whether the alarm is currently active.

## 6. MAINTENANCE

To maintain your DreamSky Wooden Digital Alarm Clock:

- Wipe the clock with a soft, dry cloth.
- Avoid using abrasive cleaners or solvents.

- Keep the clock away from direct sunlight, extreme temperatures, and moisture.

## 7. TROUBLESHOOTING

---

- **Display not lit:** Ensure the power adapter is securely plugged into both the clock and a working power outlet. If using battery backup, the display will not light up to conserve power.
- **Alarm not sounding:** Check if the alarm is set and the alarm icon is visible on the display. Ensure the alarm volume is not set to the lowest level (V1) or muted.
- **Incorrect time:** Re-enter time setting mode and adjust the time as described in Section 4.4. If using battery backup, ensure batteries are fresh.

## 8. SPECIFICATIONS

---

Feature	Detail
Brand	DreamSky
Model Number	DS2208
Color	Red (Plug-in)
Display Type	Digital
Product Dimensions	6.1"W x 2.8"H
Power Source	Corded Electric (5V/1.2A adapter included)
Battery Backup	2 x AAA batteries (not included)
Material	Wood
Item Weight	10.2 ounces

## 9. OFFICIAL PRODUCT VIDEO

---

Your browser does not support the video tag.

**Video 1:** An overview of the DreamSky Wooden Digital Clock, demonstrating its features and aesthetic appeal. This video is provided by DreamSky Direct.

## 10. WARRANTY AND SUPPORT

---

DreamSky products are designed for durability and performance. For any questions, technical support, or warranty inquiries, please contact DreamSky customer support at: [info@dreamsky4u.com](mailto:info@dreamsky4u.com).